

LED FRONT AND REAR SIDEMARKER KIT

(2024-2025+ MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Front Sidemarker
- (1) RH Front Sidemarker
- (1) LH Rear Sidemarker
- (1) RH Rear Sidemarker

TOOLS REQUIRED

- 7mm Socket
- Ratchet w/ Extension
- Panel Removal Tool
- Needle Nose Pliers
- Floor Jack & Jack Stands


SKU # 464385 / 464386
Edited: 02/19/2025

STEP 1
[FRONT]



Safely lift and support the front of the vehicle to access the wheel well liner. Turn the wheel, and remove the (5) plastic push clips along the outside of the fender liner.

STEP 2
[FRONT]

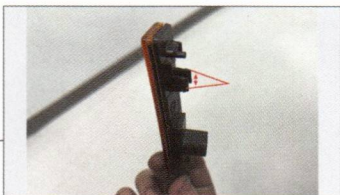

Pull the fender liner away to reveal the vehicle sidemarker assembly. Unplug the electrical connector by pressing the connector tab, and pull the connector away.

Using two fingers or needle nose pliers, press the retaining tabs together on the sidemarker while pressing the sidemarker towards the outside of the bumper.

STEP 5
[REAR]



Remove (1) 7mm screw from the upper corner of the rear bumper on each side of the vehicle. Remove (2) 7mm screws from the bottom of the rear bumper on each side of the vehicle.

Pull the top edge of the bumper from the quarter panel retaining bracket. This will allow additional working space around the sidemarker lamp.


STEP 6
[REAR]



Unplug the electrical connector by pressing the connector tab, and pull the connector away.

Using two fingers or needle nose pliers, press the retaining tabs together on the sidemarker while pressing the sidemarker towards the outside of the bumper.

STEP 3
[FRONT]

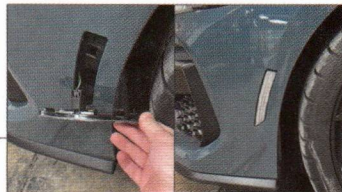

Plug the new sidemarker harness into the vehicle wiring harness. Then, fit the bottom of the sidemarker into the bumper, and then press the sidemarker into the bumper to engage the retaining tabs. Re-secure the wheel well liner using the original plastic push clips.

Repeat steps 1-3 for the opposite side of the vehicle.

STEP 4
[REAR]



Safely lift and support the rear of the vehicle to access the wheel well liner.

Remove (1) plastic push clip and (2) 7mm screws from the wheel well liner. Pull the fender liner away to reveal the vehicle sidemarker assembly.

STEP 7
[REAR]



Plug the new sidemarker harness into the vehicle wiring harness. Then, fit the bottom of the sidemarker into the bumper, and then press the sidemarker into the bumper to engage the retaining tabs. Re-assemble the bumper and wheel well liner using the original hardware.

Repeat steps 4-7 for the opposite side of the vehicle.

STEP 8



Installation is now complete.