



S650 STYLE LED HEADLIGHTS

(2015-2017 MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Headlight
- (1) RH Headlight
- (2) Scotchlok Connectors

TOOLS REQUIRED

5.5mm, 7mm, 8mm, 10mm,
13mm Sockets
Panel Removal Tool
Phillips Screwdriver
Flat Head Screwdriver

SKU # 465034

STEP 1




Remove (8) plastic push clips from the upper radiator cover. Remove the cover from the vehicle.

STEP 2



Remove (6) 8mm bolts and (2) 5.5mm bolts from the top of the bumper.

STEP 3

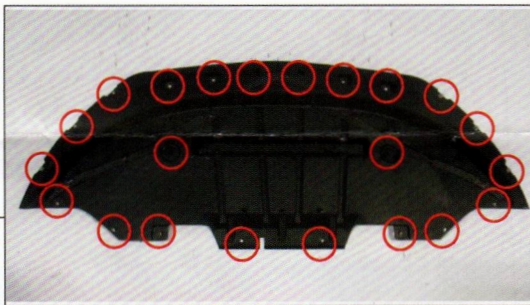


Lift and support the front of the vehicle using a jack & jack stands. Remove (22) fasteners from the lower bumper splash shield.

STEP 4




Remove (3) plastic push clips from the inner fender liner. Turn the wheel to allow additional working room if necessary. Repeat this procedure to the opposite side.

STEP 5

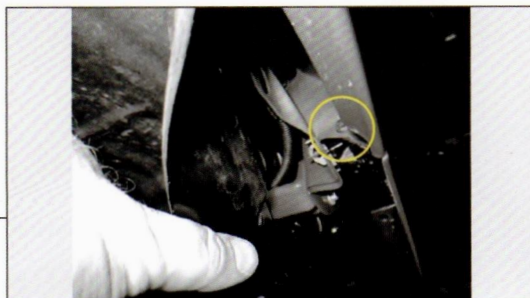

Fold back the inner fender liner to gain access to the back-side of the bumper. Remove (1) 7mm bolt securing the front bumper to the fender.

STEP 6

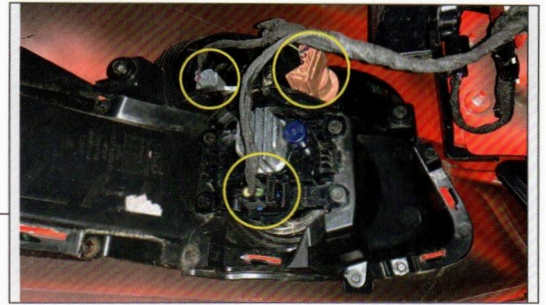

Unplug (3) electrical connectors from the lower bumper lighting assembly.

Repeat this procedure to the opposite side of the vehicle.

STEP 7




Firmly pull the corner of the bumper away from the fender to dislodge the holding clips. Lift upwards on the upper portion of the bumper, then remove the bumper from the vehicle.

STEP 8



Remove (2) 10mm bolts and (1) 13mm bolt from the headlight assembly. Unplug the (1) electrical connector from the back-side of the light housing. Repeat this procedure to the opposite side.

STEP 9

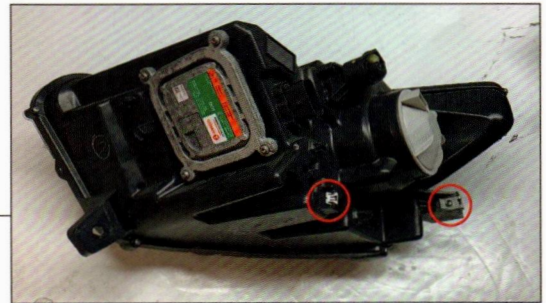

Remove (1) metal retaining clip, and (1) threaded clip from the original headlight assembly. Transfer the previously removed components to the new headlight assembly in the same location.

STEP 10



Plug in and install the headlight assembly into the vehicle re-using original hardware. Splice the yellow wire lead into the vehicle parking lamp circuit if desired using the diagram below, this will change the DRL lights from white to amber.
LH Turn Signal Connector - Green/Orange RH Turn Signal Connector - Brown/Yellow
Re-assemble the vehicle following steps 1-8 in reverse order.
Installation is now complete.