



CARBON FIBER REPLACEMENT DECKLID PANEL

(2015-2023 MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Decklid Panel
- (6) M4 x 12mm Bolts

TOOLS REQUIRED

- 5.5mm, 7mm Sockets
- 1/4" Drive Ratchet
- Plastic Pry Tool
- Masking Tape
- Exterior Detailer
- Microfiber Cloth

SKU # 465035



STEP 9


Installation is now complete.



STEP 3

Apply masking tape to the trunk panel above the decklid panel to protect the paint. Using a plastic pry tool, pry the top of the decklid panel downwards away from the trunk to release the (4) metal retaining clips securing the decklid panel to the trunk.


If the metal retaining clips remain in the vehicle trunk, carefully remove the clips from the trunk panel using a pry tool.

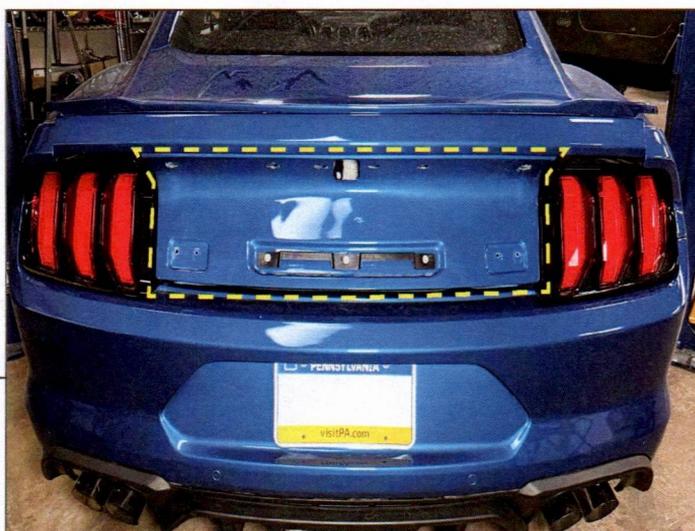

STEP 4

With the decklid panel removed, unplug the camera from the vehicle harness. Clean the decklid panel mounting surface of the trunk using exterior detailer and a microfiber cloth.

Place the original decklid panel and the new decklid panel on a soft workable surface.

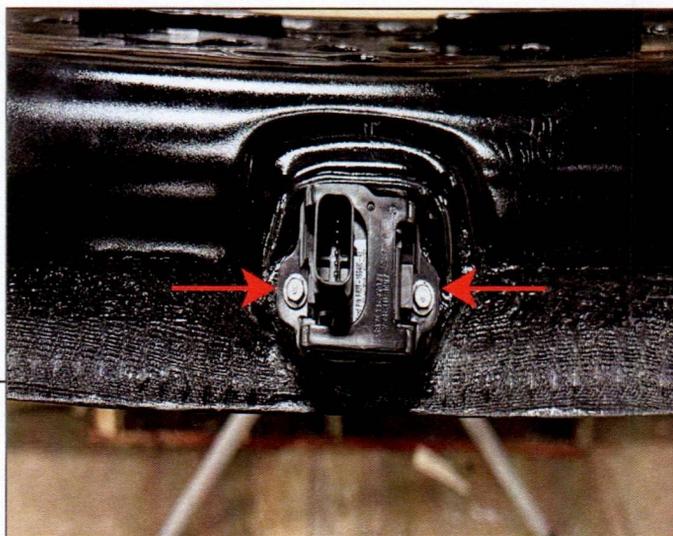

STEP 5

Remove (2) 5.5mm screws from the camera mounting bracket. Transfer the camera and bracket to the new decklid panel in the same orientation as removed from the original decklid panel. Ensure camera is properly seated in the decklid panel. Secure the camera into place using the included (4) M4 x 12mm bolts.

Note: It is important to tighten the screws until the camera is secure, over-tightening may cause screw boss damage.



STEP 6

Test fit the decklid panel to the vehicle, and verify the top edge of the decklid panel is flush to the top edge of the trunk, while ensuring the (4) lower bolt holes align to the trunk holes.

For a tighter fit to the top of the trunk if necessary, transfer the (4) metal retaining clips from the original decklid panel to the new decklid panel.



STEP 7

Fit the decklid panel to the trunk, and plug the vehicle camera harness into the camera. When fitting the decklid panel, ensure the center lower portion of the panel hooks under the trunk panel hooks.

Fit the decklid panel to the trunk panel. If transferring the metal clips, firmly press the decklid panel upwards to engage the clips into the trunk.



STEP 8

Secure the bottom of the decklid panel using the included (4) M4 x 12mm bolts. It is important to thread the bolts into place, and tighten only until snug. Over-tightening the bolts may damage the screw boss.

With the bolts secured, re-install the vehicle bolt hole trim panels into place.

Note: Some manipulation of the decklid panel may be necessary to align the screw holes to the vehicle trunk holes.

STEP 1



Open the vehicle trunk. Locate and remove (2) plastic trim panels from the bottom of the trunk using a plastic pry tool.

STEP 2



Remove (4) 7mm screws from the bottom of the decklid panel.