



GT500 STYLE REAR SPOILER WITH WICKER BILL ADD-ON

(2024+ MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Rear Spoiler
- (1) Wicker Bill Add-On Panel
- (1) LH Die Cut Adhesive
- (1) RH Die Cut Adhesive
- (1) Center Die Cut Adhesive
- (2) M6x1.00 16mm Flange Bolts
- (2) M6 Flat washers
- (2) Adhesion Promoter
- (2) Alcohol Wipes
- (4) Phillips Screws(for wicker Bill)
- (4) Foam Washers
- (1) Drill Template
- (2) Center Clips

TOOLS REQUIRED

- 10mm Socket
- T-15 Torx Socket
- Ratchet
- Panel Removal Tool
- Phillips Head Screwdriver
- Masking Tape
- Exterior Detailer
- Microfiber Cloth
- Drill & Drill Bits
- Razor Knife (Optional)

SKU # 465872
Edited: 06/04/2025

STEP 1



Open the trunk. Remove (2) rubber grommets from each end of the trunk lid. Remove (2) 10mm bolts from the under-side of the vehicle spoiler.

Vehicles without OEM rear spoiler: Skip to Step 4.

STEP 2



Using a plastic pry tool and a heat gun, heat the spoiler edges to loosen the adhesive and gently pry upwards to disengage the spoiler tape adhesive from the trunk lid.

STEP 3




Clean the vehicle trunk lid using exterior detailer and a microfiber cloth.

STEP 4



Vehicles without OEM rear spoiler: Drill the holes utilizing the included drilling template using a 5/16" drill bit. Expand the holes to allow for additional adjustment, if necessary.

STEP 5

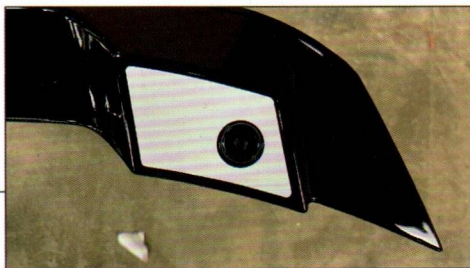

Clean the base of the spoiler using the included prep pads. Then, install the double sided tape to the spoiler. Repeat this step for all remaining die-cut double sided tape pads.

STEP 6



Fit the included (2) plastic clips onto the bottom of the spoiler by sliding into place. The OEM clips can be reused from the original rear spoiler, if necessary.

STEP 7




Test fit the spoiler to the vehicle to familiarize fitment before removing the double sided tape backing. Clean the trunk using the included (2) alcohol prep pads, followed by (2) adhesion promoter prep pads. Ensure each prep pad has dried before proceeding with the next prep pad.

STEP 8



Once familiar with fitment, peel the tape backing from the double sided tape, and align the spoiler to the trunk holes. Secure the spoiler on each end using the included M6 hardware. The center clips will secure into the trunk holes.

STEP 9

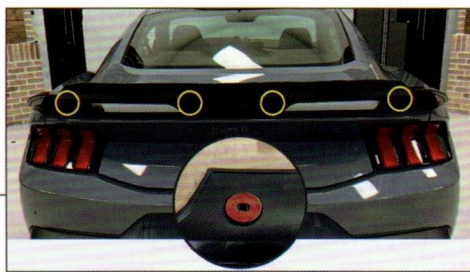

Test fit the wicker panel to the mounted rear spoiler, and center into place. Use a marker to mark the (4) mounting screw holes. Then, drill the pilot holes using a 1/8" drill bit.

Adhere the included round adhesive pads to the bottom of the wicker panel.

STEP 10



Peel the tape backing from the round adhesive pads, and then secure the wicker panel to the spoiler using (4) Phillips screws into the previously drilled pilot holes. Tighten until secure, do not over-tighten.

Re-install the trunk grommets, and close the trunk. Installation is now complete.