

# ***SPEEDFORM***

---

## **DECKLID PANEL**

(2024+ MUSTANG)

---

### INSTALLATION INSTRUCTIONS

#### CONTENTS

---

- (1) Decklid Panel
- (2) Alcohol Prep Pads
- (2) Adhesion Promoter Prep Pads

#### TOOLS REQUIRED


---

- Masking Tape
- Plastic Pry Tool
- Heat Gun
- Adhesive Remover
- Exterior Detailer
- Microfiber Cloth

SKU # 465873  
Edited: 08/01/2024

## ***SPEEDFORM***

---

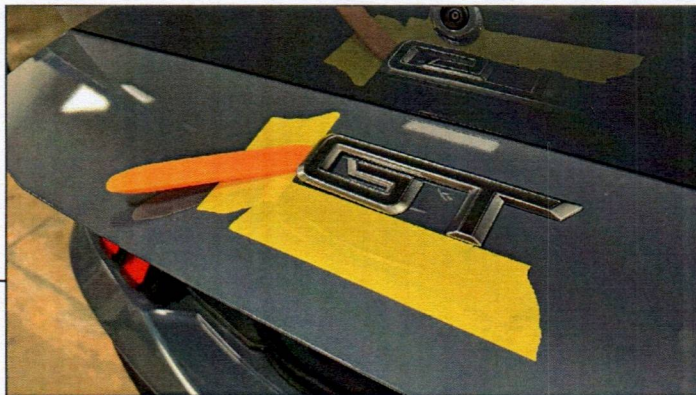

---

### **STEP 1**

Place masking tape around the perimeter of the decklid emblem. Use a heat gun and heat the rear emblem to loosen the adhesive. Use a plastic pry tool to lift the emblem from the decklid.



---


### **STEP 2**

Use adhesive remover to remove any remaining tape from the original emblem. Then, clean the entire decklid using exterior detailer and a microfiber cloth.

Before removing the double sided tape, test fit the decklid panel to the vehicle to familiarize fitment.

# ***SPEEDFORM***

---

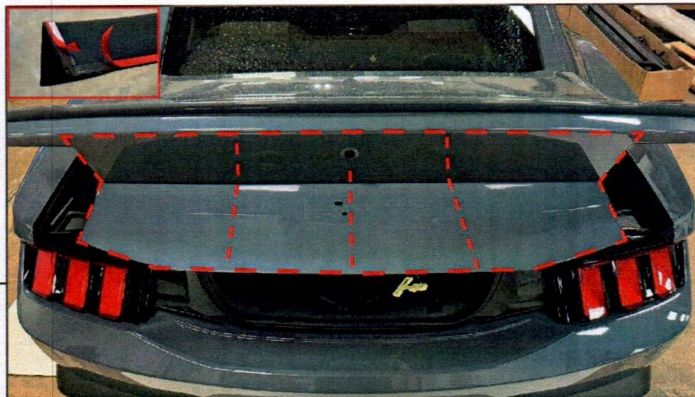

## **STEP 3**

Once familiar with the fitment, clean the vehicle decklid panel using (2) alcohol prep pads, following with (2) adhesion promoter prep pads to prepare for tape adhesion.



## **STEP 4**

Peel the red tape backing from the new decklid panel. Ensure all sides of the panel are flush to the decklid, and firmly press the panel into place to ensure proper adhesion.

# ***SPEEDFORM***

---



---

## **STEP 5**

Installation is now complete.