



# WICKER BILL SPOILER

## (2010-2014 MUSTANG)

### INSTALLATION INSTRUCTIONS

#### CONTENTS

- (1) Spoiler
- (1) Wicker Bill
- (4) M6 x 25mm Studs
- (4) M6 Flat Washers
- (4) M6 Lock Nuts
- (6) M6 Tapered Allen Bolts
- (6) M6 Tapered Washers
- (2) Alcohol Prep Pads
- (2) Adhesion Promoter Prep Pads
- (4) Drilling Templates

#### TOOLS REQUIRED

- 10mm Socket
- Ratchet
- Panel Removal Tool
- 3mm, 4mm Allen Key
- Exterior Detailer
- Isopropyl Alcohol
- Microfiber Cloth
- Masking Tape
- Drill & 15/64" Drill Bit (optional)

SKU # 466200



#### STEP 1



Open the vehicle trunk and remove the (13) plastic push clips securing the trunk liner to the trunk. Remove the trunk liner and set aside.

#### STEP 2




Remove (4) 10mm bolts, and remove the spoiler from the vehicle.

Note: The spoiler is adhered to the trunk using double sided tape. Carefully using a plastic pry tool may be necessary to lift the spoiler away.

Remove all remaining double sided tape adhesive, and then clean the trunk using exterior detailer and a microfiber cloth.




#### STEP 3

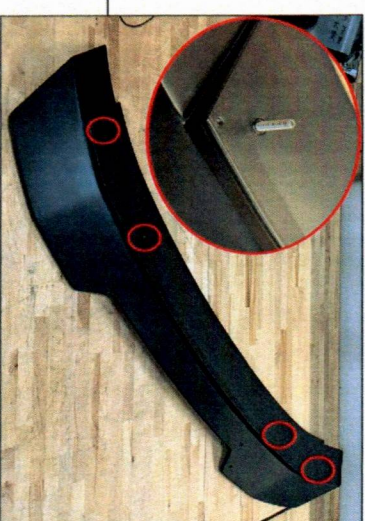



Thread the (4) M6 studs into the spoiler, and tighten into place using the 3mm Allen hole in the center of the stud.

#### STEP 4

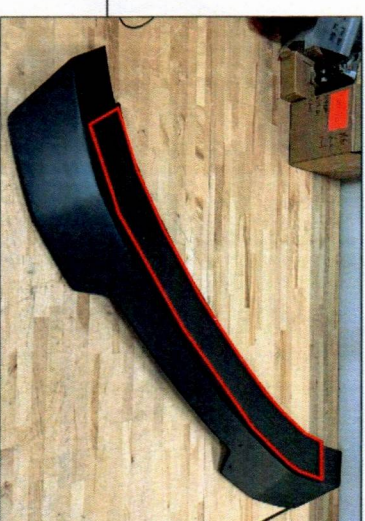

Clean the bottom of the spoiler using (1) isopropyl alcohol prep pad, and allow to dry. Then, clean the spoiler using (1) adhesion promoter prep pad and allow to fully dry.

Apply the included double sided tape to the perimeter of the spoiler.

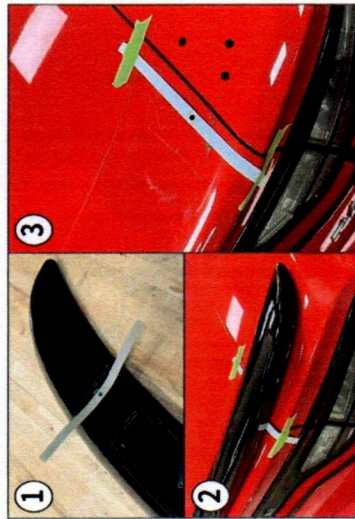

#### STEP 5

**Vehicles without OEM Spoiler:** Adhere the (4) drilling template strips over the vehicle bolt holes using the adhesive on the center of the strip (1). Then, test fit the spoiler to the vehicle ensuring the spoiler is centered. Then, use masking tape to secure the strips into place on the vehicle, and lift the spoiler away leaving the strips on the vehicle (2).

Drill the vehicle trunk panel using a drill and a 15/64" drill bit (3).



#### STEP 6

Test fit the spoiler to the vehicle before peeling the tape backing. Some spoiler manipulation may be necessary to fit into all (4) trunk holes. If necessary, expand the OEM spoiler holes using a drill and drill bit.

Once familiar with fitment, peel the red tape backing and fit the spoiler to the vehicle. Secure the spoiler to the trunk using the (4) M6 flat washers and (4) M6 lock nuts. Tighten until secure. Re-install the trunk liner using the (13) plastic push clips.



#### STEP 7

Peel the protective film from both sides of the wicker bill. Then, loosely fit the wicker bill to the spoiler using the (6) M6 tapered Allen bolts and (6) M6 tapered washers.

Adjust the wicker bill to the desired height, and tighten all bolts to secure the wicker bill into place.



#### STEP 8

Installation is now complete.