


SPEEDFORM

STEP 3

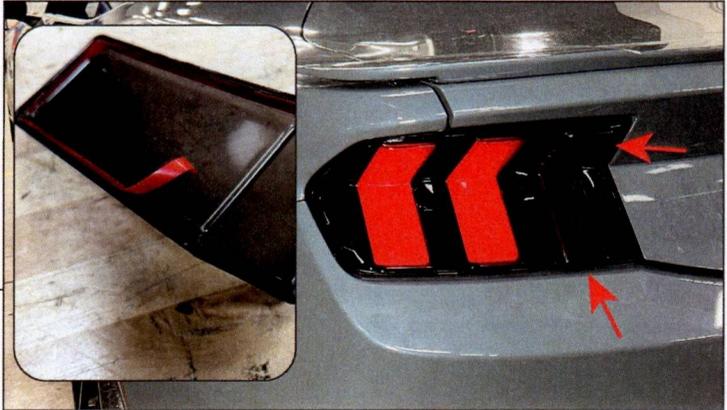

Peel the red tape backing from the double sided tape. Fit the bottom of the cover panel to the vehicle, then press the top of the panel to the tail light. Firmly press the cover into place to encourage tape adhesion.

STEP 4



Repeat Steps 1-3 for all remaining tail light cover panels.

Installation is now complete.

SPEEDFORM



STEP 1

Clean the vehicle tail light using exterior detailer and a microfiber cloth, and allow to fully dry.

Clean the perimeter of each red portion of the tail light using (1) alcohol prep pad, and allow to fully dry.

Clean the perimeter of each red portion of the tail light using (1) adhesion promoter prep pad, and allow to fully dry.



STEP 2

Test fit each lens cover to the vehicle tail light to identify each proper mounting location.

Remove the clear protective film from the face of each lens cover.

SPEEDFORM

SMOKED TAIL LIGHT COVERS

(2024-2025+ MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Outer Cover
- (1) LH Center Cover
- (1) LH Inner Cover
- (1) RH Outer Cover
- (1) RH Center Cover
- (1) RH Inner Cover
- (2) Alcohol Prep Pads
- (2) Adhesion Promoter Prep Pads

TOOLS REQUIRED

- Exterior Detailer
- Microfiber Cloth

SKU # 466201