

SPEEDFORM

REAR REFLECTOR TRIM

(2024-2025+ MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Reflector Trim
- (1) RH Reflector Trim
- (2) Alcohol Prep Pads
- (2) Adhesion Promoter Prep Pads

TOOLS REQUIRED

- Exterior Detailer
- Microfiber Cloth

SKU # 467024

SPEEDFORM


STEP 1



- Clean the rear bumper above the reflector using exterior detailer and a microfiber cloth, allow to fully dry.
- Clean the rear bumper above the reflector using the included (1) alcohol prep pad, allow to fully dry.
- Clean the rear bumper above the reflector using the included (1) adhesion promoter prep pad, allow to fully dry.

Before removing the tape backing, test fit the tail light trim panel to the tail light to familiarize fitment.

STEP 2

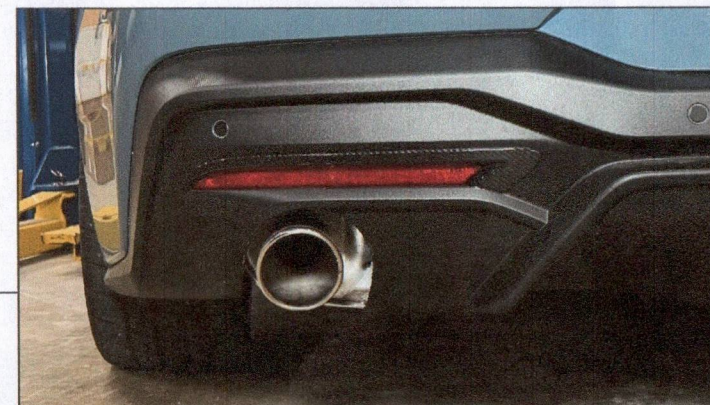

Peel the red tape backing from the reflector trim panel, and firmly press the panel to the vehicle bumper.

Repeat Steps 1-2 for the remaining tail light trim panel.

Installation is now complete.