

SPEEDFORM

DECKLID LIP TRIM

(2024-2025+ MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Decklid Lip Trim Panel
- (1) Alcohol Prep Pad
- (1) Adhesion Promoter Prep Pad


TOOLS REQUIRED

- Exterior Detailer
- Microfiber Cloth

SKU # 467026 / 467027

SPEEDFORM

STEP 1

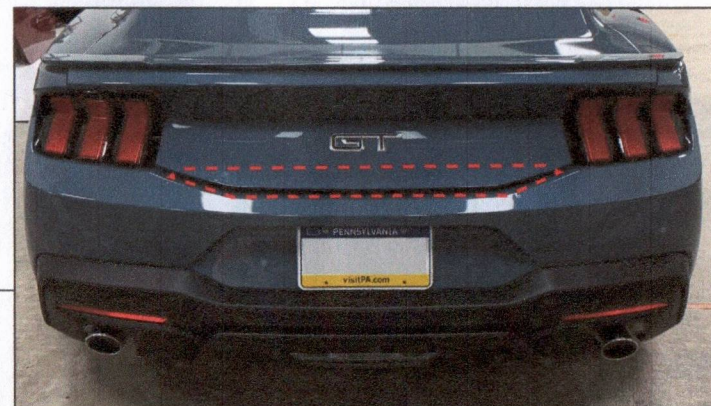

- Clean the decklid panel using exterior detailer and a microfiber cloth, allow to fully dry.
- Clean the decklid panel using the included (1) alcohol prep pad, allow to fully dry.
- Clean the decklid using the included (1) adhesion promoter prep pad, allow to fully dry.

Before removing the tape backing, test fit the trim panel to the decklid panel to familiarize fitment.

STEP 2



Peel the red tape backing from the trim panel, and firmly press the panel to the vehicle decklid panel.

Installation is now complete.