

SPEEDFORM

HVAC VENT TRIM

(2024-2025+ MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LH Vent Trim
(1) RH Vent Trim
(2) Alcohol Prep Pads
(2) Adhesion Promoter Prep Pads


TOOLS REQUIRED

N/A

SKU # 467029

SPEEDFORM

STEP 1

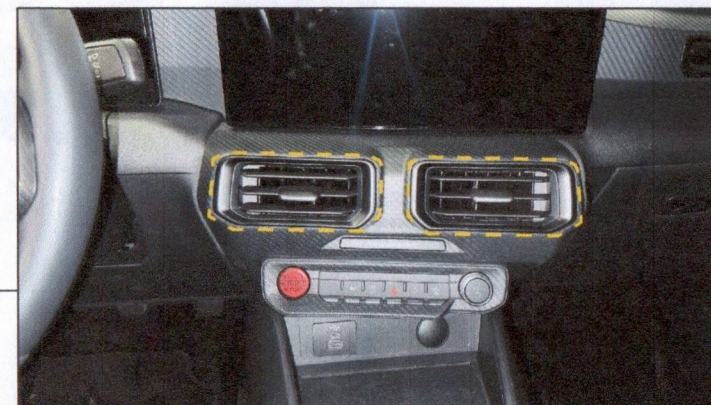

- Clean each vent using the included (1) alcohol prep pad, allow to fully dry.
- Clean each vent using the included (1) adhesion promoter prep pad, allow to fully dry.

Before removing the tape backing, test fit the vent trim panel to the vent to familiarize fitment.

STEP 2



Peel the red tape backing from the vent trim panel, and firmly press the panel to the vehicle vent.

Installation is now complete.