

# ***SPEEDFORM***

---

## **TURN SIGNAL COVERS**

(2018-2023 MUSTANG - ECOBOOST & GT)

---

### INSTALLATION INSTRUCTIONS

#### CONTENTS

---

- (1) LH Turn Signal Cover
- (1) RH Turn Signal Cover
- (2) Alcohol Prep Pads
- (2) Adhesion Promoter Prep Pads

#### TOOLS REQUIRED

---


- Exterior Detailer
- Microfiber Cloth

SKU # 472245

# ***SPEEDFORM***

---


## **STEP 1**

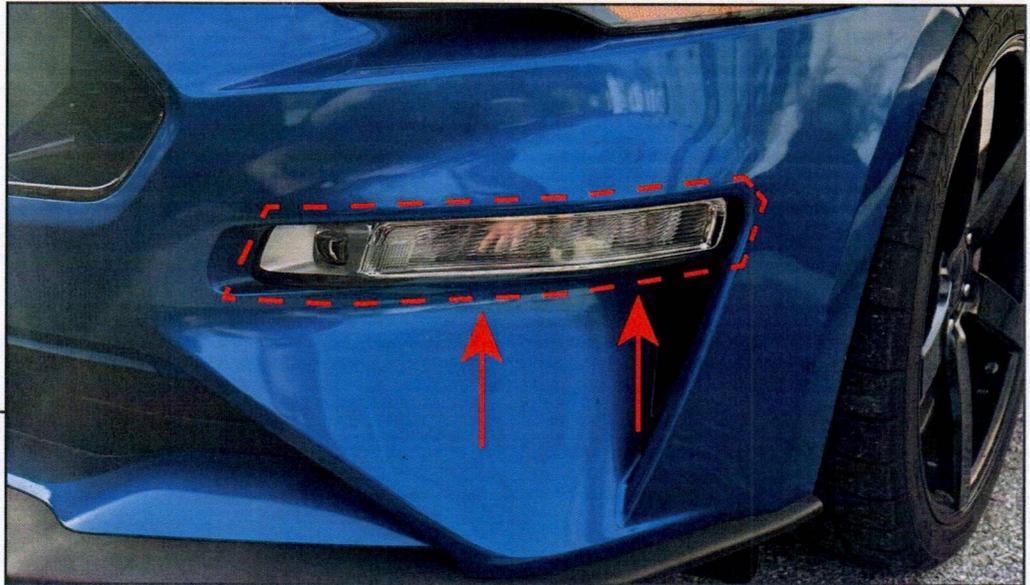

Clean the vehicle front turn signal using exterior detailer and a microfiber cloth. Ensure to remove all dirt from the lens surface and the bottom of the lens (mounting point).

- Clean the same area using (1) alcohol prep pad, and allow to fully dry.
- Clean the same area using (1) adhesion promoter prep pad, and allow to fully dry.

## **STEP 2**

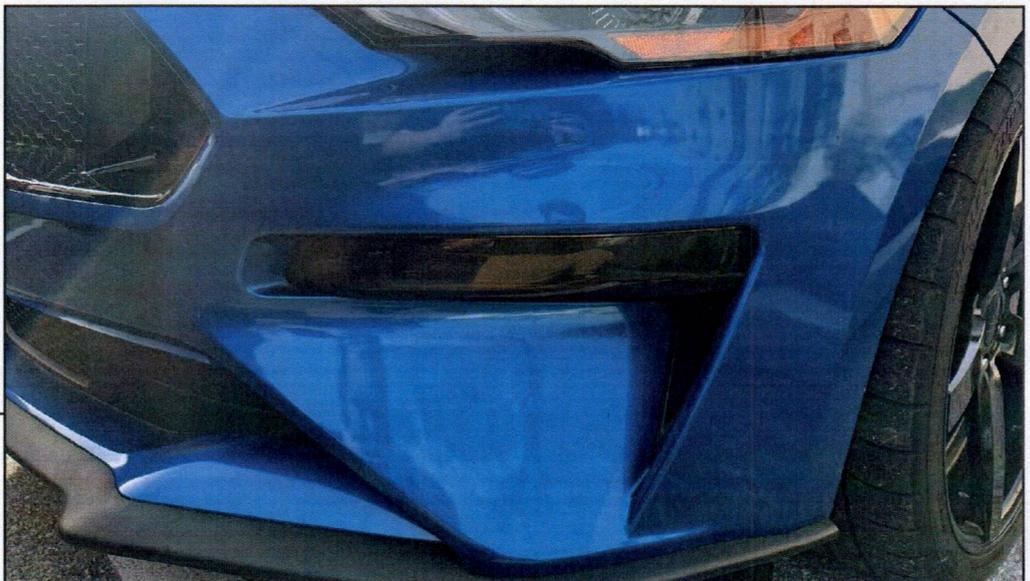

Identify the LH and RH lens covers. Test fit the appropriate cover to the vehicle, the lens cover will fit slightly under the turn signal cutouts in the bumper.

Once familiar with fitment, peel the tape backing from the 3M dual lock and fit the cover to the vehicle turn signal lens. Apply firm, even pressure to the 3M dual lock to encourage proper adhesion.

The lens covers are removable if necessary. Installation is now complete.