


2015-2021 Mustang T-Radio

Bottom Bracket Installation Note

Please follow above steps to attach the bottom bracket to the main bezel.

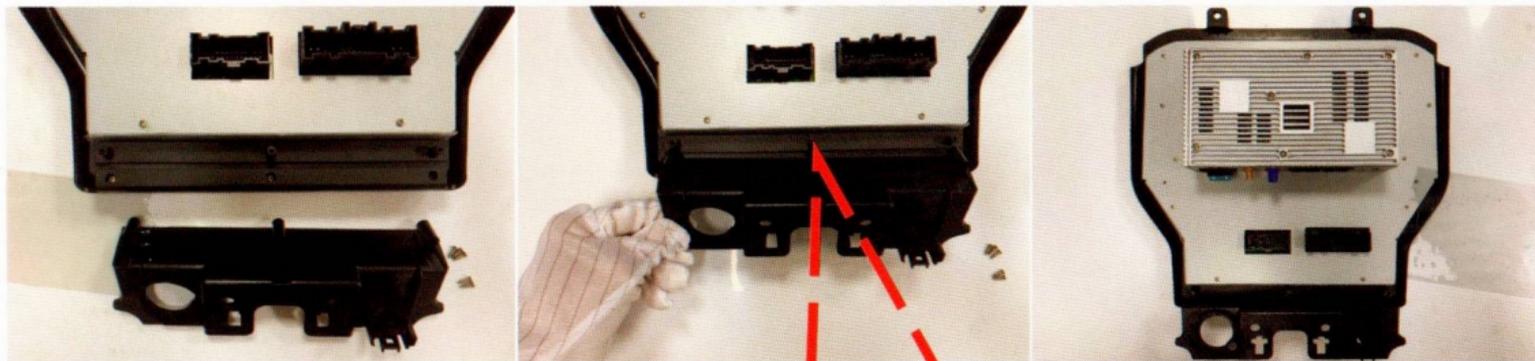

Step 1:
Locate 3pcs screws in the package.
Other 2pcs extra for spare use. (PA2.6 X 6mm)



Step 2: Attach the bottom bracket to the main bezel with 3pcs screws.

Step 3: Installation finished.