



CARBON FIBER BLADE STYLE REAR SPOILER

(2024-2026+ MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Rear Spoiler
- (1) Roll of Double Sided Tape
- (2) M6x1.00 x 20mm Flange Bolts
- (2) M6 Flat Washers
- (2) 4.5mm Spacers
- (2) Alcohol Prep Pads
- (2) Adhesion Promoter Prep Pads
- (2) Drill Template Strips

TOOLS REQUIRED

- 10mm Socket
- Ratchet
- Panel Removal Tool
- Exterior Detailer
- Microfiber Cloth
- Drill & Drill Bits (Optional)
- Masking Tape (Optional)

SKU # 483611
Edited: 12/05/2025



STEP 1

Open the vehicle trunk. Remove (2) rubber grommets from each end of the trunk lid. Remove (2) 10mm bolts from the under-side of the vehicle spoiler.



STEP 2

Using a plastic pry tool and a heat gun, heat the spoiler edges to loosen the adhesive and gently pry upwards to disengage the spoiler tape adhesive from the trunk lid.

The center of the spoiler has (2) plastic retaining clips. Additional pressure may be necessary to disengage the clips.

STEP 3

Remove any double sided tape from the trunk panel. Clean the vehicle trunk lid using exterior detailer and a microfiber cloth once all tape is removed.

STEP 4

Place the new spoiler face down on a soft workable surface. Clean the bottom perimeter of the spoiler using (1) alcohol prep pad and allow to fully dry. Then, clean the bottom perimeter of the spoiler using (1) adhesion promoter prep pad and allow to fully dry.

Apply the included double sided tape along the perimeter of the spoiler.




STEP 5

Clean the trunk panel to prepare for the spoiler using (1) alcohol prep pad and allow to fully dry. Then, clean the trunk panel using (1) adhesion promoter prep pad and allow to fully dry.

Fit the included spacers into the bolt holes at each end of the trunk panel. Vehicles without OEM spoiler will not use spacers. Test fit the spoiler before removing the tape backing to familiarize fitment.


Vehicles without OEM rear spoiler, see Step 6.

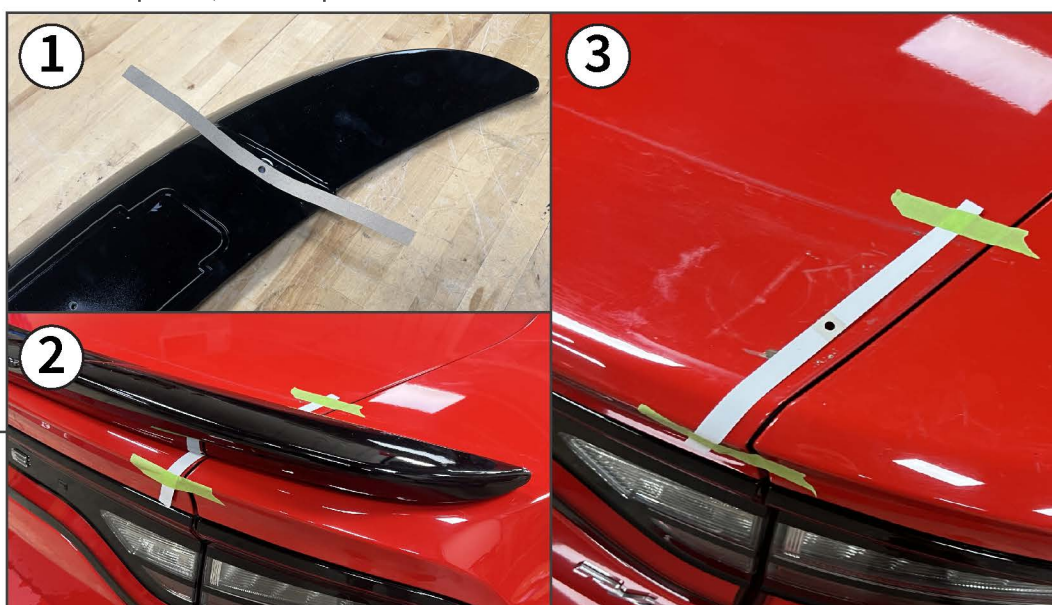

STEP 6 [WITHOUT OEM SPOILER]

Adhere the (2) drilling template strips over the vehicle bolt holes using the adhesive on the center of the strip [1]. Then, test fit the spoiler to the vehicle ensuring the spoiler is centered. Then, use masking tape to secure the strips into place on the vehicle, and lift the spoiler away leaving the strips on the vehicle [2].

Drill the vehicle trunk panel using a drill and a 15/64" drill bit [3].

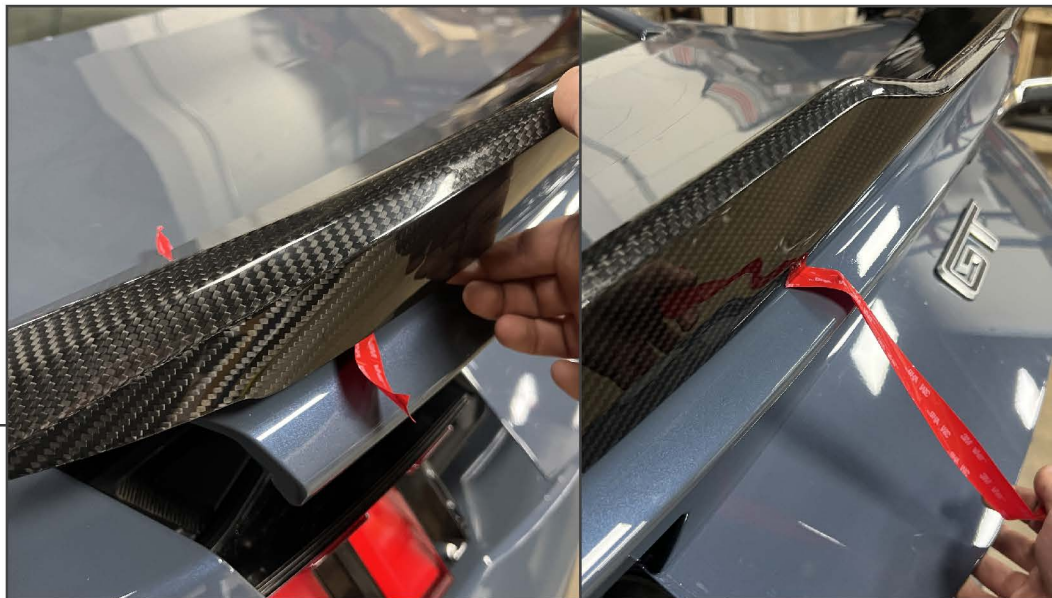STEP 7

Peel the first few inches of the double sided tape red backing, do not fully remove. Then, loosely secure the spoiler using the included (2) M6 x 20mm flange head bolts and (2) M6 flat washers.

With the bolts started, peel the tape backing entirely from the tape. Make final adjustments and place the spoiler down to the trunk panel. Tighten the M6 bolts until secure.

STEP 8

Re-install the trunk grommets. Close the trunk lid.

Installation is now complete.