

DARK HORSE STYLE REAR SPOILER

(2024-2026+ MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Rear Spoiler
- (1) Wicker Panel
- (1) Center Mounting Point
- (1) LH Mounting Point
- (1) RH Mounting Point
- (1) LH End Plate
- (1) RH End Plate
- (2) Mounting Point Caps
- (2) End Plate Caps
- (1) Center Mounting Point Tape
- (1) LH Mounting Point Tape
- (1) RH Mounting Point Tape
- (2) M6x1.00 x 12mm Flange Bolts
- (2) M6 Flat Washers
- (20) M6x1.00 x 12mm Phillips Bolts
- (2) Plastic Clips

TOOLS REQUIRED

- 10mm Socket
- Ratchet
- Phillips Screwdriver
- Panel Removal Tool
- Exterior Detailer
- Isopropyl Alcohol
- Microfiber Cloth

STEP 1



Open the vehicle trunk. Remove (1) rubber grommet from each end of the trunk lid covering the spoiler mounting hardware.

Remove the (2) 10mm spoiler mounting bolts.

STEP 2



Using a plastic pry tool and a heat gun, heat the spoiler edges to loosen the adhesive and gently pry upwards to disengage the spoiler tape adhesive from the trunk lid. Ensure to protect the vehicle painted surfaces while carefully prying the spoiler away.

Note: The center of the spoiler uses (2) plastic retaining clips to secure the spoiler to the trunk panel. Additional pressure may be necessary to disengage the clips.

STEP 3



Clean the vehicle trunk lid using exterior detailer and a microfiber cloth. Then, clean the trunk using isopropyl alcohol and a microfiber cloth. Allow to fully dry.

STEP 4



Place the new spoiler and spoiler components on a workable surface for assembly.


Fit the center mounting point to the bottom of the spoiler, and secure into place using (4) M6 x 12mm Phillips bolts. When tightening the hardware, ensure to check each bolt multiple times to ensure all bolts are evenly tightened.



STEP 5

Fit the appropriate end plate to the vehicle spoiler, and secure into place using (3) M6 x 12mm Phillips bolts. Repeat this step to the opposite side of the spoiler. Each end plate is side specific.

Ensure all hardware is tight, and then fit the appropriate cover plate to the spoiler. The plate will snap into place.

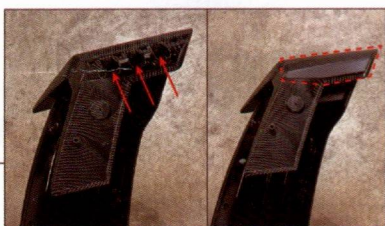

STEP 6

Fit the appropriate mounting point to the previously mounted end plate, and secure into place using (3) M6 x 12mm Phillips bolts. Repeat this step to the opposite side of the spoiler. Each mounting point is side specific.

Ensure all hardware is tight, and then fit the appropriate cover plate to the mounting point. The plate will snap into place.



STEP 7

Clean each mounting point using isopropyl alcohol and a microfiber cloth. Allow to fully dry.



STEP 8

Familiarize the mounting location for each of the included double sided tape pads.

-LH and RH tape pads are side specific, test fit before peeling the tape backing.


-Center tape pad has clearances for plastic clips, take note before peeling the tape backing.

Once familiar with the tape mounting locations, peel the tape backing and adhere the tape pads to the spoiler mounting points. Press firmly to ensure the tape properly engages to the spoiler.



STEP 9

Install the wicker panel to the spoiler using (4) M6 x 12mm Phillips bolts. Loosely fit all hardware to allow adjustability initially. Then, once all of the bolts are started, evenly tighten the wicker panel into place.

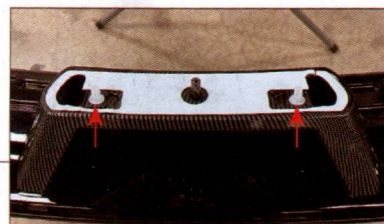

STEP 10

Fit the included (2) plastic clips into the spoiler center mounting point.



STEP 11

Peel the tape backing from the previously mounted tape pads. Tearing the tape backing may be necessary to clear the mounting clips & alignment studs.



STEP 12

Fit the spoiler into the pre-drilled alignment holes in the trunk as well as the center mounting clip holes. Once seated, carefully open the trunk and secure each side of the spoiler using (2) M6 x 12mm flange head bolts and (2) M6 flat washers. Tighten until secure. Re-install the OEM trunk grommets.



STEP 13

Installation is now complete.