



3-POST SPOILER

(2016+ CAMARO)

INSTALLATION INSTRUCTIONS

CONTENTS


- (1) Spoiler
- (6) Drilling Templates
- (6) M6 Bolts
- (6) M6 Flat Washers

TOOLS REQUIRED

- Drill & 15/64" Drill Bit (Optional)
- Panel Removal Tool
- 10mm Wrench & Socket
- Ratchet
- Masking Tape
- Exterior Detailer
- Microfiber Cloth
- Fishing Line


**STEP 1**

Remove (7) plastic push clips from the trunk insulation. Un-thread the (2) trunk stoppers. Remove (1) trunk striker plastic panel, and remove the trunk insulation from the vehicle and set aside.

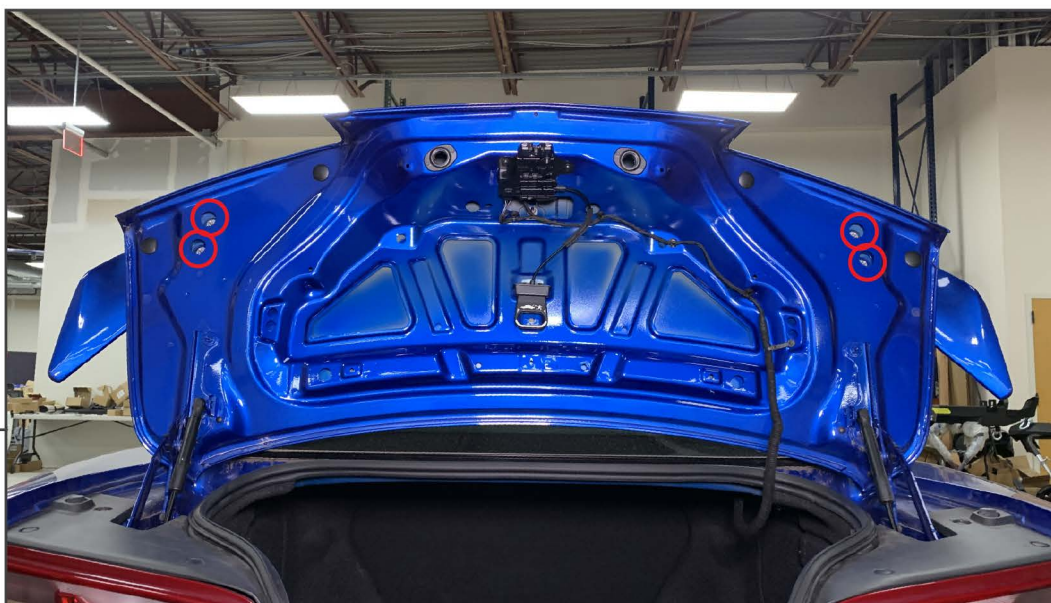**STEP 2**


Remove (2) rubber grommets from each end of the trunk lid.

Vehicles without OEM spoiler: Skip to Step 6.

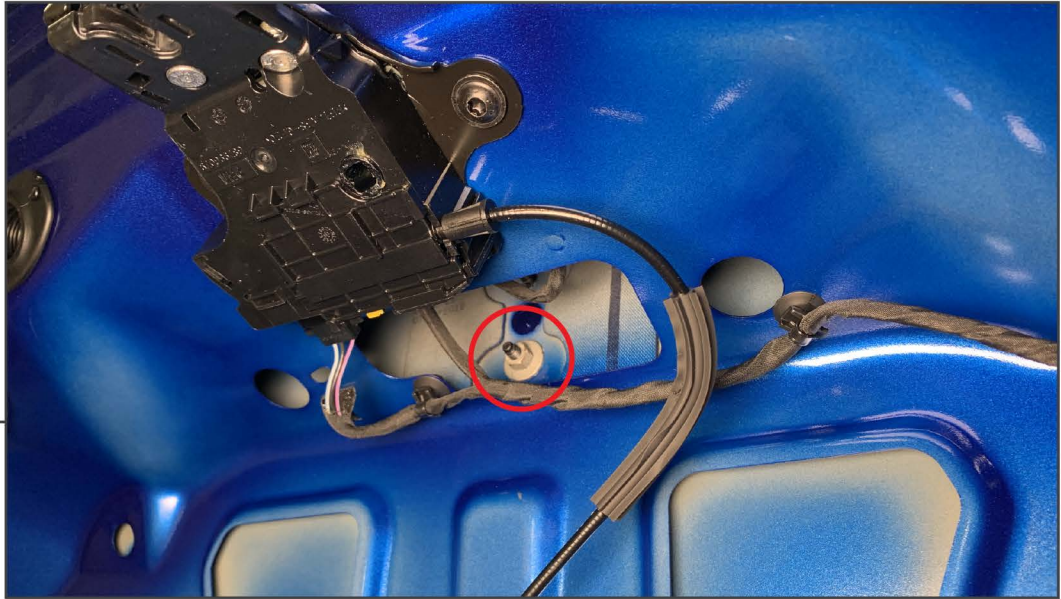

STEP 3

Remove (1) 10mm nut from the center of the trunk lid.

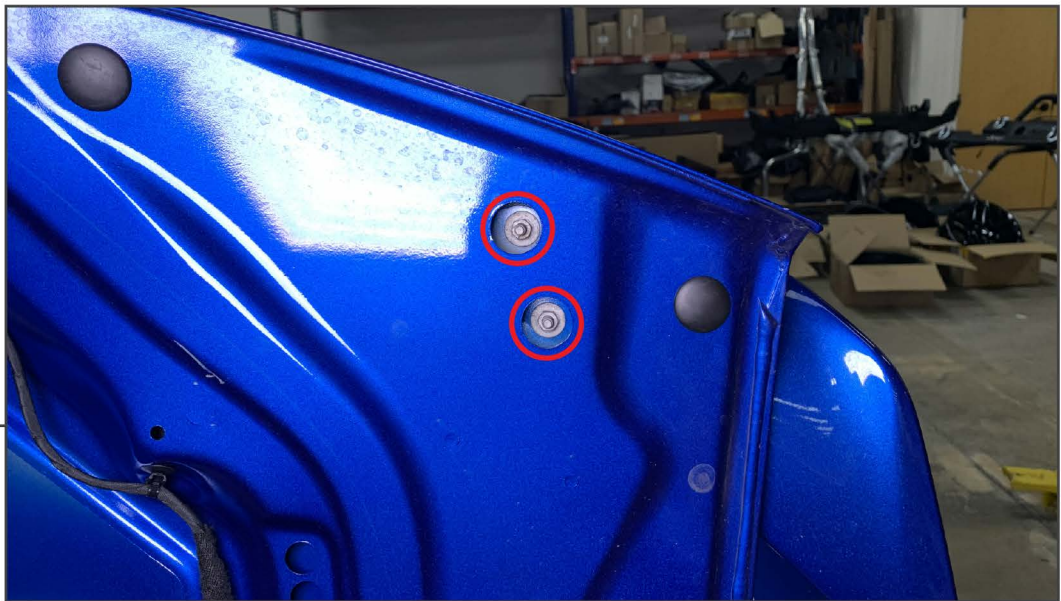

STEP 4

Remove (2) 10mm nuts from each side of the spoiler. With the hardware loose, hinge the trunk lid downwards, then remove the hardware to allow gravity to keep the hardware in the socket.



STEP 5


Close the vehicle trunk lid, and use fishing line to separate the double sided tape in between the original spoiler and the vehicle trunk lid. Clean the vehicle trunk lid with exterior detailer and a microfiber cloth, allow to fully dry.

Vehicles with OEM spoiler: Skip to Step 9.



**STEP 6
(DRILLING)**


Vehicles without OEM spoiler: Adhere the drilling templates to the bottom side of the spoiler over the bolt holes.

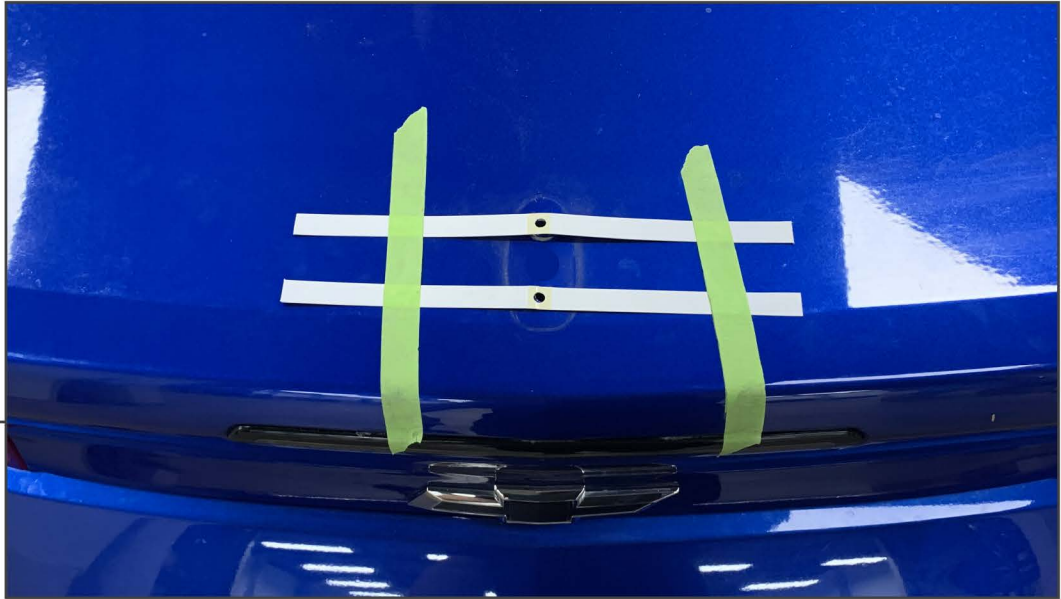**STEP 7**

Align and center the spoiler assembly to the rear of the trunk lid. With the drilling templates against the vehicle, secure the drilling templates using masking tape. Remove the drilling templates from the spoiler and set the spoiler aside on a soft surface.

**STEP 8**

Using a 15/64" drill bit, drill the (6) holes in the vehicle spoiler.

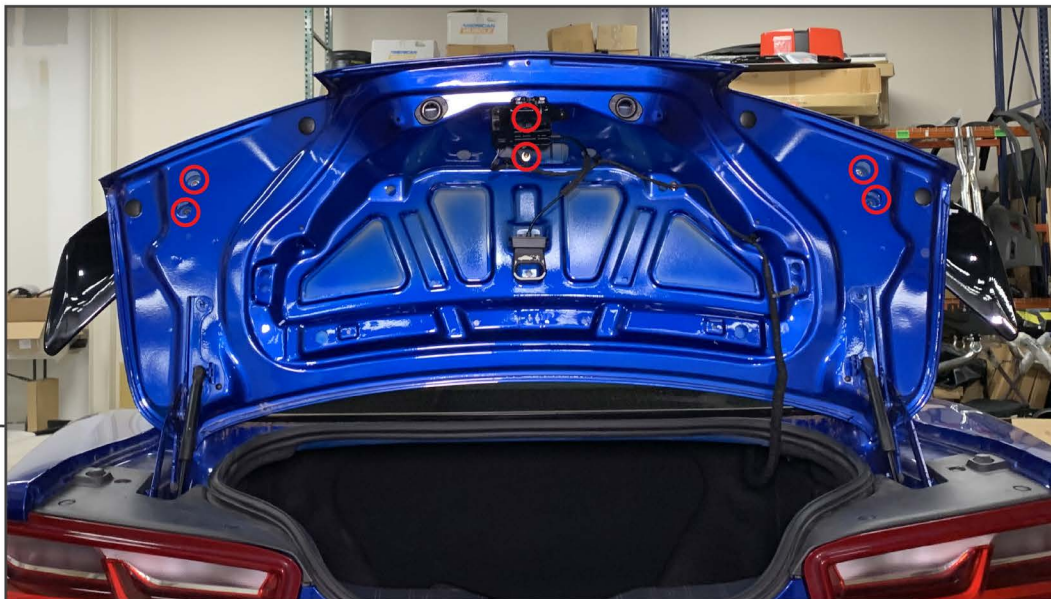

STEP 9

Align the spoiler to the vehicle trunk lid. Secure the spoiler using (6) M6 bolts and (6) M6 flat washers. Ensure to tighten all of the hardware evenly.



STEP 10

Re-install the trunk insulation using the original hardware. Close the trunk lid.

Installation is now complete.