



FLUSH MOUNTED SPOILER

(2016+ CAMARO)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Spoiler
- (4) Drilling Templates
- (4) M6 Bolts
- (4) M6 Flat Washers

TOOLS REQUIRED

- Drill & 15/64" Drill Bit
- Panel Removal Tool
- 10mm Socket
- Ratchet
- Masking Tape
- Isopropyl Alcohol
- Microfiber Cloth



STEP 1

Open the vehicle trunk lid, and remove (4) rubber grommets from the trunk lid. The spoiler retaining bolts will be installed through these holes after drilling.



STEP 2

Close the trunk lid. Clean the vehicle trunk lid with isopropyl alcohol and a microfiber cloth, allow to fully dry.



STEP 3

Adhere the drilling templates to the bottom side of the spoiler over the bolt holes.

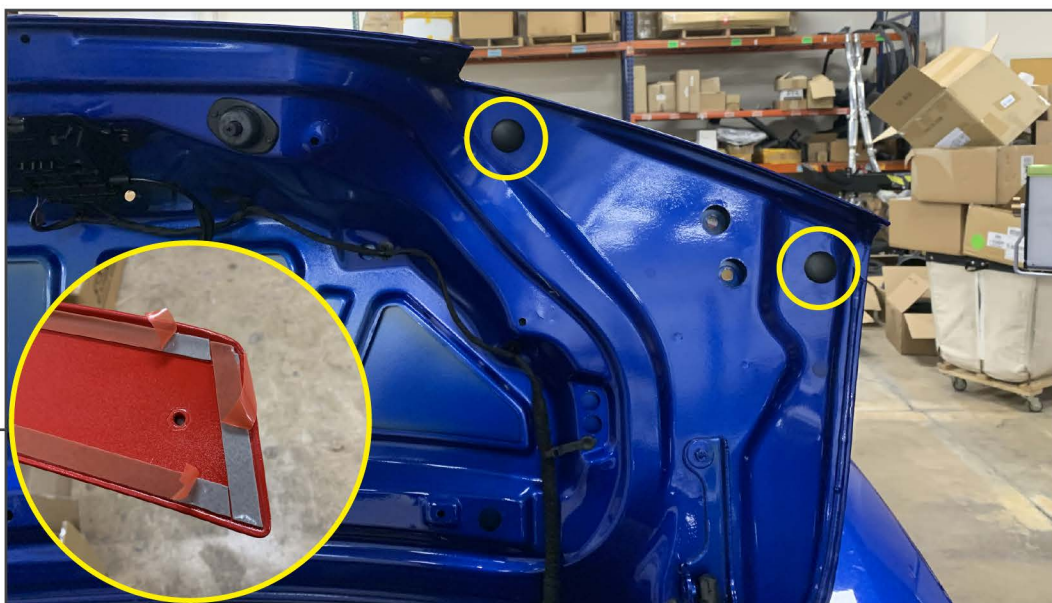


STEP 4

Align and center the spoiler assembly to the rear of the trunk lid. With the drilling templates against the vehicle, secure the drilling templates using masking tape. Remove the drilling templates from the spoiler and set the spoiler aside on a soft surface.

**STEP 5**

Using a 15/64" drill bit, drill the (4) holes in the vehicle spoiler.

**STEP 6**

With the holes drilled, peel the red tape backing from the spoiler's double sided tape. Align the spoiler to the vehicle, and begin threading the (4) bolts through the vehicle trunk lid into the spoiler. Firmly press down on the spoiler to adhere the tape, and tighten the (4) bolts. Once tight, re-install the vehicle trunk grommets.



STEP 7

Installation is now complete.