



---

# ZL1 STYLE REAR SPOILER

(2010-2013 CAMARO)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

(1) Spoiler  
(1) Hardware Kit

### TOOLS REQUIRED


---

Drill & 15/64" Drill Bit  
Panel Removal Tool  
10mm Wrench & Socket  
Ratchet  
Masking Tape  
Exterior Detailer  
Microfiber Cloth  
Fishing Line

**STEP 1**


This guide shows general steps for spoiler disassembly and installation. Some steps may differ depending on vehicle model year.

Remove (7) plastic push clips from the trunk insulation. Un-thread the (2) trunk stoppers. Remove (1) trunk striker plastic panel, and remove the trunk insulation from the vehicle and set aside.

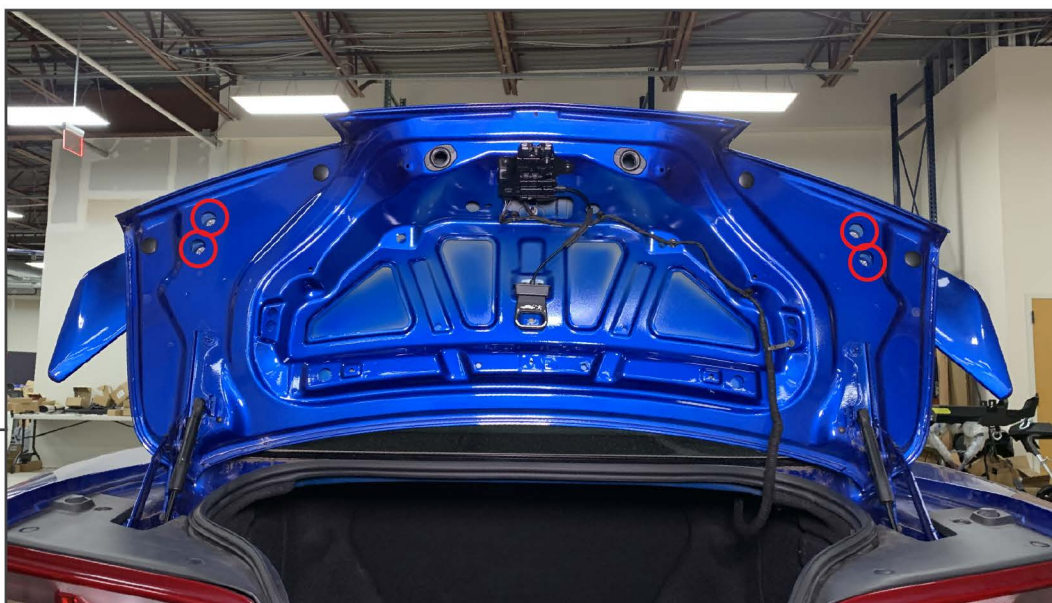**STEP 2**


Remove (2) rubber grommets from each end of the trunk lid.

**Vehicles without OEM spoiler:** Skip to Step 6.

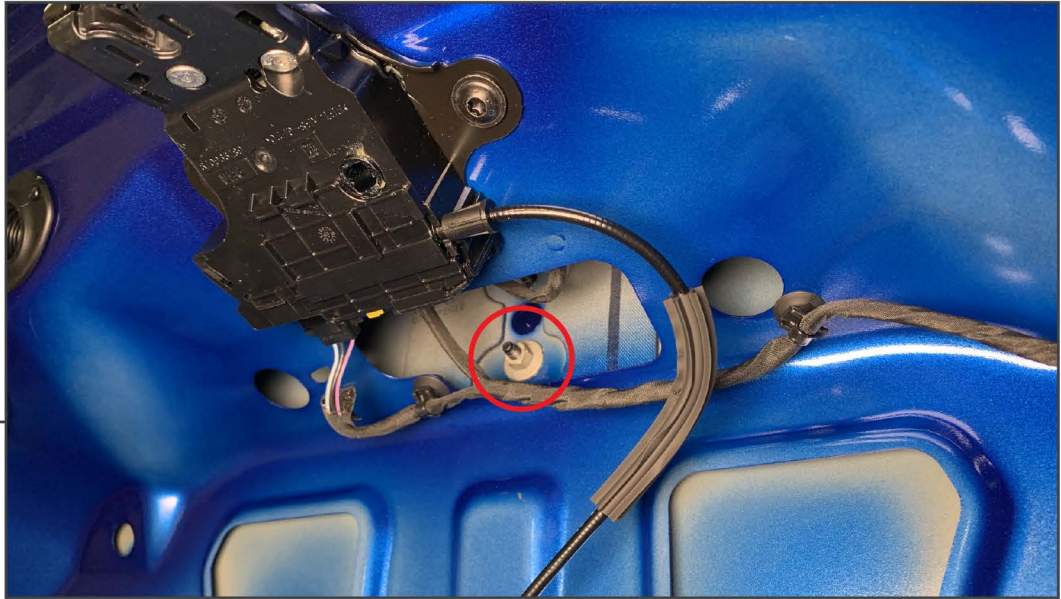

**STEP 3**

Remove (1) 10mm nut from the center of the trunk lid.

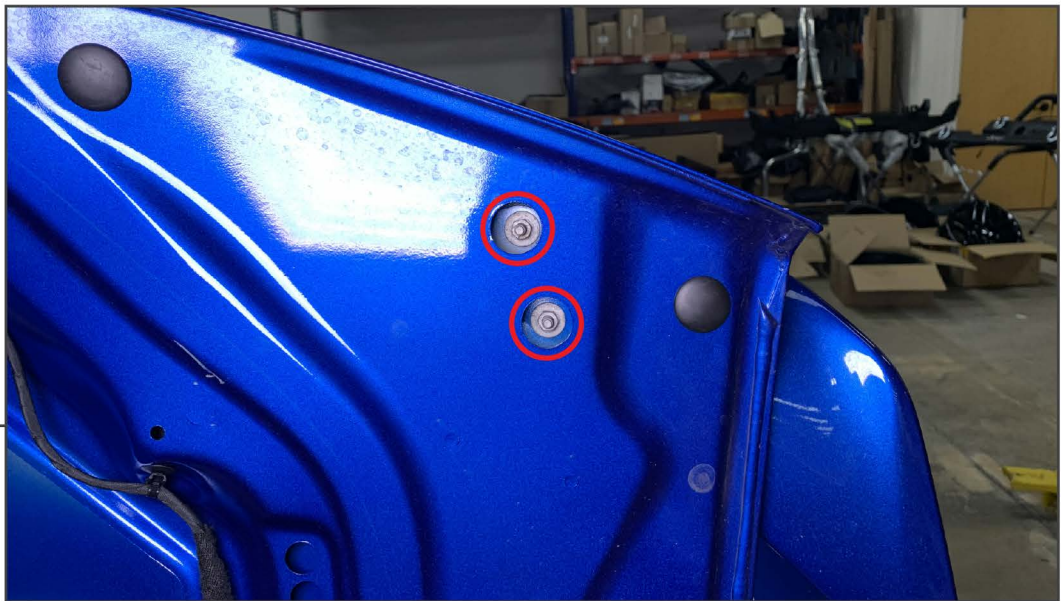

**STEP 4**

Remove (2) 10mm nuts from each side of the spoiler. With the hardware loose, hinge the trunk lid downwards, then remove the hardware to allow gravity to keep the hardware in the socket.



**STEP 5**


Close the vehicle trunk lid, and use fishing line to separate the double sided tape in between the original spoiler and the vehicle trunk lid. Clean the vehicle trunk lid with exterior detailer and a microfiber cloth, allow to fully dry.

**Vehicles with OEM spoiler:** Skip to Step 9.



**STEP 6  
(DRILLING)**


**Vehicles without OEM spoiler:** Adhere the drilling templates to the bottom side of the spoiler over the bolt holes.

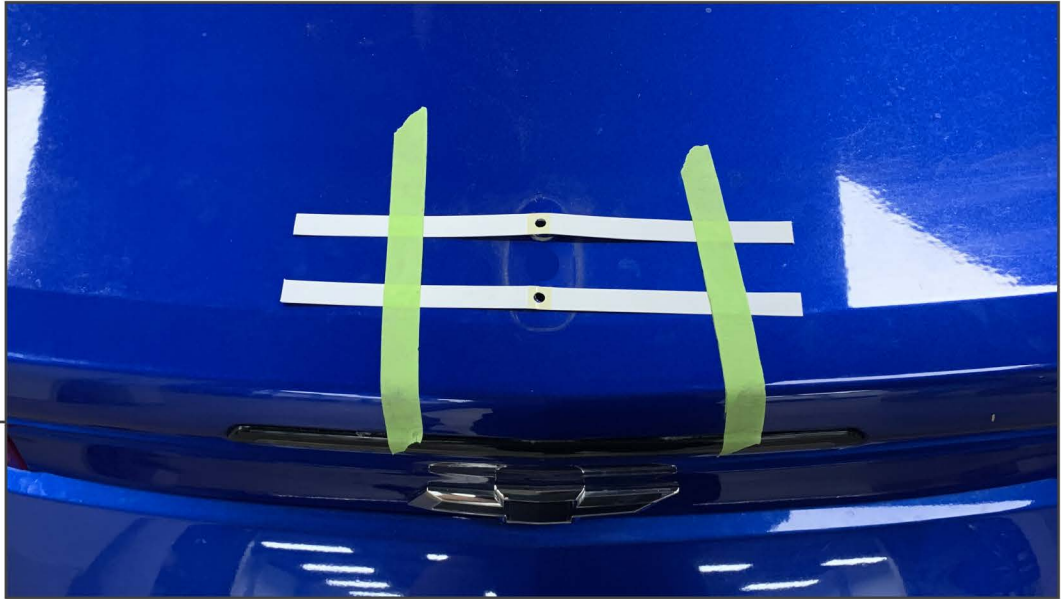

---

**STEP 7**

Align and center the spoiler assembly to the rear of the trunk lid. With the drilling templates against the vehicle, secure the drilling templates using masking tape. Remove the drilling templates from the spoiler and set the spoiler aside on a soft surface.

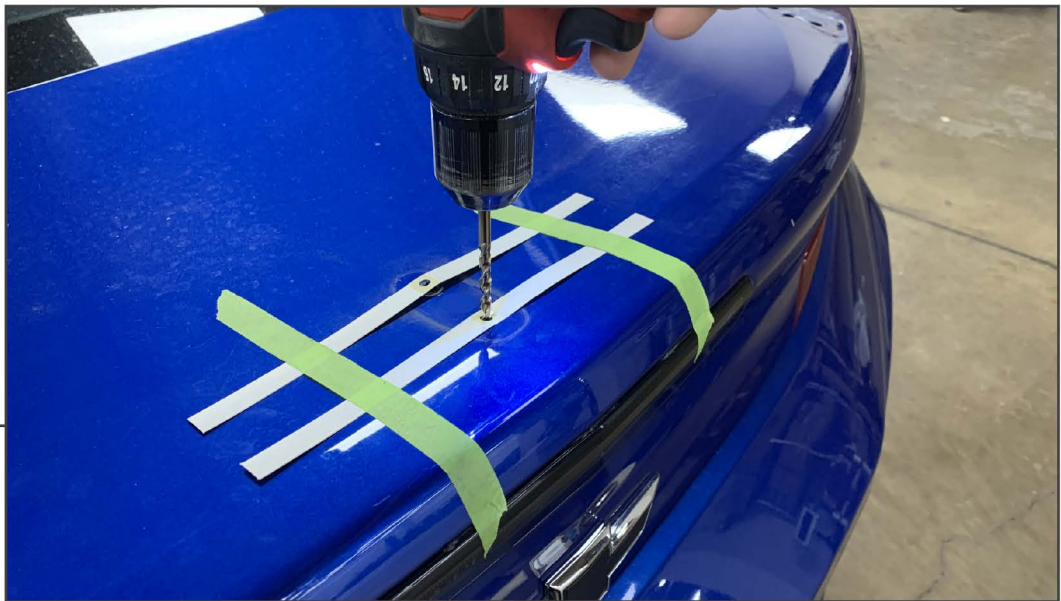

---

**STEP 8**

Using a 15/64" drill bit, drill the (6) holes in the vehicle spoiler.

**STEP 9**

Align the spoiler to the vehicle trunk lid. Secure the spoiler using (6) M6 bolts and (6) M6 flat washers. Ensure to tighten all of the hardware evenly.

**Note:** If spoiler has integrated third brake light, route the wiring into the vehicle trunk area with the original trunk wiring, and splice into the tail light harness using the following diagram.

<b>Spoiler Brake Light</b>	-	<b>Vehicle Brake Light</b>
White (+)	-	Brake Light 12V ++
White/Blue (-)	-	Brake Light Ground (-)

**STEP 10**

Re-install the trunk insulation using the original hardware. Close the trunk lid.

Installation is now complete.