



1

Wash each area with soap and water. Allow the area to dry. \*\*Recommended: Wipe the installation area with isopropyl alcohol to ensure the cleanest surface possible.



2

Apply the supplied 3M tape to each side scoop vent (along the inside edge) insert as shown above. Remove the 3M tape backing and push the vent insert firmly into place on each side scoop.



3


Apply the supplied 3M tape to each side scoop as shown above. Be sure to run tape all the way across the top edge. Align the tape along inside edge of vertical vent to help hide tape edges after scoop installation.



4

Test fit on each side of car to familiarize yourself with how they fit. Once you are comfortable with how the scoops fit, remove the 3M tape backing from one of the scoops. \*\*Recommended: Mark placement edges with masking tape to help guide alignment during placement.

5

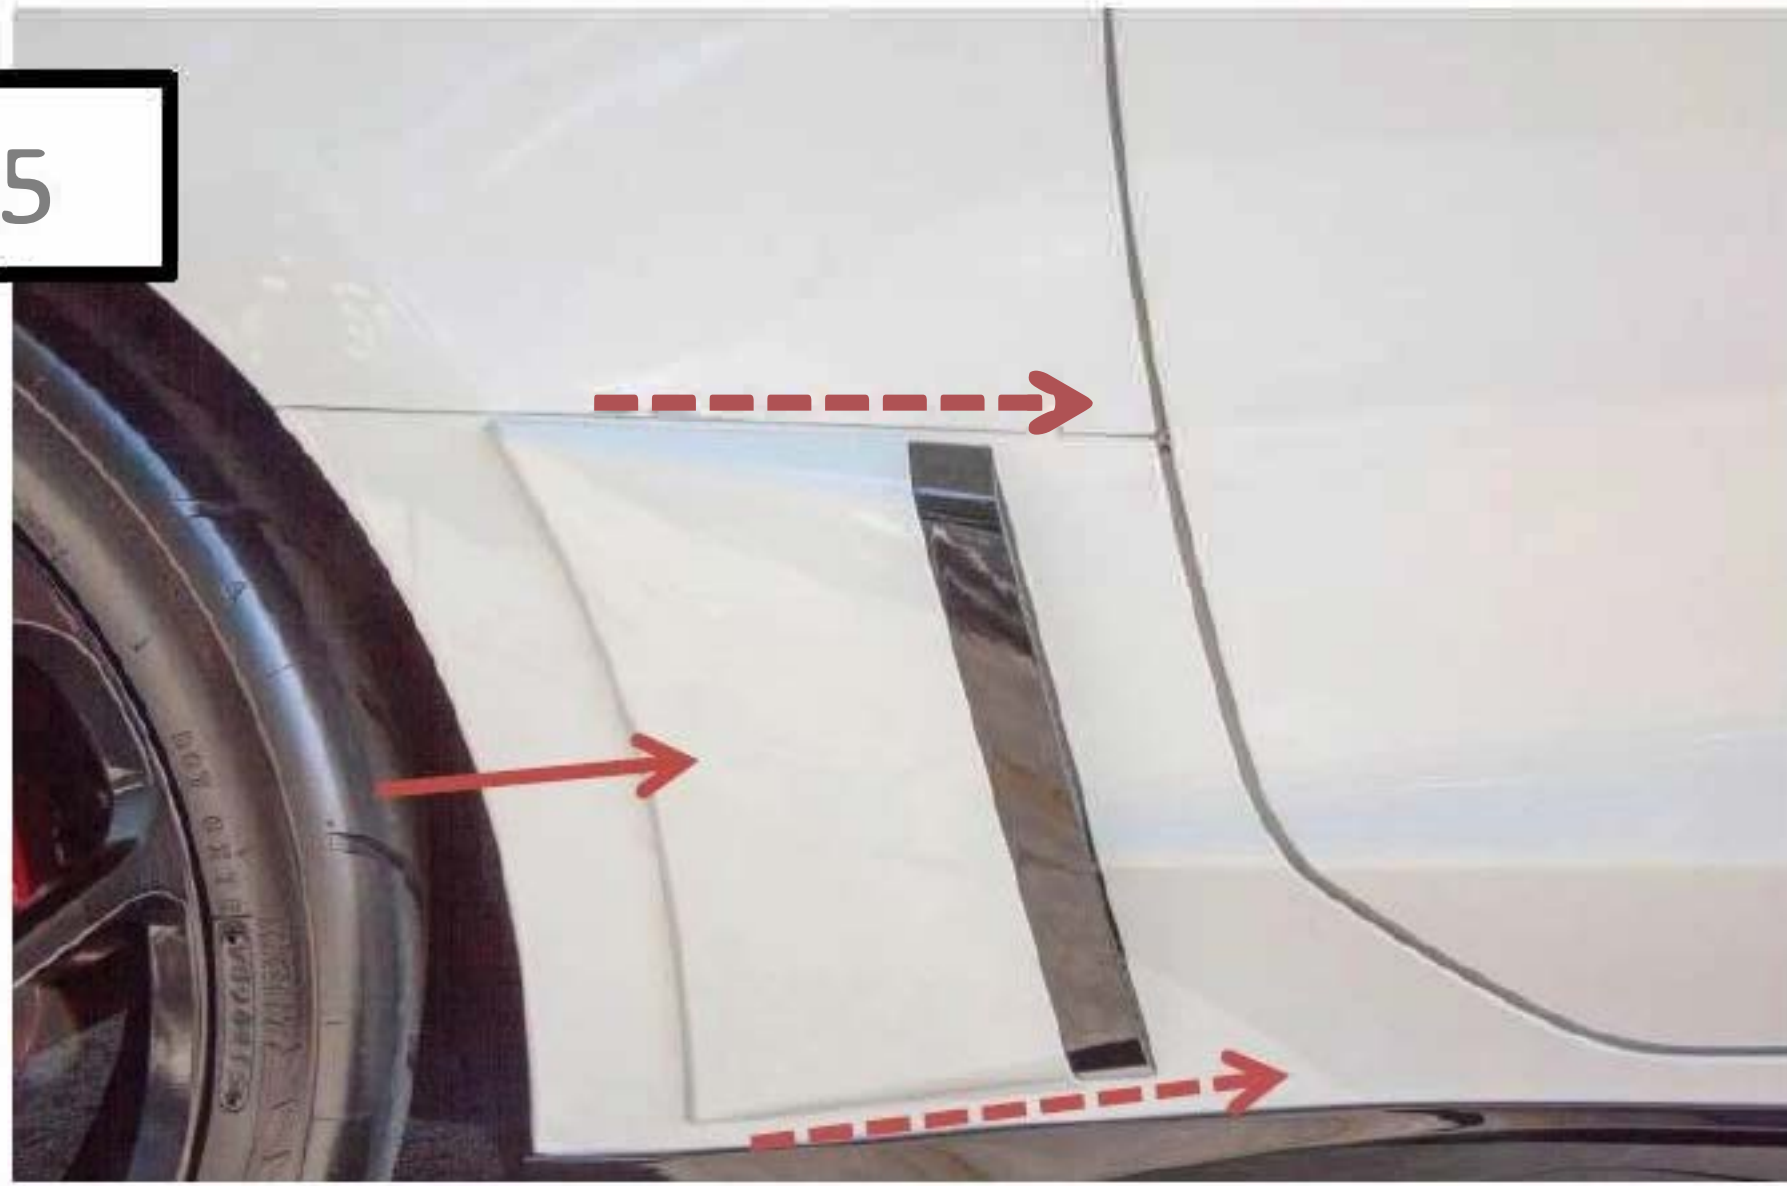

It's recommended to start the placement with the back edges of the side scoop, slowly pushing the whole scoop into place from back to front.

6



Apply firm even pressure to all taped edges to ensure proper adhesion. Repeat steps 2 through 6 to complete installation of the other scoop.