

1



Turn either tire to access the wheel well. Remove the 4 screws with a T15 Torx driver.

2



Push the wheel well aside and unplug the parking lamp. Remove the 3 screws with a 7mm socket. Save the plastic insert! **Recommend: Unsnap and remove the parking lamp from bumper to more easily access the screws.

3



Remove the 4 screws along the fender edge with the 7mm socket.

4



Repeat steps 1-3 for the remaining fender side. When working on the driver's side, be sure to disconnect the large plug.

5



Remove the 12 screws along the bottom edge of the bumper with a 7mm socket. Ignore the 2 torx screws.

6



Remove the 6 top screws with a T15 Torx driver. Remove the two push pins on the far left and right. Ignore the 2 screws not marked by arrows.

7



Pull fenders outward to unsnap.

8



Lift top front edge and begin pulling the bumper away from the vehicle. Bumper removal is now complete.


1



Camaro Front Bumper Removal

It will be necessary to remove the entire front bumper to access the upper grille. Follow the '16-23 Camaro Front Bumper Removal' guide.

2

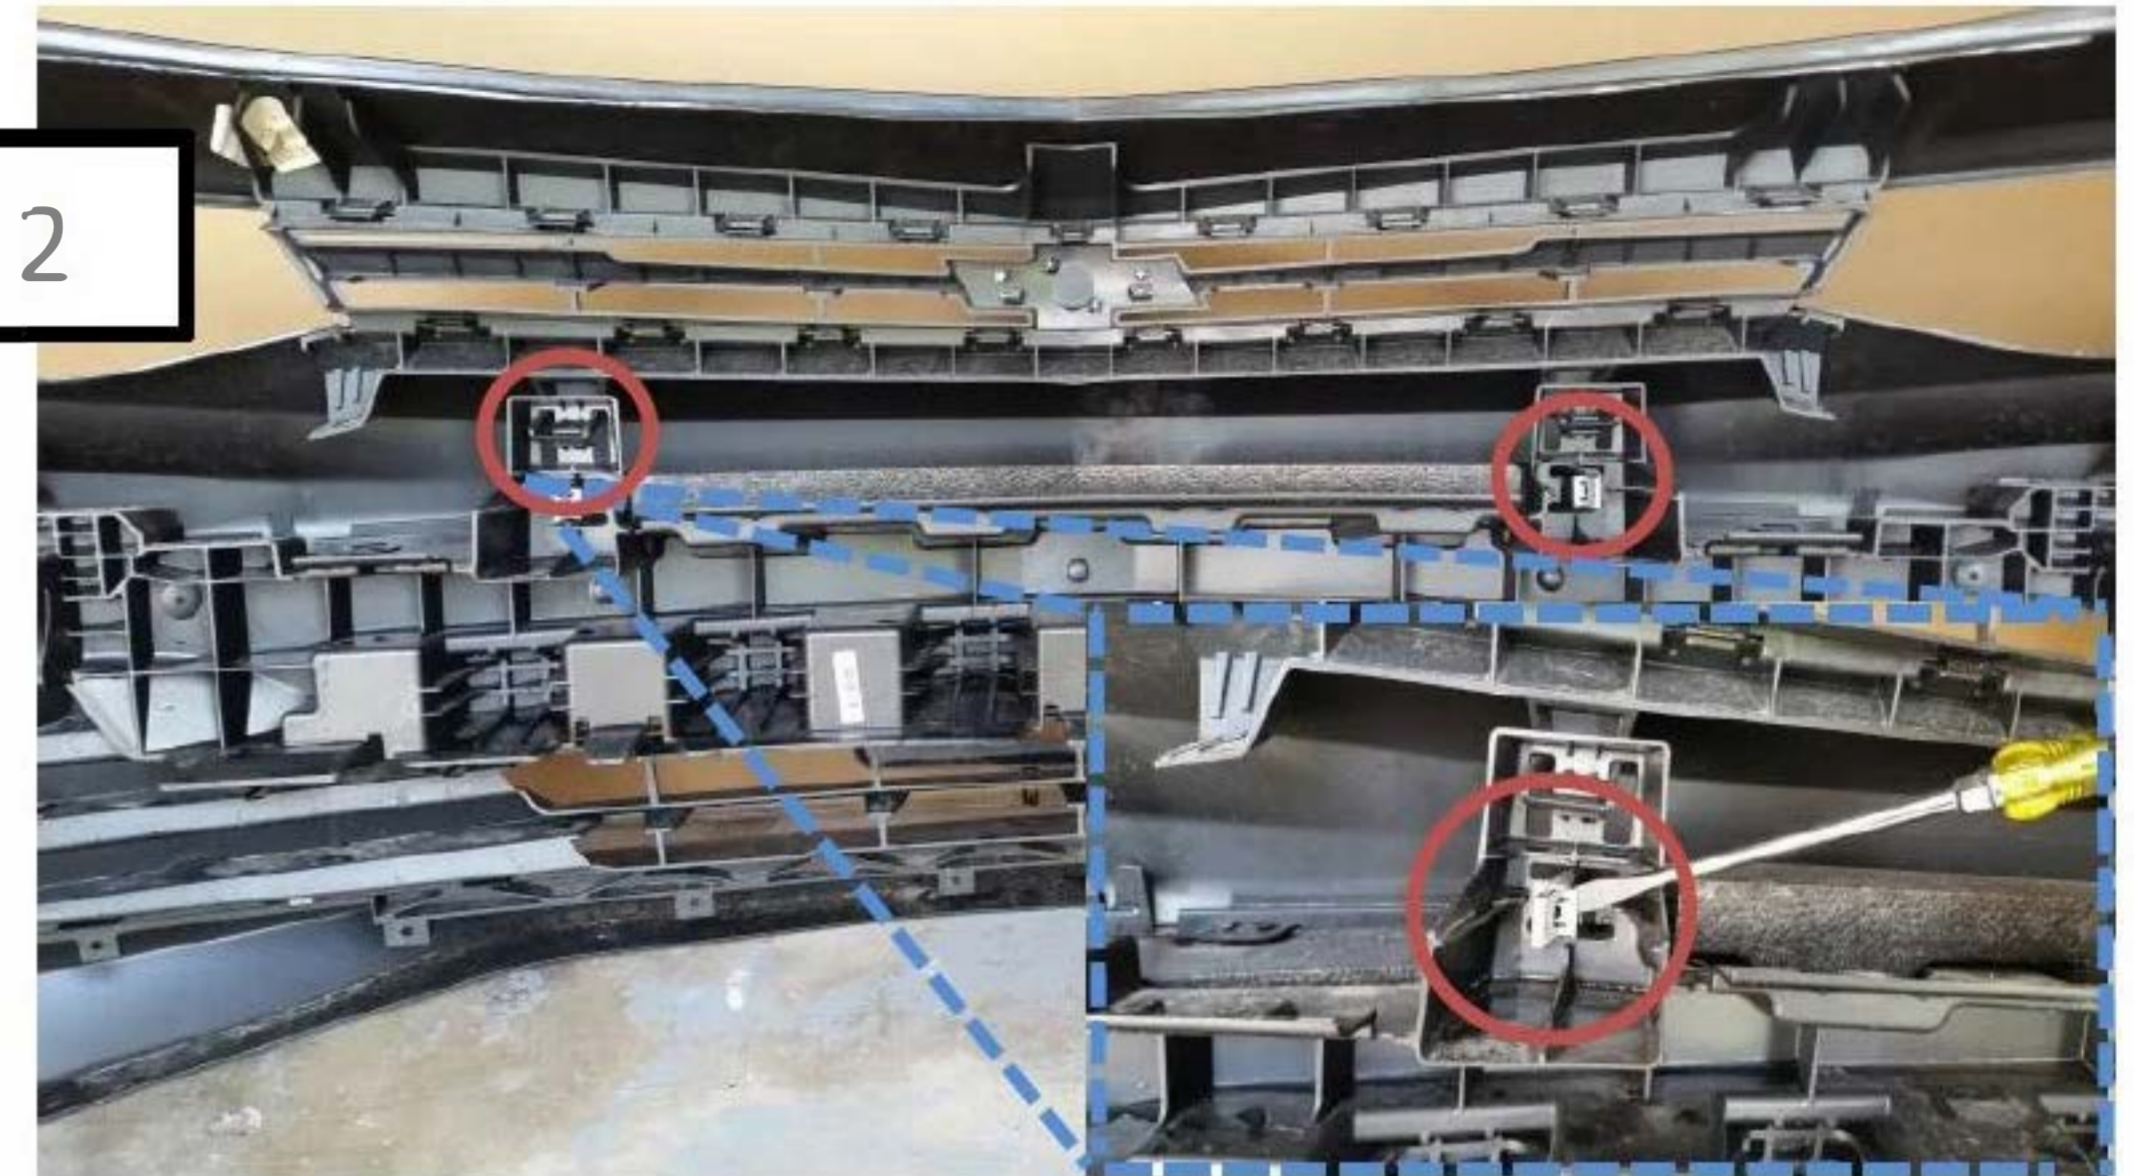

Remove the Styrofoam/Plastic bumper guard by prying off the left and right clips. Pull the guard away and set aside as it will be reinstalled later.

3




Begin prying each clip and pulling the grille away from the bumper. **Recommended: Starting on either the left or right; Pry the first top and bottom clips, then work your way towards center unsnapping each clip. Do the same for remaining side until grille is free.


4



Place the **MP CONCEPTS** grille into place by aligning (not yet snapping) all top and bottom clips. **Recommended: Start with aligning all bottom clips and nearly snapping the far left and right bottom clips. Then align all top clips.

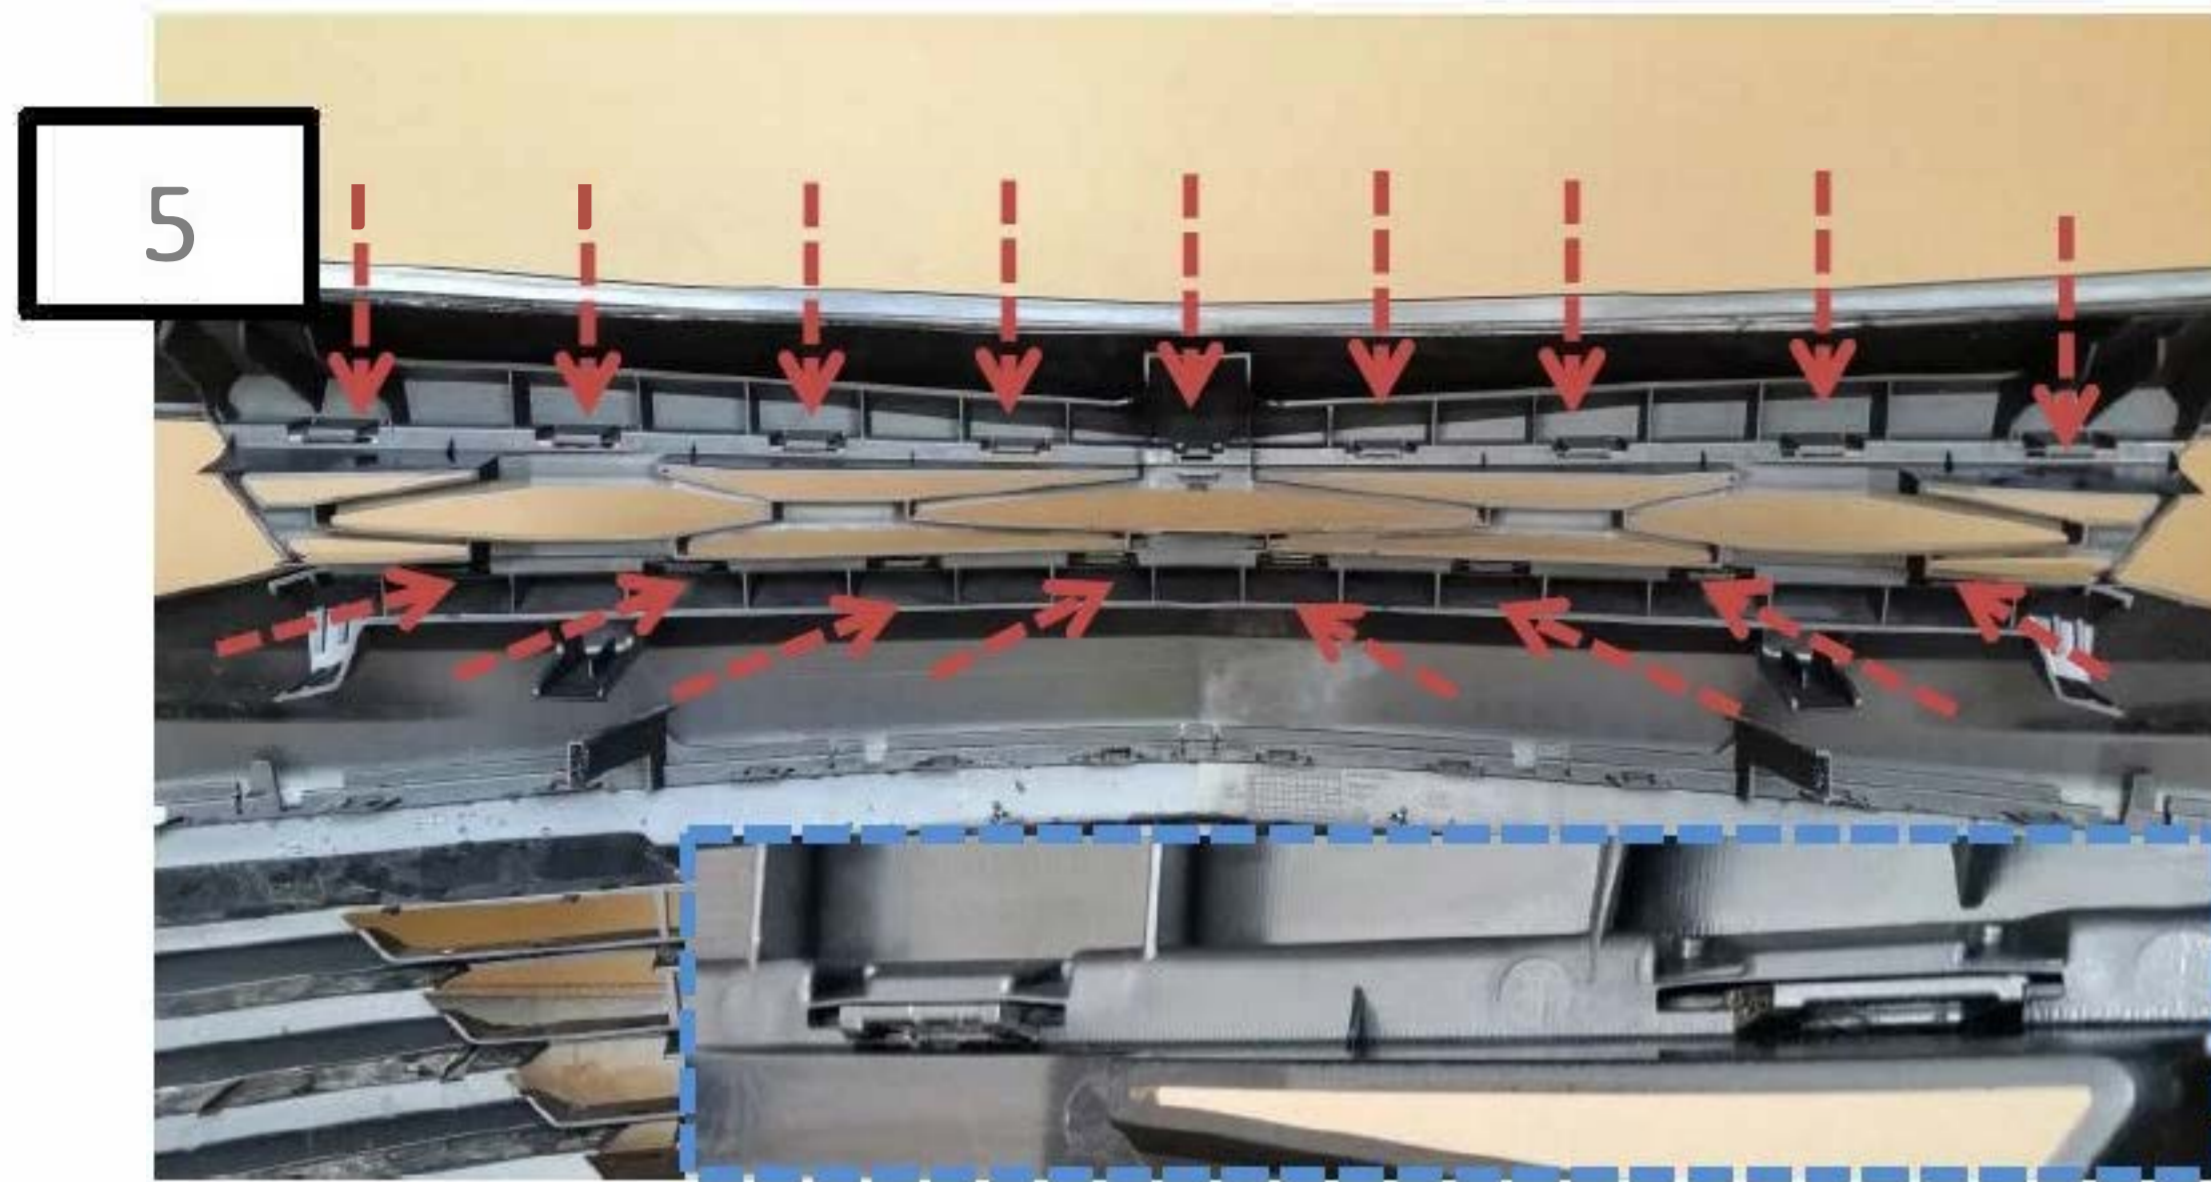

Push all clips into place ensuring that each and every clip latches.

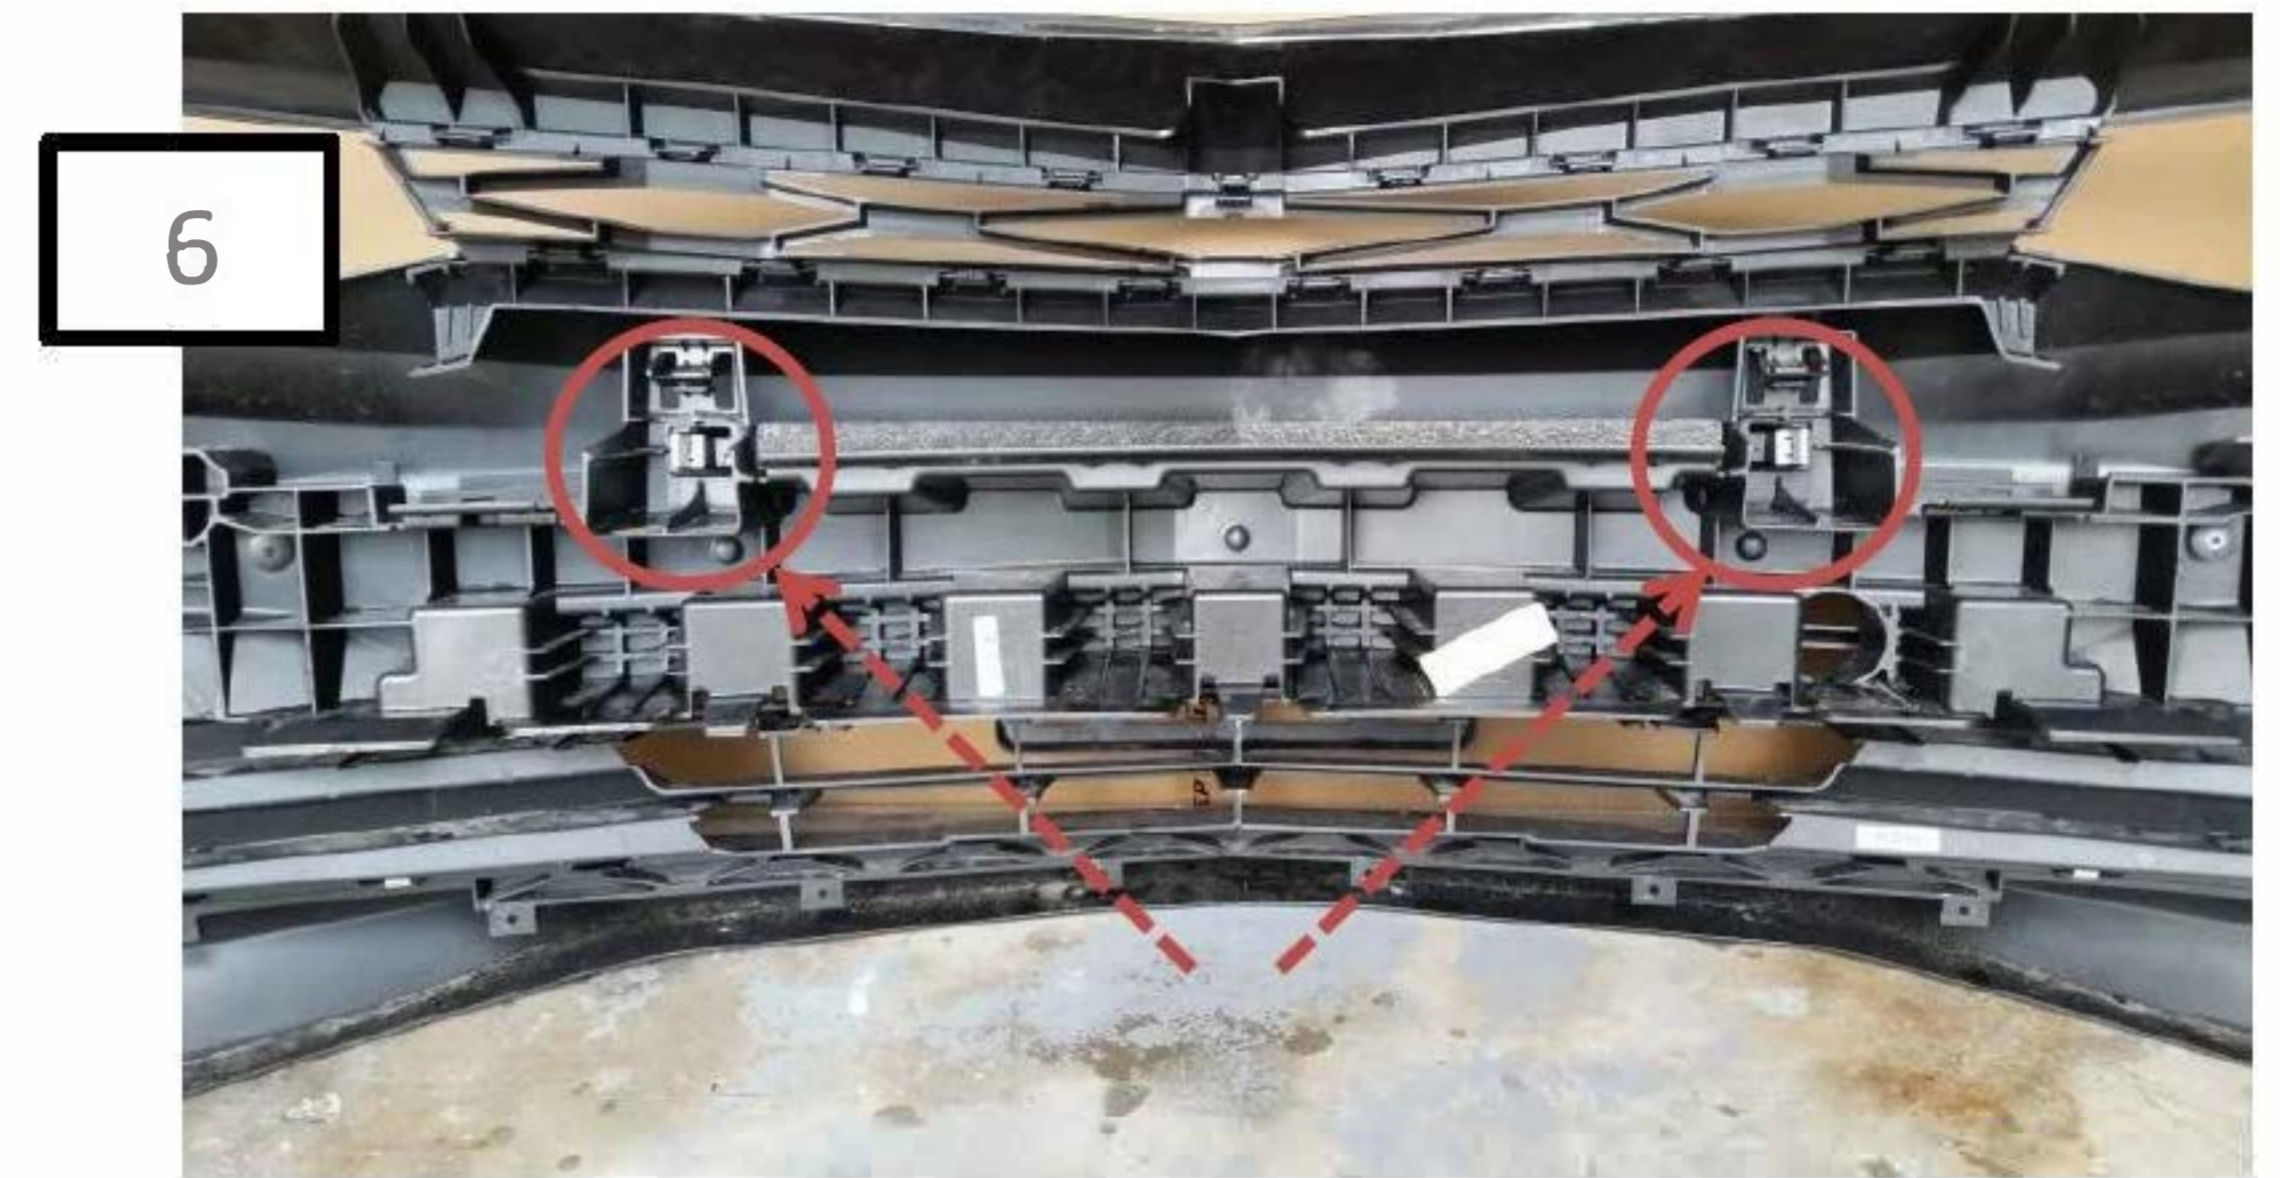

Slide the Styrofoam/Plastic bumper guard back into place and push the two clips firmly back into place.