MP CONCEPTS

SCAN TO SEE

INSTALL VIDEO

OLD GLORY FUEL DOOR MATTE BLACK

(2016-2024 CAMARO)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Fuel Door

TOOLS REQUIRED

Small Flat Blade Screw Driver

SKU # CC2007

STEP 1

Open the fuel door and locate the plastic retaining clip in the middle. If necessary, carefully peel back any stickers to expose the fuel door clip.

STEP 2

Using a small flat blade screw driver, gently pry open the clip.

STEP 3

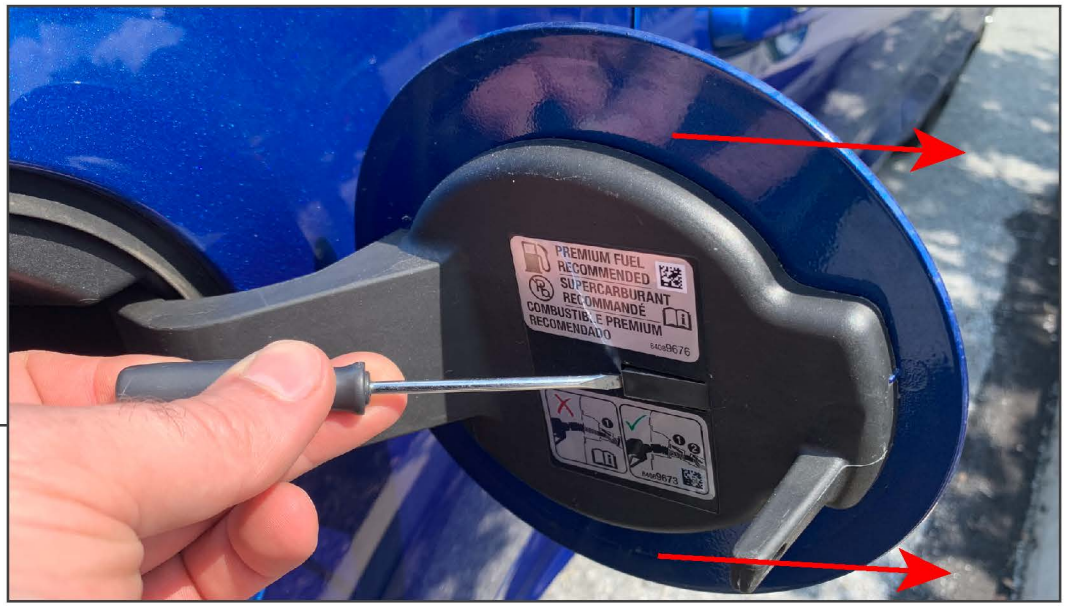

With the clip pulled back, slide the factory fuel door away from the vehicle.

STEP 4

Align the locating tabs and reinstall the new fuel door in reverse order.