




Wash the rear window thoroughly. Allow the area to dry. **Recommended: Wipe the edges of the rear window glass with isopropyl alcohol to ensure the cleanest surface possible.



Clean the bottom (side without the screw/nut) of 9 metal brackets with isopropyl alcohol. Then apply 3M tape to each pushing firmly into place. Note: There may be an extra bracket and 3M tape.

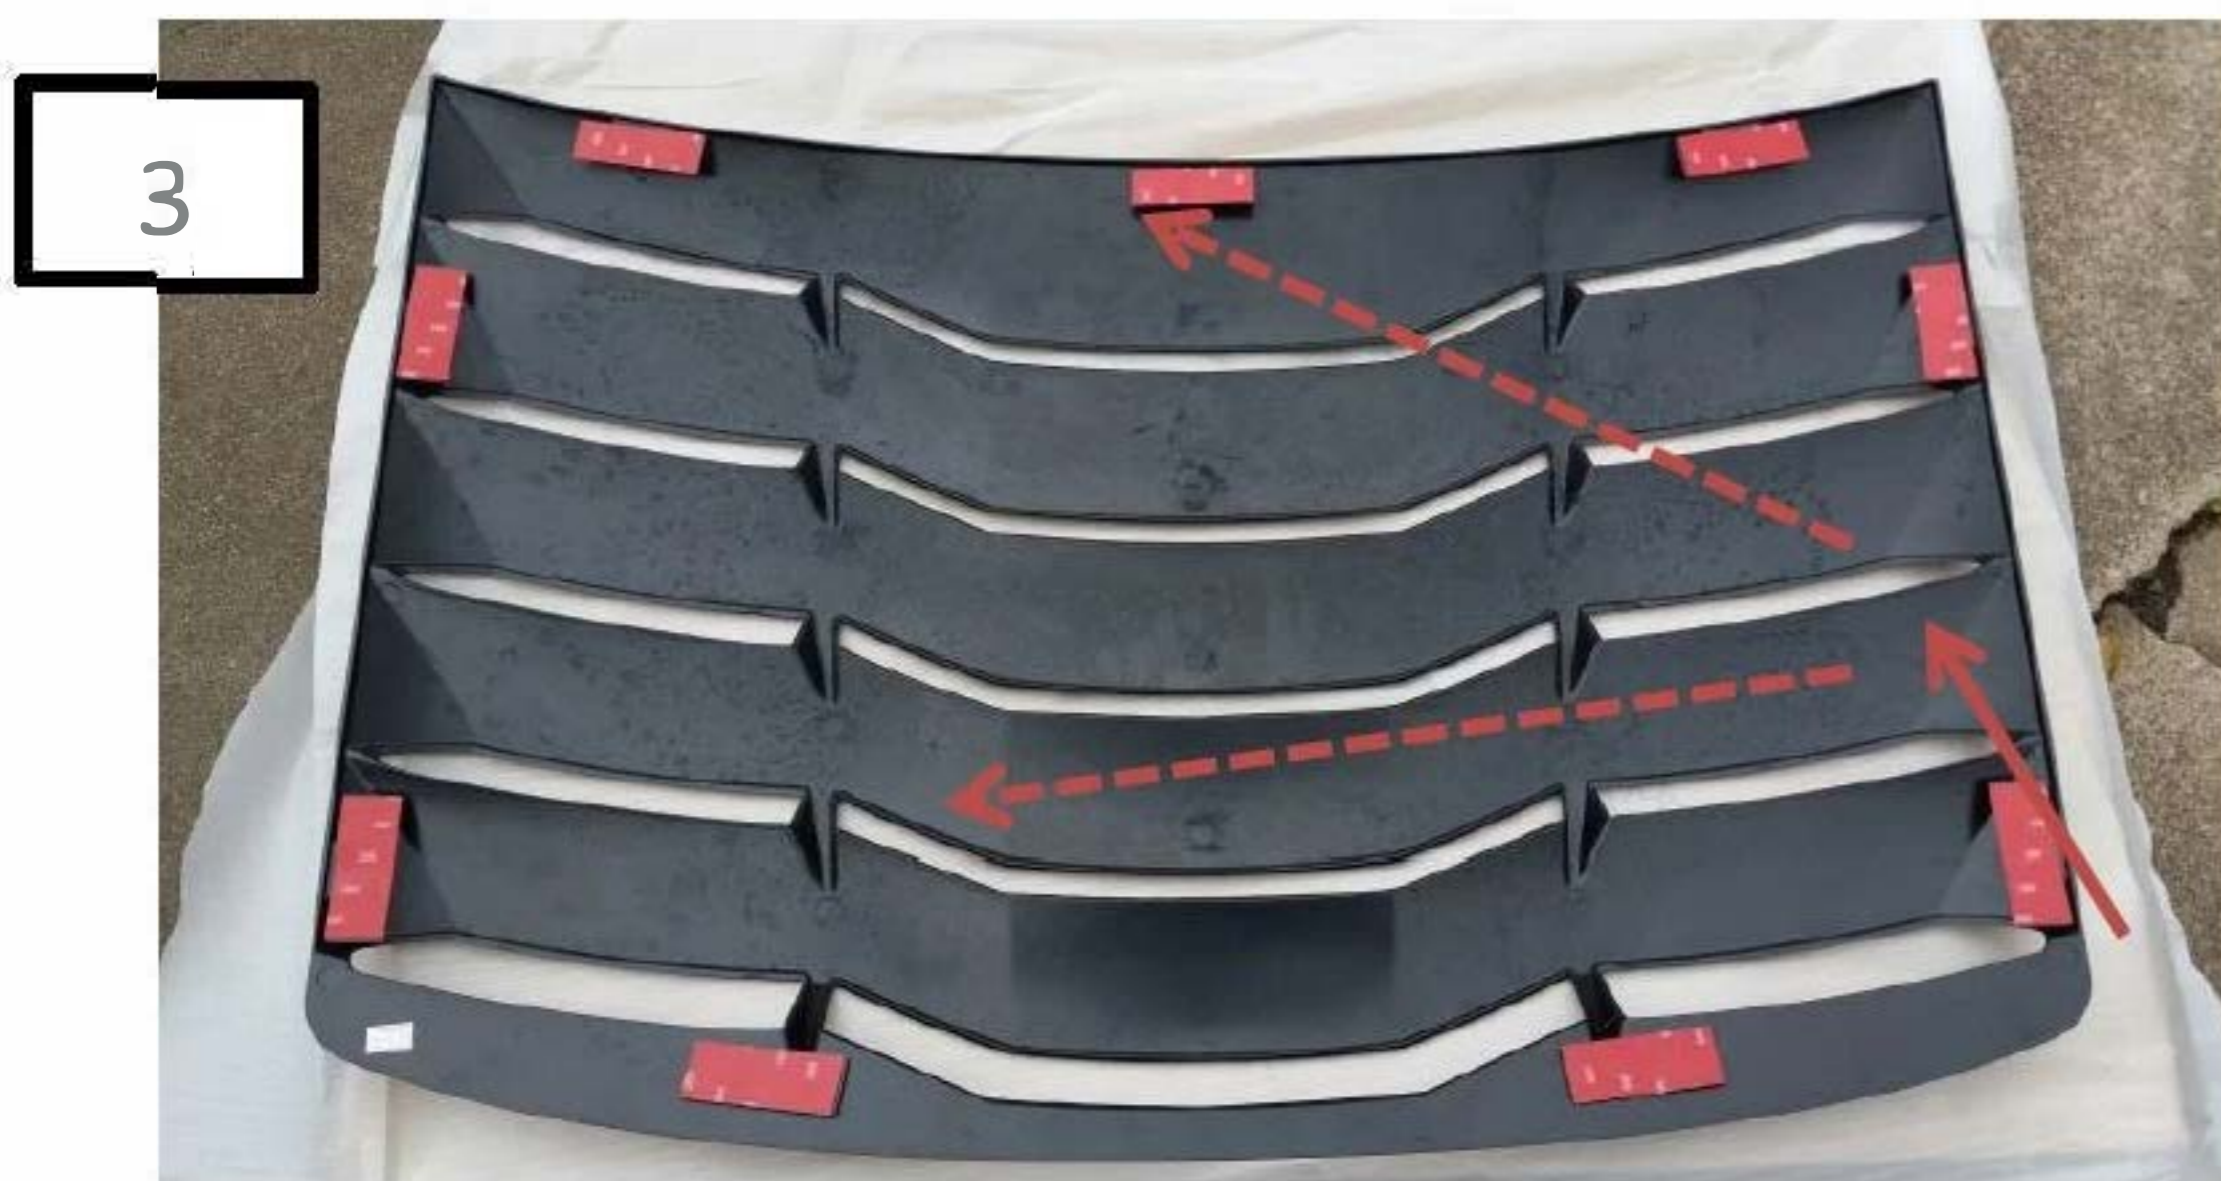


Install each bracket to the window louver as shown. Tighten only enough to keep the brackets from moving as you will remove them again in the coming steps.



It's good to have a person to help at this point. Lay the louver on the rear window to get a good feel for the way it will fit. Once comfortable, remove the 3M tape backing and carefully lay the louver into place.



****Watch for sharp edges!!** With the louver in place, push all of the metal brackets down firmly. Reach under the louvers as necessary to ensure all brackets are smooth, flush and firmly in place.

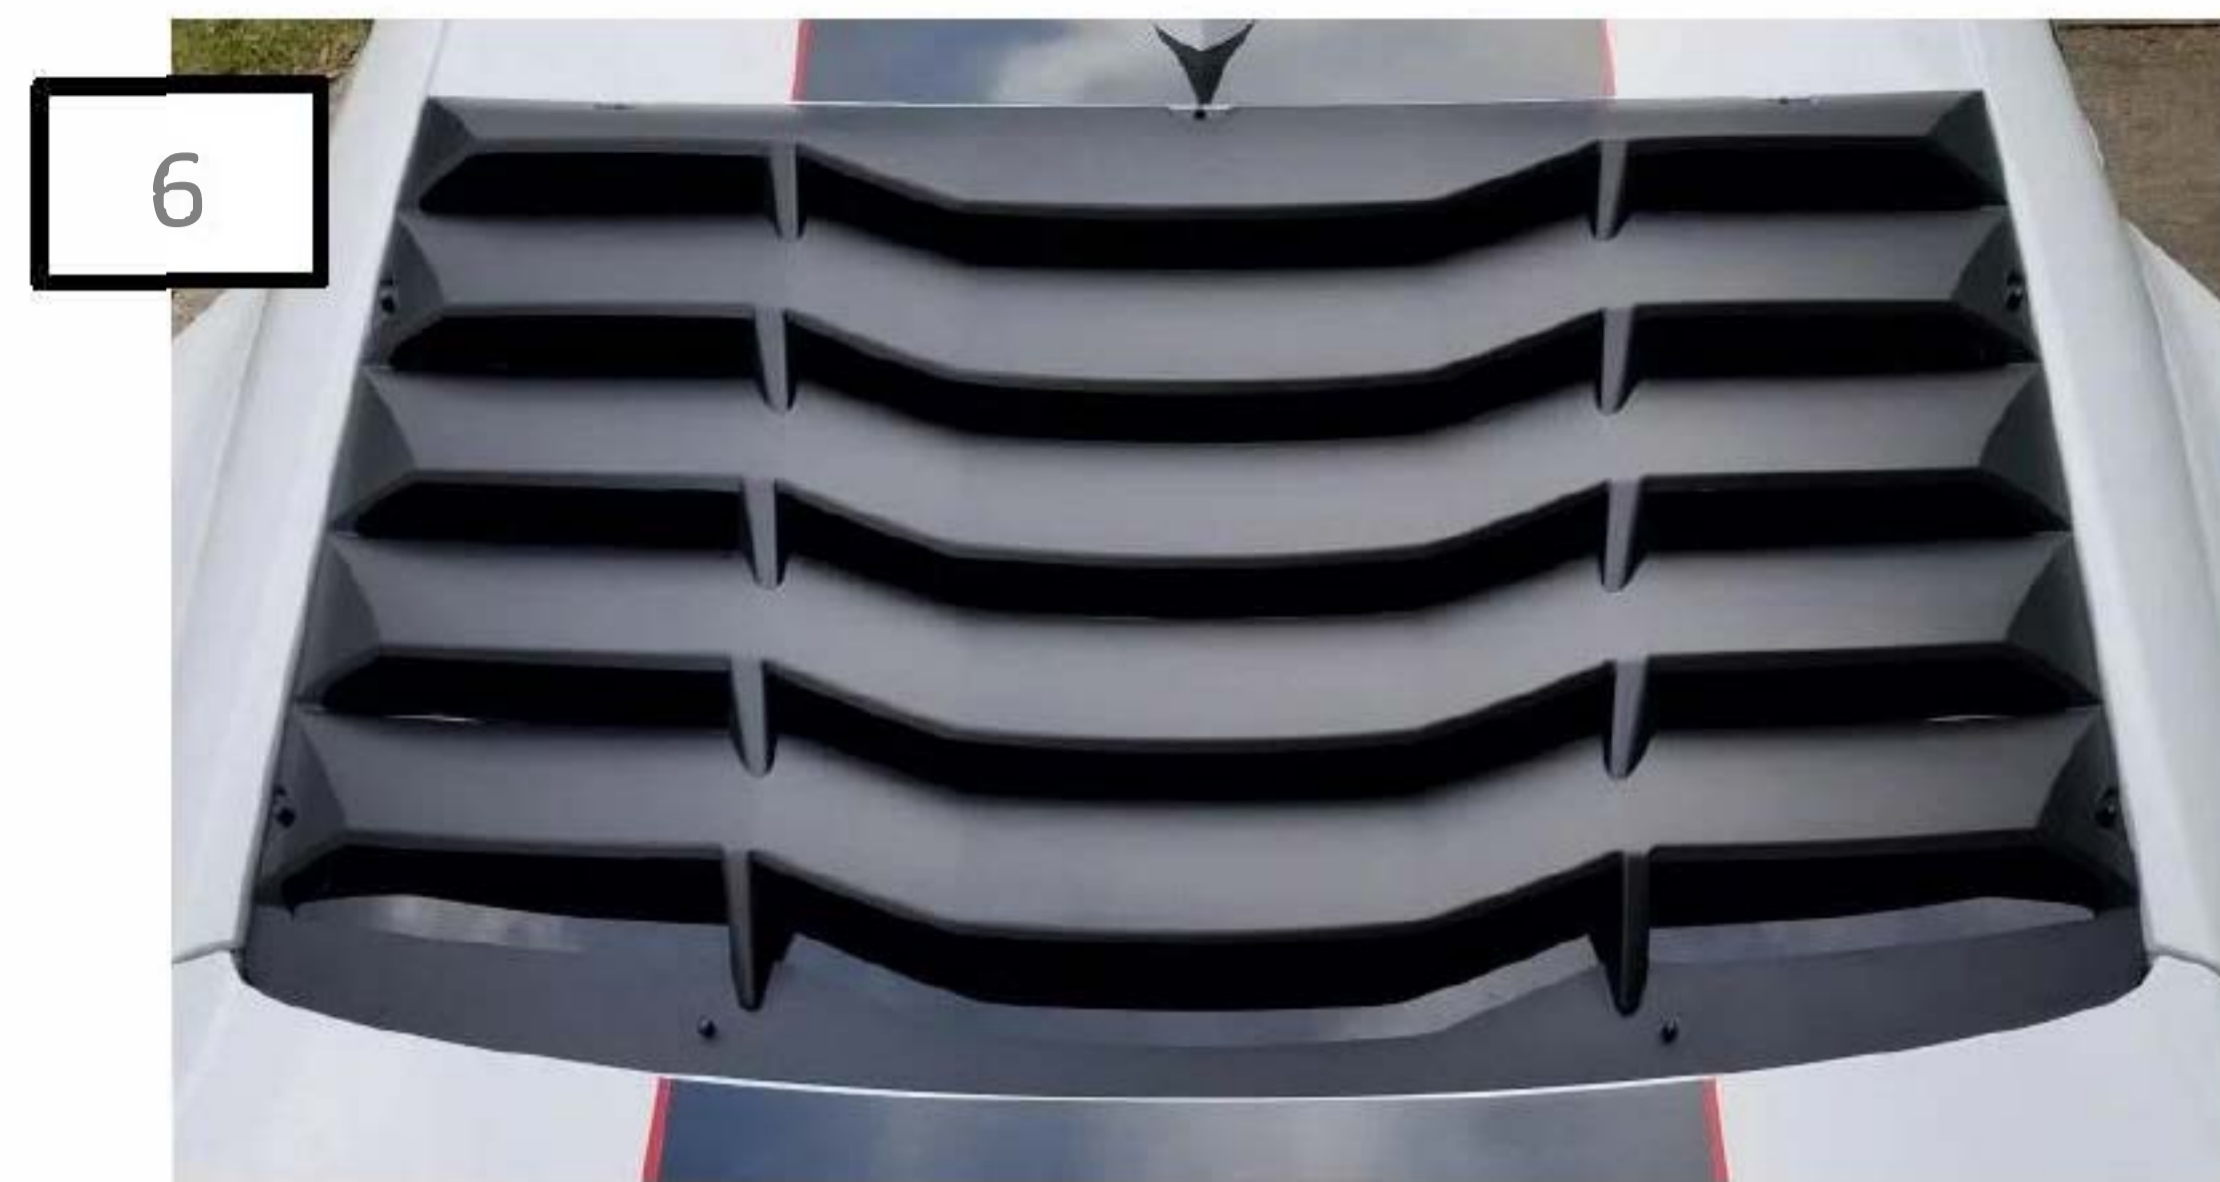

Remove all nuts and remove the louver with brackets still on window. Once again push each bracket firmly into place to ensure good adhesion. Place the louver back into place and tighten the nuts with a 7mm socket. Hand tight is also suitable.



Installation is now complete!