



BILLET HVAC TRIM RINGS

(2016-2023 CAMARO)


INSTALLATION INSTRUCTIONS

CONTENTS

(2) Small Rings (Outer Vents)
(2) Large Rings (HVAC Controls)

TOOLS REQUIRED

Isopropyl Alcohol
Microfiber Cloth

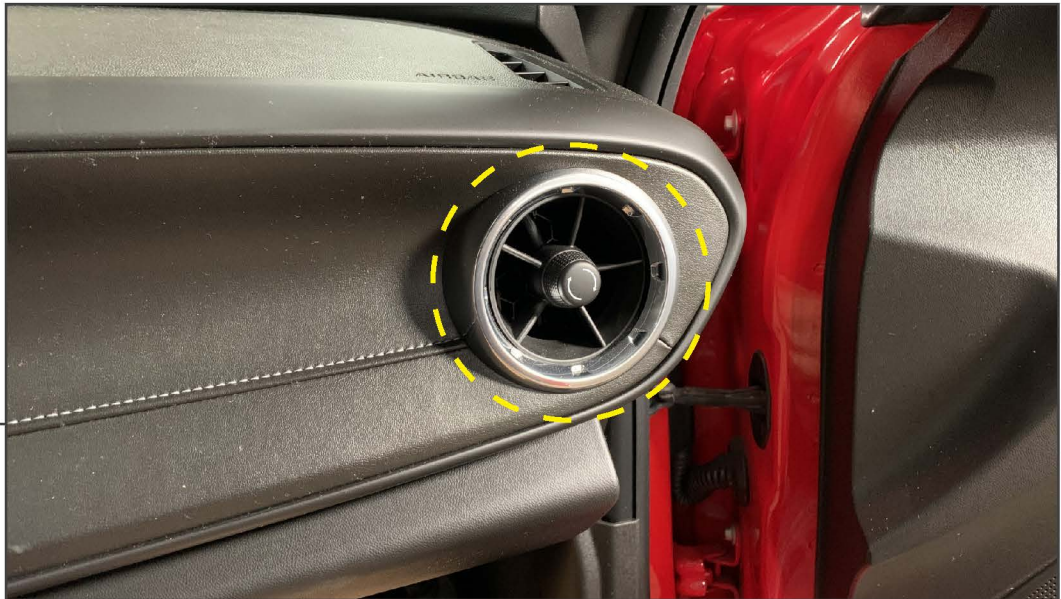

STEP 1

Clean the outside of the HVAC/vent rings using isopropyl alcohol and a microfiber cloth, and allow to fully dry.

Test fit the trim ring to the vehicle before peeling the tape backing to familiarize fitment. ******(2) rings are for the inner HVAC controls, while (2) rings are for the outer vents.



STEP 2

Peel the tape backing from the trim rings, and firmly press the rings to the vehicle HVAC control/vent to ensure proper adhesion.

Repeat steps 1-2 for all remaining vent trims. Installation is now complete.