



---

# CARBON SHIFTER PADDLE EXTENSIONS

(2016-2023 CAMARO)

---

## INSTALLATION INSTRUCTIONS

## CONTENTS

---

- (1) LH Paddle Extension
- (1) RH Paddle Extension
- (2) Adhesion Promoter Prep Pads
- (2) Alcohol Prep Pads

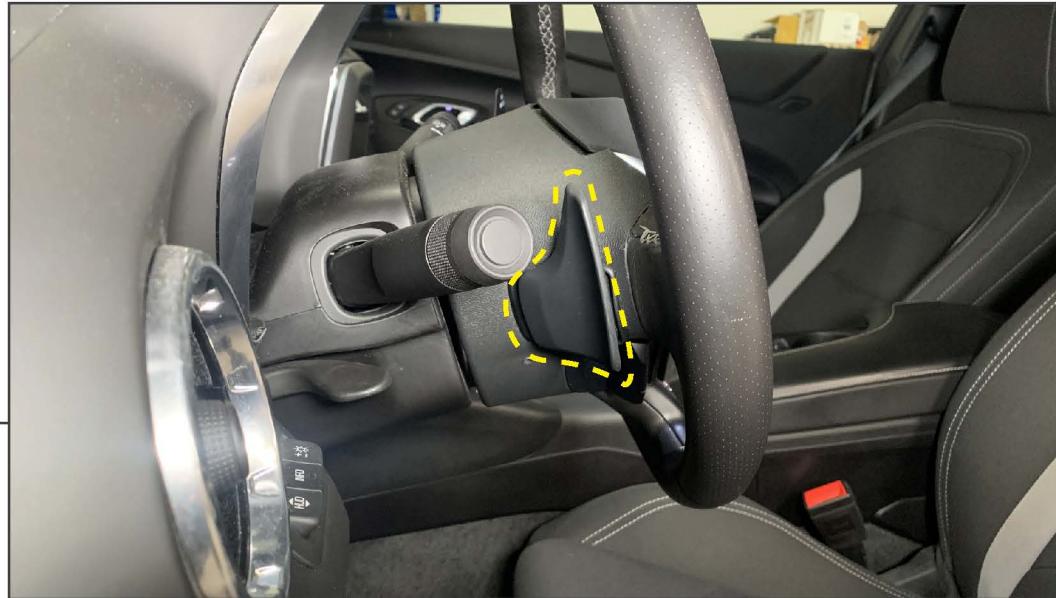
## TOOLS REQUIRED

---

N/A

SKU # CC21973

---

**STEP 1**

Clean the vehicle paddle shifters using the included alcohol prep pads. Then, clean the paddle shifters using the adhesion promoter prep pads, and allow to fully dry. Once dry, familiarize the fitment of the shifter extensions to the vehicle before removing the tape backing.

---

**STEP 2**

Peel the double sided tape backing, and firmly press the paddle shifter extension to the vehicle paddle shifter. Apply firm pressure to ensure proper adhesion.

---

**STEP 3**



Repeat steps 1-2 for the remaining paddle shifter extension.

Installation is now complete.