




CAMARO UNDERHOOD LED KIT

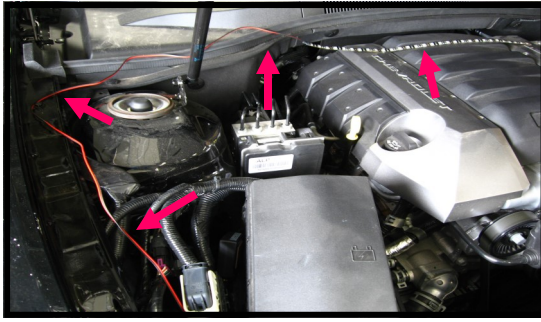


Lay out wiring so long strip will center on the engine cover and the short strip centers behind the radiator on the radiator support. Plan wire routing to best hide the wiring along factory wires or between the fender lips.

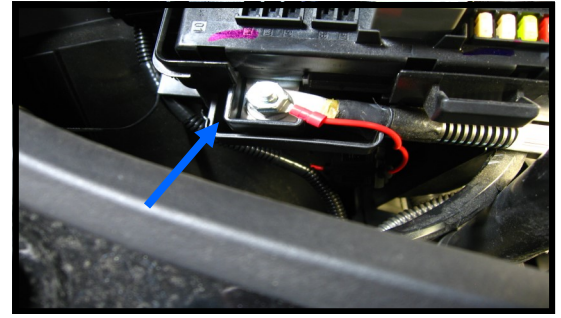


Open the under hood fuse box and attach red wire using the supplied nut and washer. Plan your wire routing.

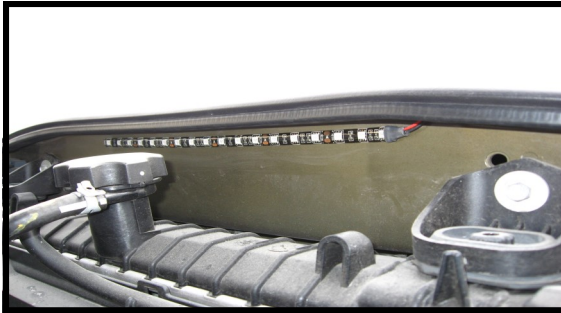

This shows the front strip centered and mounted on the radiator support. Clean area with alcohol pads before attaching strips. Wires can be hidden under weatherstrip but be careful not to damage wires.

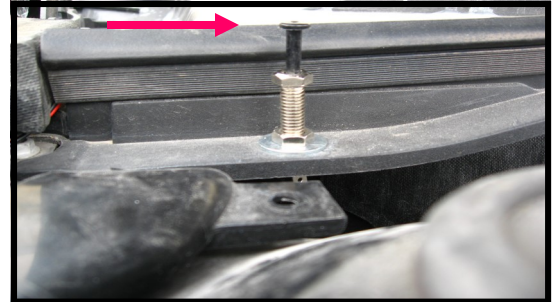

Remove the retainer in this position so you can mount the switch in its place. Its located by the passenger cowl behind the shock tower. Install the switch with the large flat washer on top, put the star washer and second nut on the bottom and adjust the switch so the top of the plunger is level with the top of the weatherstrip (red arrow). Black wire gets connected to the bottom of this switch. Plan your wire routing to hide the wires from sight.

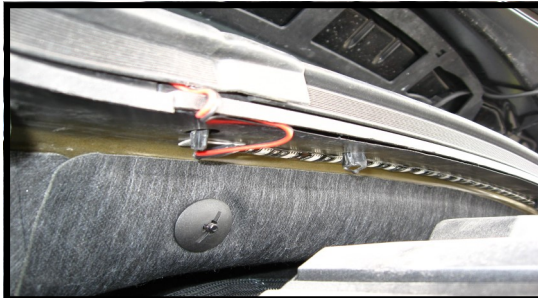

Center the long strip under the cowl, wipe area with alcohol pads and mount strip as shown. Wires can be hidden under the weatherstrip but be careful not to damage them. Make sure the black wire will reach the bottom of the switch. The black wire will move some when the switch is closed with the hood. Test the lights to make sure they go off when the hood is closed. Adjust the switch if necessary.