



# ADJUSTABLE REAR UPPER TRACTION RODS

(2016-2024 CAMARO)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

(2) Adjustable Rear Upper  
Traction Rods

### TOOLS REQUIRED


---

18mm Socket  
18mm Wrench  
Ratchet  
Floor Jack  
Jack Stands  
Measuring Tape  
Adjustable Wrench

**STEP 1**

Lift and support the rear of the vehicle using a floor jack and jack stands. Remove the rear wheels from the vehicle.

Locate the vehicle rear upper traction arm.

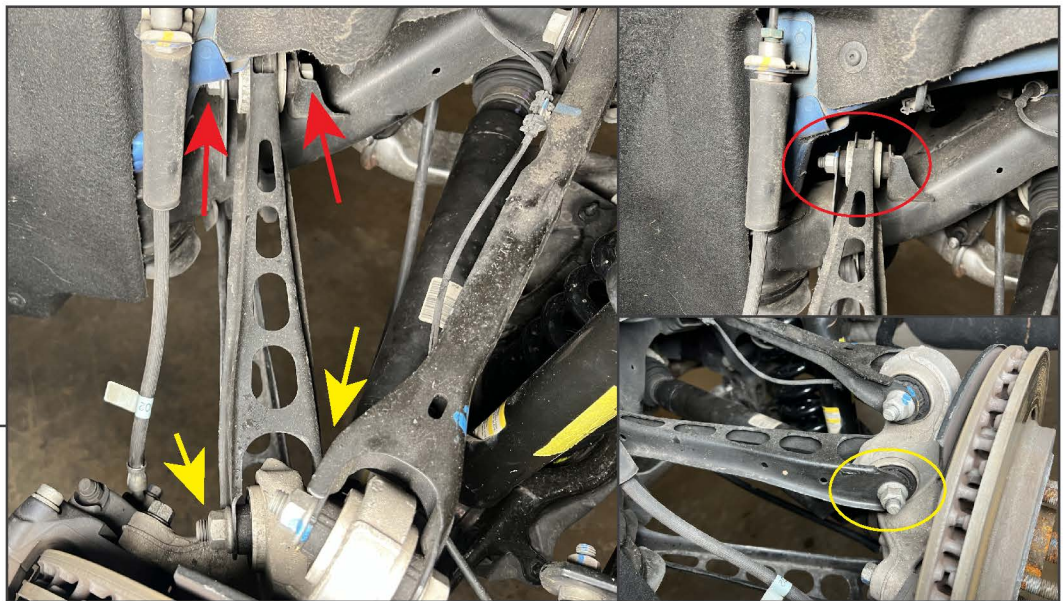**STEP 2**

Remove (1) 18mm nut and bolt from the vehicle subframe. Then, remove (1) 18mm nut and bolt from the vehicle knuckle. Use a pry bar to remove the original traction arm from the vehicle.

Note: OEM hardware will be reused in the original locations during installation.




**STEP 3**

Place the original traction arm and the new adjustable traction rod on a flat surface. Measure the bushing eyelet distance on the original traction arm. Then, evenly adjust the new traction rod to meet the OEM measurement.

**STEP 4**

Fit the new adjustable traction rod into the vehicle subframe and knuckle, and secure into place using OEM hardware in the original locations.

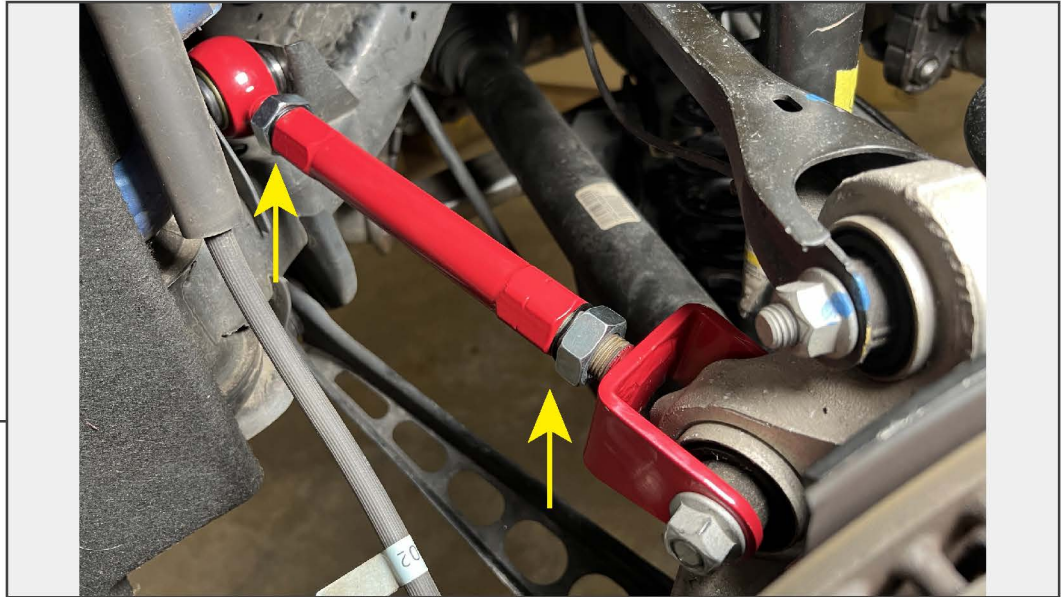

**STEP 5**

With both jam nuts loose, turn the traction rod hex points using an adjustable wrench to adjust the traction rod in/out. Once set to the desired length, tighten the jam nuts to lock the adjustment.

**STEP 6**

Repeat steps 1-5 for the remaining adjustable traction rod. Professional alignment is required to ensure proper wheel alignment.

Installation is now complete.