

SPEEDFORM

LOWER GRILLE OVERLAY

(2015-2023 CHALLENGER WITHOUT ADAPTIVE CRUISE)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Lower Grille Overlay
(4) Phillips Bolts
(4) Toggle Nuts

TOOLS REQUIRED

Phillips Screwdriver


SKU # CH2943

STEP 1



Fit the included (4) Phillips bolts through the face of the grille overlay, and then thread the included (4) toggle nuts to the Phillips bolts. The toggle nuts will fit through the lower grille slots, and while tightening the Phillips bolts, the toggle nut will open and secure the overlay into place.

STEP 2

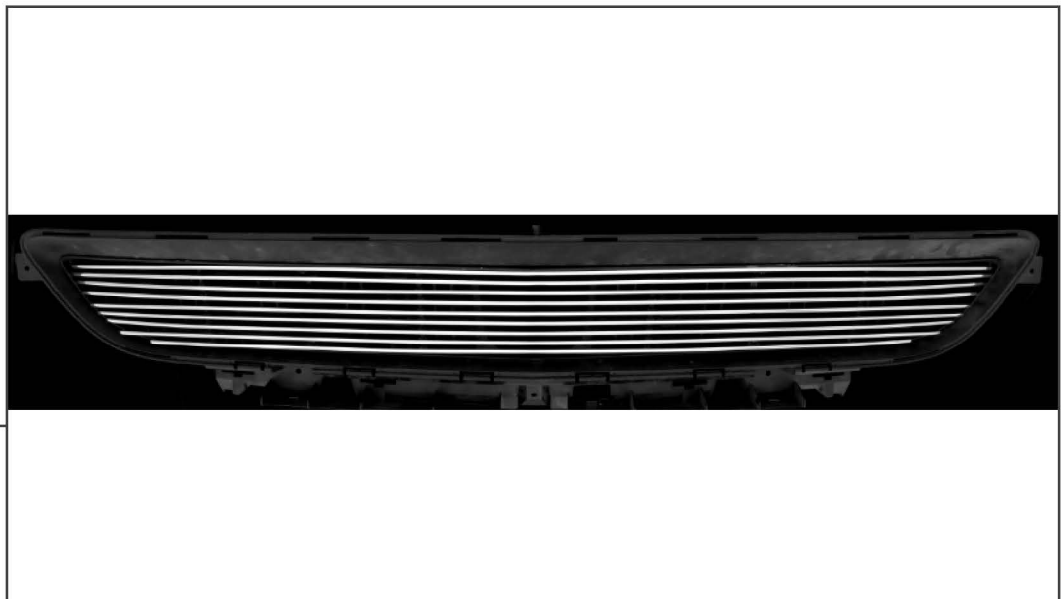

Fit the overlay to the vehicle while aligning the toggle nuts through the vehicle grille. Then, begin to tighten the Phillips bolts.

Adjust the overlay to best fit the vehicle, and tighten the Phillips bolts through the overlay face. Gently bend the fins to best fit the vehicle, if necessary.

Installation is now complete.