



ALUMINUM DEMON STYLE HOOD

(2008+ CHALLENGER)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Hood
- (1) Hood Liner
- (1) Hood Insert

TOOLS REQUIRED

- 10MM Socket
- 13MM Socket
- 1/4" or 3/8" Drive Ratchet
- Panel Removal Tool

SKU #CH3931

STEP 1




Begin by raising the hood to access to the under hood insulation. Using a trim panel removal tool, carefully remove the (9) Push clips securing the insulation to the underside of the hood.

STEP 2




Locate and remove the windshield washer hose and nozzles. Disconnect the hose, and then gently pry the nozzle away from the hood.

STEP 3

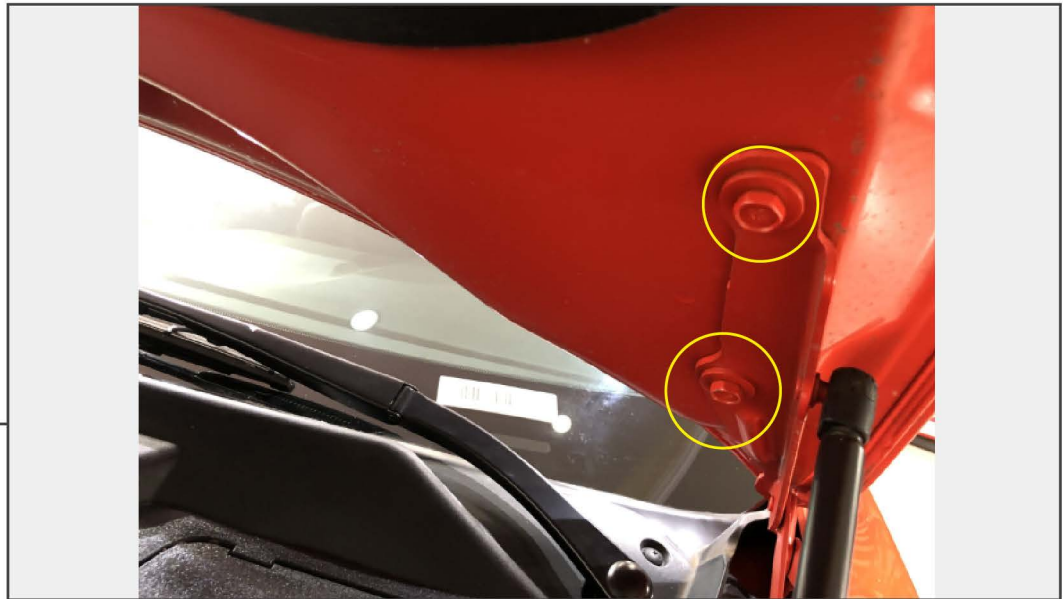

With a helper, remove the (2) 13mm nuts on each hood hinge. Then carefully remove the hood from the vehicle.

STEP 4

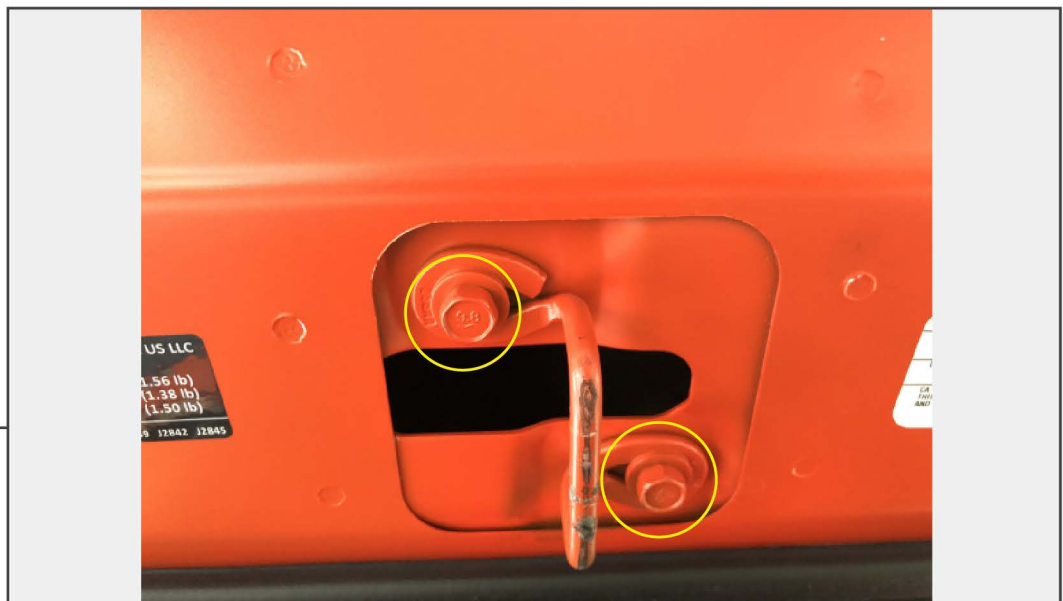

Using a 10mm socket, remove the (2) bolts securing the hood latch to the hood.

STEP 5



Transfer the latch to the new hood.

STEP 6



Install the hood insert by firmly pressing it into place. The insert will snap/clip into the hood.

STEP 1

With a helper, reinstall the hood using the factory bolts. Loosen the mounting bolts and adjust the hood front-to-back and side-to-side for best fit. Slowly close the hood and adjust as needed. Then, reinstall the windshield washer hoses and nozzles.

STEP 2

Install the supplied hood liner using the factory clips removed in Step 1. Installation is now complete.