



DEMON STYLE FENDER FLARES

(2008-2020 CHALLENGER)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Front Fender Flare
- (1) LH Front Bumper Flare
- (1) RH Front Fender Flare
- (1) RH Front Bumper Flare
- (1) Set of Fender Flare Liners
- (1) LH Rear Fender Flare
- (1) RH Rear Fender Flare
- (60) Screws
- (1) Tape Roll
- (8) Yellow Clips
- (24) White Clips

TOOLS REQUIRED

- Drill and 5/16" Drill Bit
- Masking Tape
- Razor Blade
- Phillips Head Screw Driver


SKU # CH3935

STEP 1



Begin by thoroughly cleaning the rear quarter panels and inner fender lip with automotive grade soap and water. Allow the panel time to completely dry. Use isopropyl alcohol to remove wax and grease from the mounting surfaces. **A clean surface is crucial for proper adhesion of double sided tape.

STEP 2

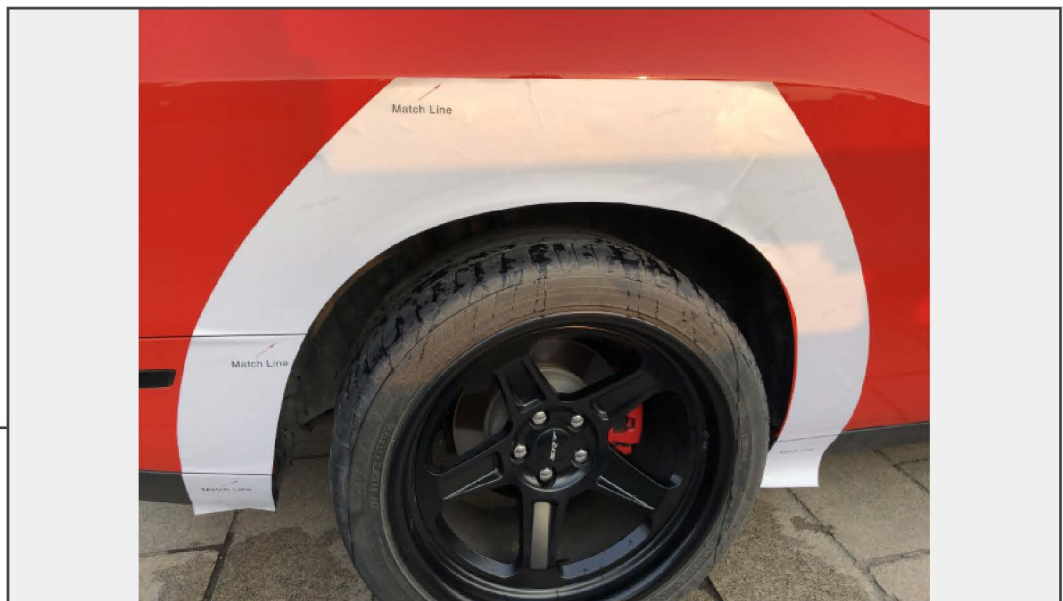

Using the supplied drill templates, align the templates to the corresponding body lines. Mark the drilling locations for Step 3.

STEP 3



Using a 5/16" drill bit and drill, carefully drill the locations marked in Step 2.

STEP 4



Install the supplied clips onto the fender flares. Note the locations that require the yellow clips circled above. Use white clips in all other locations.

STEP 5



Install the supplied 3M double sided tape as shown above. **Note: Ambient air temperature needs to be above 50°F for proper tape adhesion.

STEP 6



Align the clips with the holes drilled in Step 3. Firmly press the flares onto the vehicle. Apply firm even pressure over the tape mounting locations to ensure proper adhesion.

**Front Install
STEP 1**



Follow the same process to clean the front fenders as you did the rear. Align the template to the vehicle and drill the 5/16" holes. Install the clips and tape to the fender flares.

STEP 2



Align the clips with the holes drilled in Step 1. Firmly press the flares onto the vehicle. Apply firm even pressure over the tape mounting locations to ensure proper adhesion.

STEP 3



Install the supplied 3M double sided tape to the bumper portion of the front flare as shown above. **Note: Ambient air temperature needs to be above 50°F for proper tape adhesion.

STEP 4



Ensure the bumper is clean and dry. Then install the bumper portion of the fender flare to the vehicle. Apply firm even pressure to the tape locations to ensure proper adhesion.

STEP 5



Install the fender liner extensions using the provided screws.

STEP 6



Installation is now complete.