

SPEEDFORM

ROOF SPOILER

(2011-2023 CHALLENGER)

INSTALLATION INSTRUCTIONS

CONTENTS


- (1) Roof Spoiler
- (2) 3M Tape Rolls
- (2) Alcohol Prep Pads
- (2) Adhesion Promoter Prep Pads

TOOLS REQUIRED

- Window Cleaner
- Microfiber Cloth

SKU # CH43381

SPEEDFORM

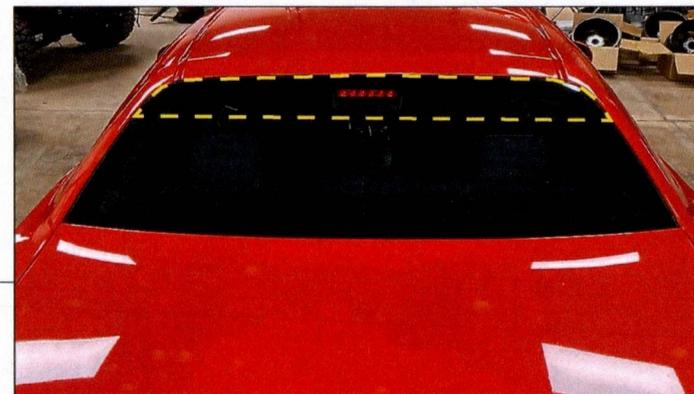

STEP 1

Clean the rear window using window cleaner and a microfiber cloth, and allow to fully dry.

Clean the top of the rear window using (1) alcohol prep pad, and allow to fully dry.
Clean the top of the rear window using (1) adhesion promoter prep pad, and allow to fully dry.



STEP 2

Place the roof spoiler on a workable surface.

Clean the bottom of the spoiler using (1) alcohol prep pad, and allow to fully dry.
Clean the bottom of the spoiler using (1) adhesion promoter prep pad, and allow to fully dry.

Apply the included double sided tape to the bottom of the spoiler.

SPEEDFORM



STEP 3

Before removing the red tape backing, test fit the roof spoiler to the top of the rear window to familiarize fitment. Once familiar, peel the tape backing and firmly press the spoiler to the rear window.

Installation is now complete.