

# Wire Mesh Grille Instruction


## The below install is for reference.

Tools Required: Socket Set / Adjustable Wrench/ cut tooling

NOTE: Be Careful not to scratch the grills Surface.

(1) Before installation, please check new mesh grille fitment for your vehicle model.

Open the box, take out new mesh grille, and put it into opening grille shell to test, to be sure it is a match for your vehicle. (Center style grille for 2015 challenger will need to keep the OEM grille center flat, if your grille has surround trim, please remove surround trim first, see below pc-1, then install with hardware we supplied)

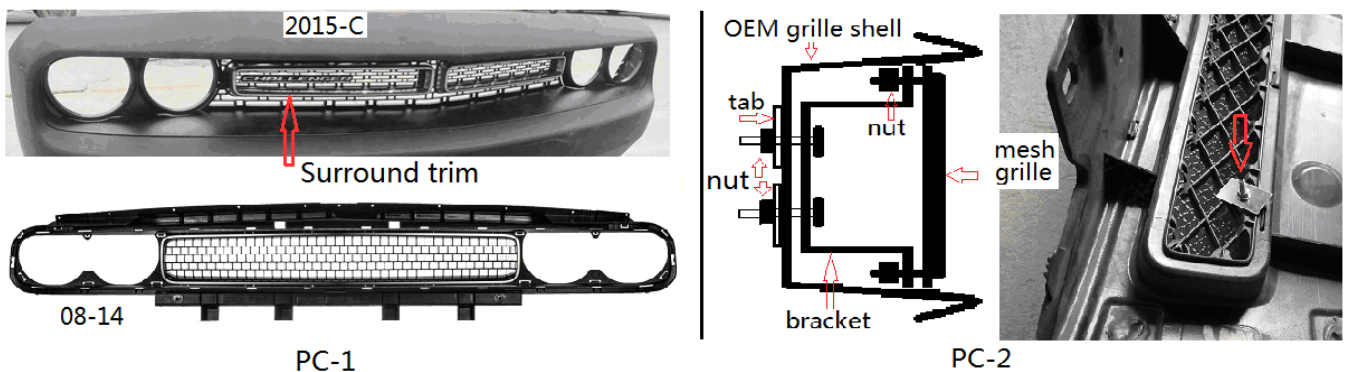

(2) Phantom Wire Mesh Grille, please install bracket on the mesh grille that we supplied first, see above PC-2. There is one welded tab on each side of mesh grille, when the bracket is installed, please put the mesh grille into opening grille shell, then mark and drill a 3mm hole according to the welded tab holes position, place U-clip on the welded tab. Now place all flat tabs and nuts on the back of grille shell as above PC-2 showed, hold them and tighten the nuts, the side tabs hold with two screws we supplied.

(3) Reinstall grille shell is complete for installation.



These instructions are for reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend a professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!