



DEMON STYLE BODY KIT

(2008-2014 CHALLENGER FACTORY NON-WIDEBODY)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Front Bumper	(66) Screws
(1) Upper Grille	(1) Tape Roll
(1) Lower Grille	(8) Yellow Clips
(2) Fog Light Covers	(24) White Clips
(2) Splash Shield Guards	
(2) LED Marker Lights	
(1) LH Front Fender Flare	
(1) RH Front Fender Flare	
(1) Set of Fender Flare Liners	
(1) LH Rear Fender Flare	
(1) RH Rear Fender Flare	

TOOLS REQUIRED

- Jack and Jack Stands
- Trim panel Removal Tool
- 7,8, 10mm Socket
- 10mm Wrench
- Drill and 5/16" Drill Bit

SKU # CH6348

**Bumper
Installation**

STEP 1



Raise and support the front of the vehicle. Open the hood and remove the plastic radiator cover.

STEP 2




Using a trim panel removal tool, remove the (6) push clips across the top of the radiator cover.



STEP 3

Using a 10mm wrench, locate and remove the 10mm nut that secures the bumper to the fender just behind the headlight.

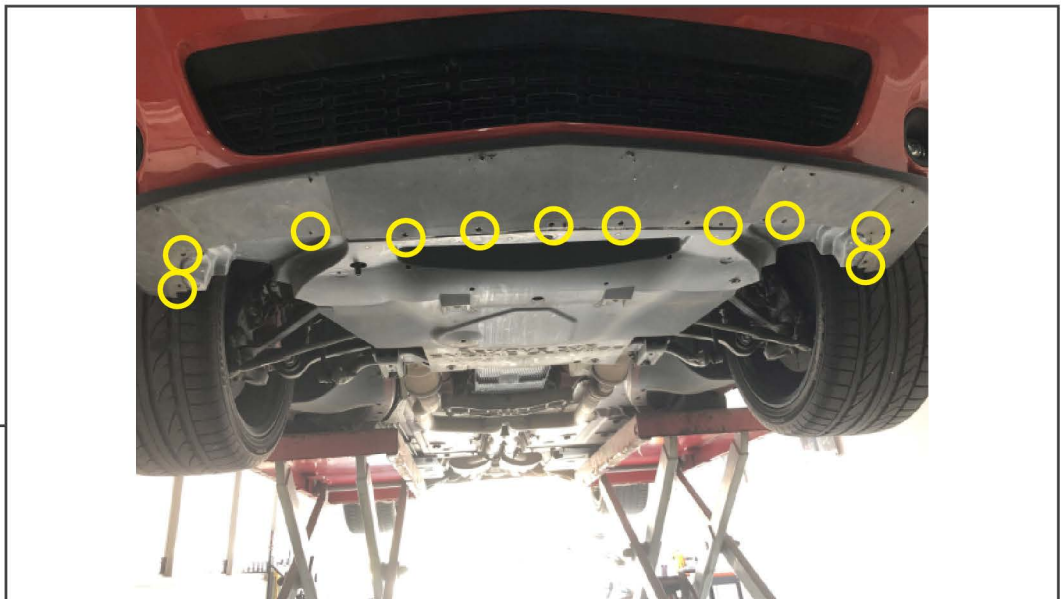

STEP 4

Using a 7mm socket, remove the (11) screws securing the splash shield to vehicle.

STEP 5




Using the trim panel removal tool, remove the (3) push clips securing the fender liner to the bumper.

STEP 6



Peel back the fender liner to access the (1) 10mm bolt.

STEP 7

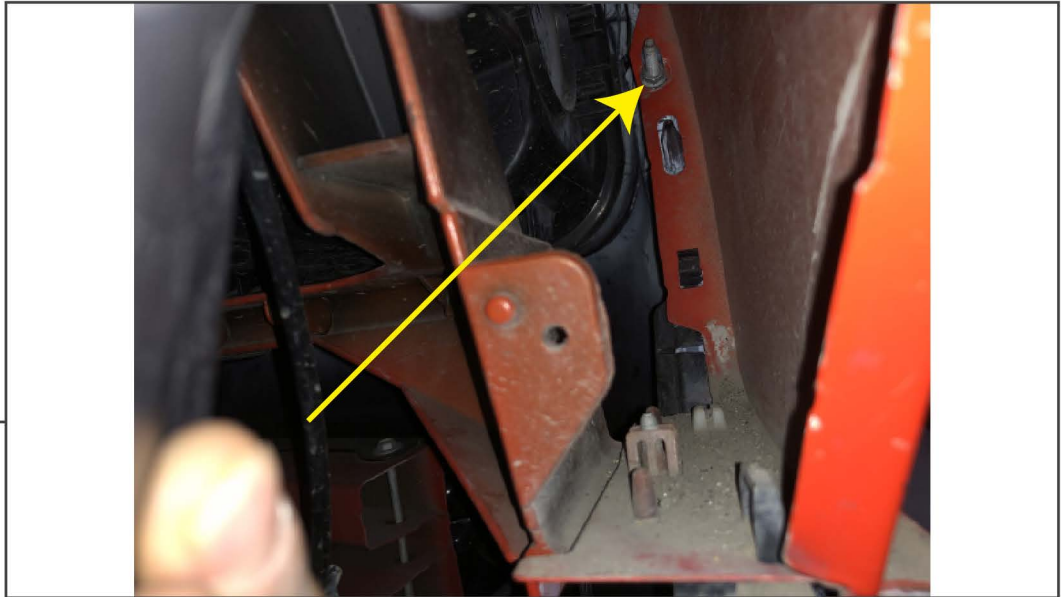

Peel back the fender liner to access the (1) 10mm bolt.

STEP 8



With a helper, carefully remove the bumper from the vehicle. Unplug the wiring harness from the bumper.



STEP 9


Using a panel removal tool, remove the harness from the factory bumper and transfer it to the new bumper cover.



STEP 10

Step description here...

STEP 11

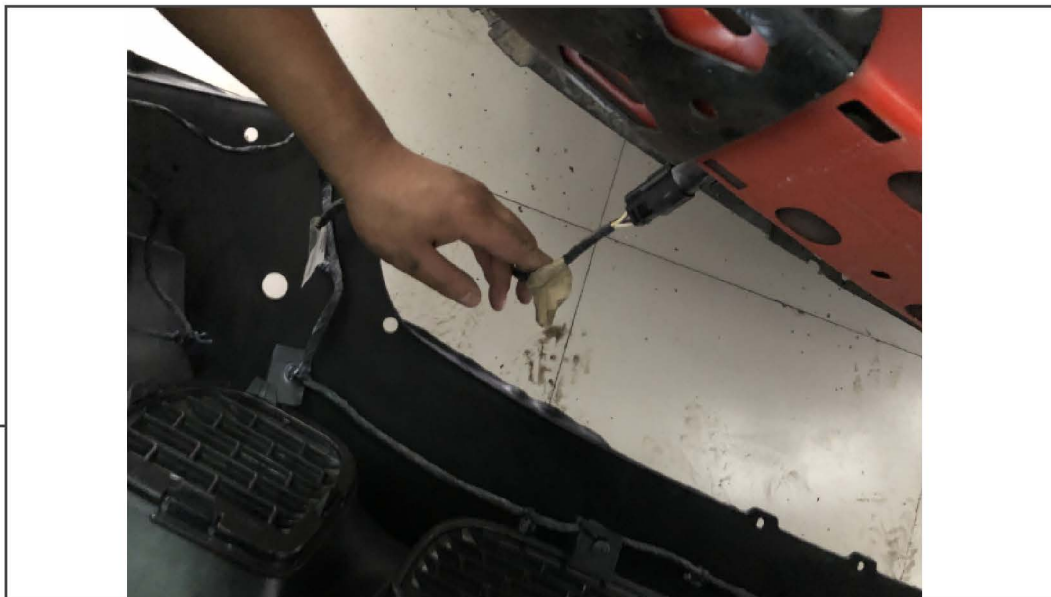

With a helper, reconnect the wiring harness and place the bumper cover on the vehicle.


STEP 12



Secure the bumper to the vehicle following Steps 1 through 7 in reverse order.

**Rear Fender
Install****STEP 13**

Begin by thoroughly cleaning the rear quarter panels and inner fender lip with automotive grade soap and water. Allow the panel time to completely dry. Use isopropyl alcohol to remove wax and grease from the mounting surfaces. **A clean surface is crucial for proper adhesion of double sided tape.

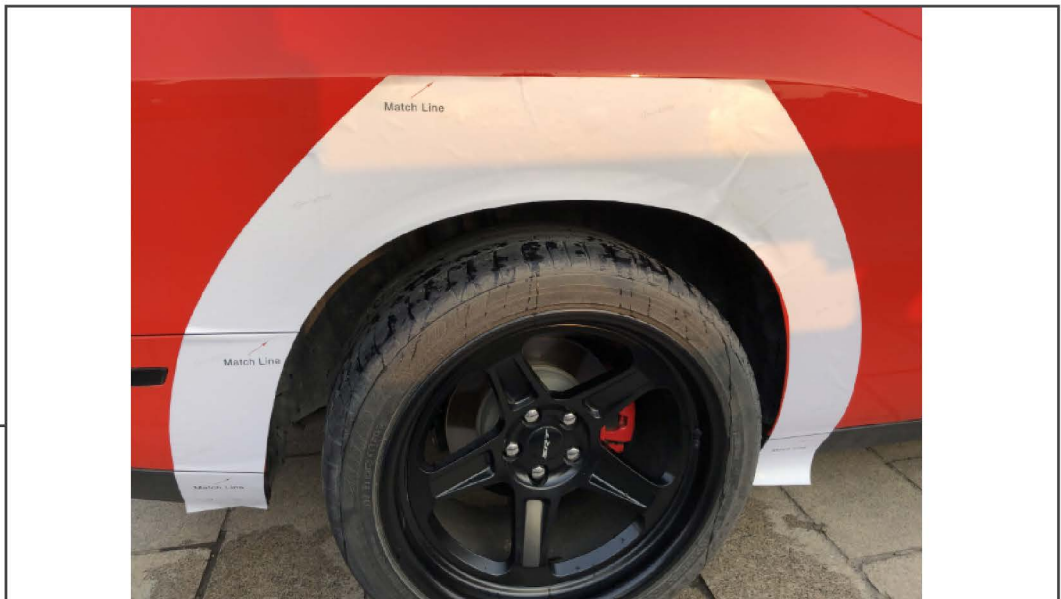STEP 14

Using the supplied drill templates, align the templates to the corresponding body lines. Mark the drilling locations for Step 3.

STEP 15



Using a 5/16" drill bit and drill, carefully drill the locations marked in Step 2.

STEP 16



Install the supplied clips onto the fender flares. Note the locations that require the yellow clips circled above. Use white clips in all other locations.

STEP 17



Install the supplied 3M double sided tape as shown above. **Note: Ambient air temperature needs to be above 50°F for proper tape adhesion.

STEP 18



Align the clips with the holes drilled in Step 3. Firmly press the flares onto the vehicle. Apply firm even pressure over the tape mounting locations to ensure proper adhesion.

**Front Flare
Install**

STEP 19




Follow the same process to clean the front fenders as you did the rear. Align the template to the vehicle and drill the 5/16" holes. Install the clips and tape to the fender flares.

STEP 20



Align the clips with the holes drilled in Step 1. Firmly press the flares onto the vehicle. Apply firm even pressure over the tape mounting locations to ensure proper adhesion.

STEP 21

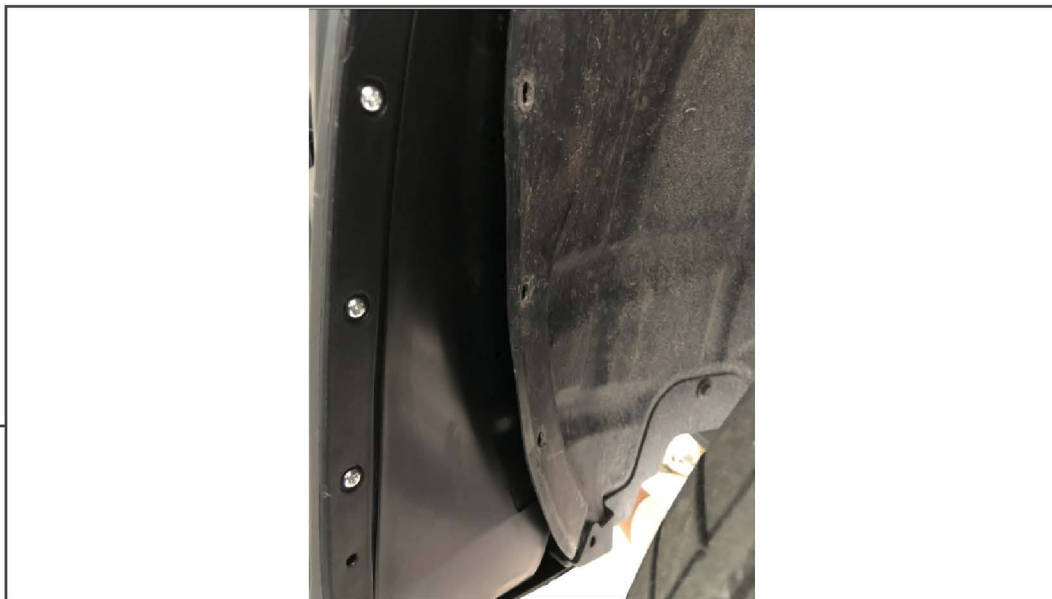

Install the splash shield extensions using the provided screws.

STEP 22



Install the fender liner extensions using the provided screws.



STEP 23

Installation is now complete.