



UPPER REPLACEMENT GRILLE

(2015-2023 CHARGER & CHARGER SRT)

(2017-2018 CHARGER RT 392)

(2019-2023 CHARGER GT & SCAT PACK)

(Excluding Widebody)

INSTALLATION INSTRUCTIONS

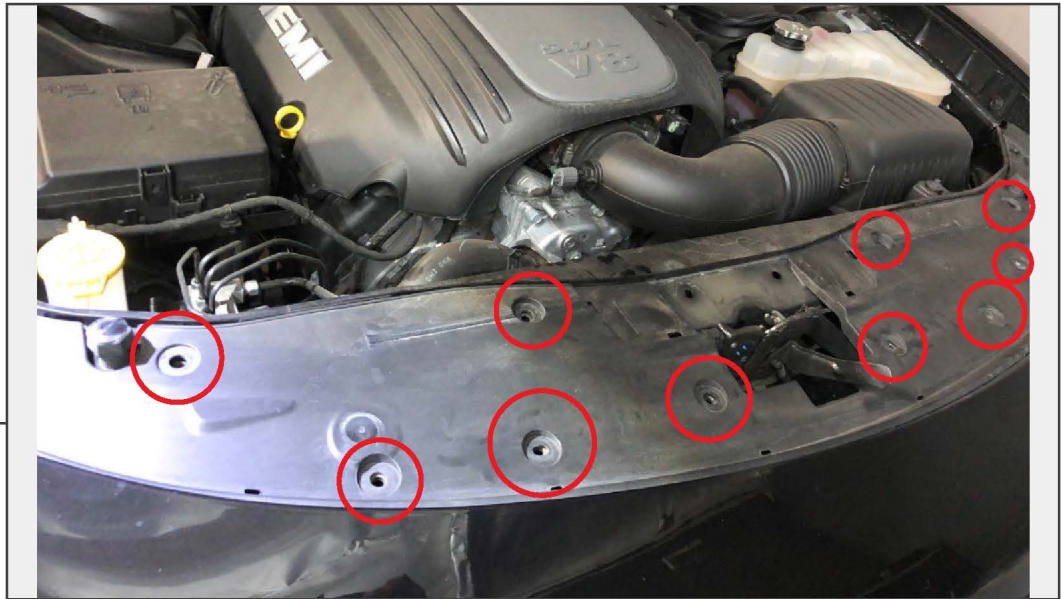
CONTENTS

(1) Upper Grille Assembly

TOOLS REQUIRED

10mm Wrench
7mm Socket
10mm Socket
Socket Wrench
Panel Removal Tool
Jack and Jack Stands

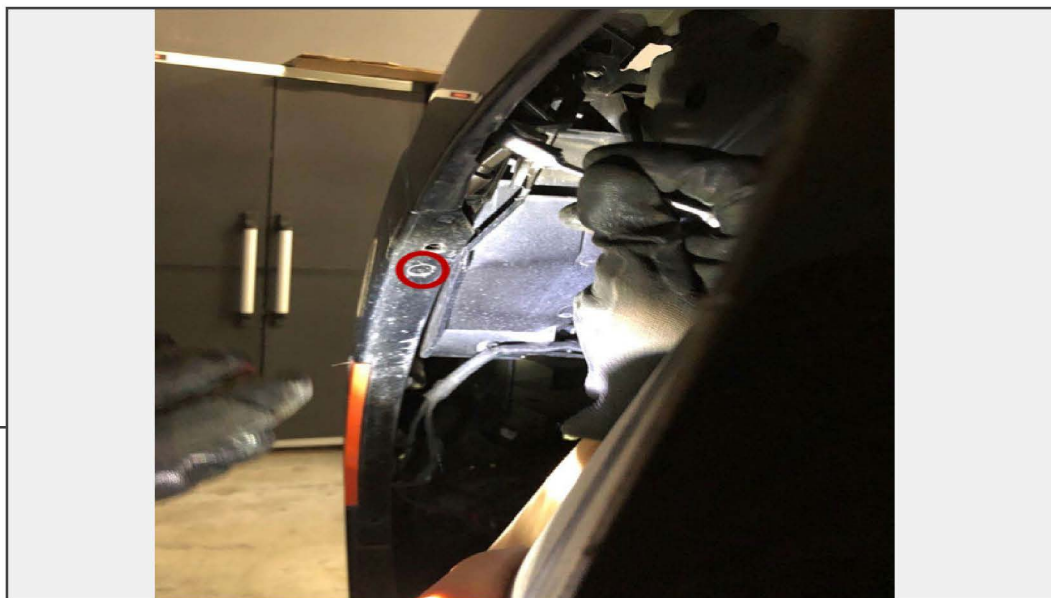
SKU # CR24373

STEP 1

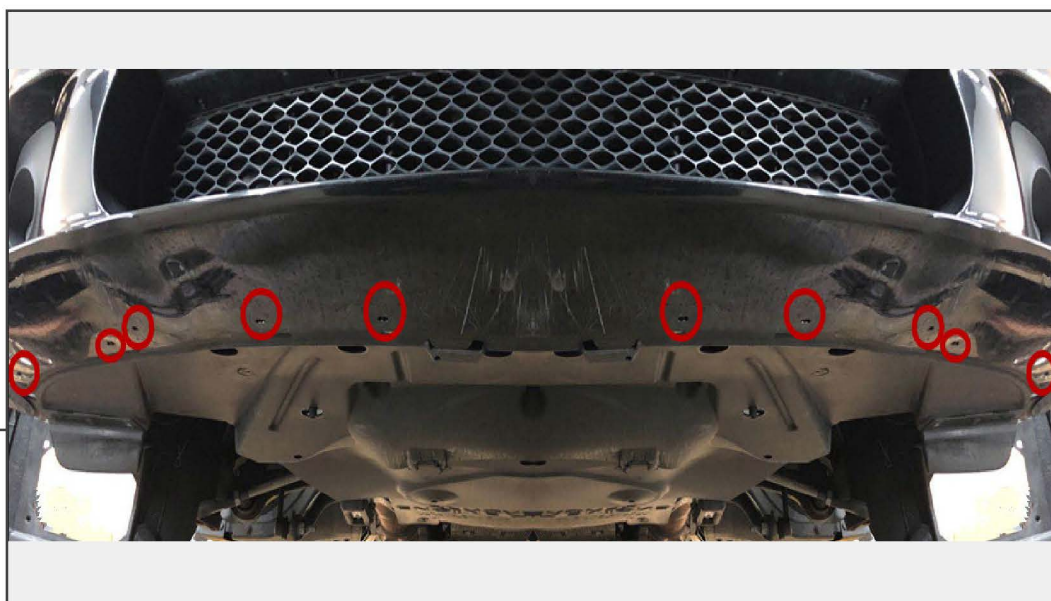
Using a jack and jack stands, support the vehicle off the ground. Using a panel removal tool, remove the (10) plastic push clips from the radiator cover. Remove the radiator cover from the vehicle.

STEP 2

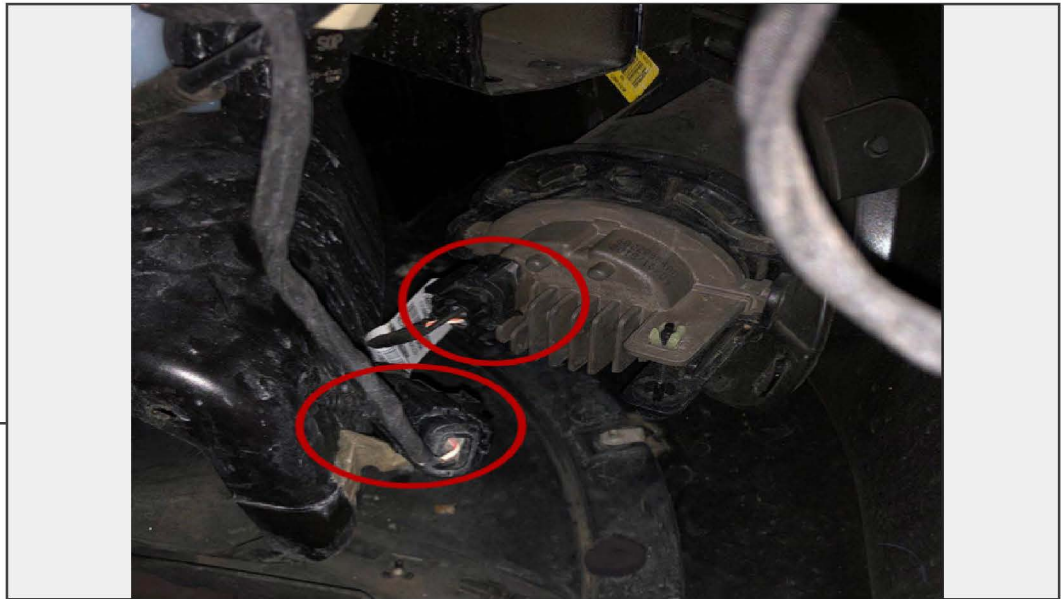
Remove (3) push clips from the fender liner behind the bumper. Repeat this procedure for the opposite side.

STEP 3

Pull the fender liner away, then remove (1) 7mm screw inside the bumper. Repeat this procedure for the opposite side.

STEP 4

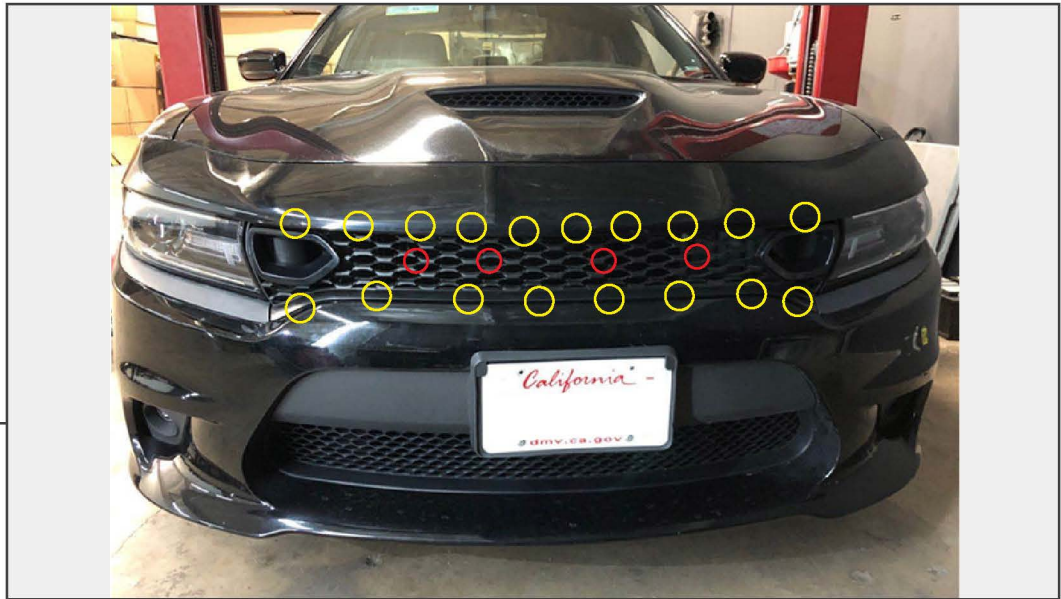
From under the vehicle, remove (10) 7mm bolts from underneath the bumper.

STEP 5

Unplug the side marker light and fog light harnesses. Slide the red locking tab back, then press down on the connector and slide the connector off the light. Repeat this procedure for the opposite side.

STEP 6

Remove (2) 10mm bolts from inside the bumper to release the bumper from the fender. Repeat this procedure for the opposite side.

STEP 7

Using a panel removal tool, remove (4) push clips behind the grille, then remove the grille by manipulating the (18) plastic tabs surrounding the grille. Install the new grille in reverse order of removal.

STEP 8

Re-assemble vehicle following steps 1-6 in reverse order.

Installation is now complete.