



CHIN SPOILER

(2015-2023 CHARGER SRT)

(2017-2018 CHARGER R/T 392)

(2019-02023 CHARGER GT & SCAT PACK)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Chin Spoiler
- (6) M6 Phillips Head Screw

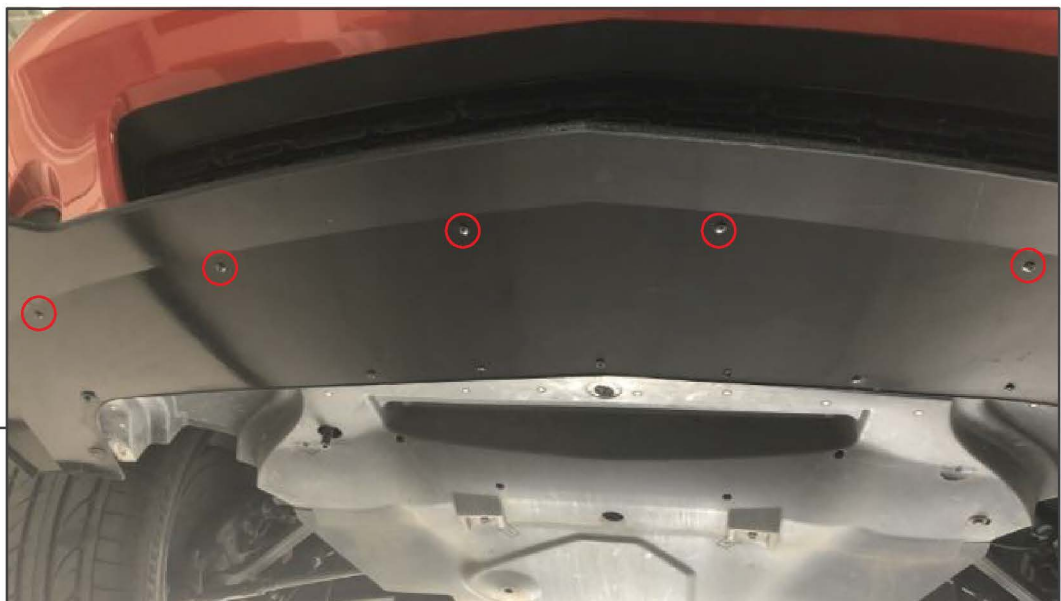
TOOLS REQUIRED

- 7mm Socket and Ratchet
- Phillips Head Screw Driver

SKU # CR4598

STEP 1

Using the 7mm socket and ratchet, remove the (11) factory screws.

STEP 2

Secure the new chin spoiler to the vehicle using the (11) factory screws in the factory locations removed in Step 1. Then, use the (6) provided screws to secure the chin spoiler to the factory lower valance.

STEP 3



Installation is now complete.