




30973 Santana St. Hayward CA 94544  
www.extremeonlinestore.com  
Tel: 1(669)-263-1011


CORVETTE C8

511


INSTALLATION MANUAL

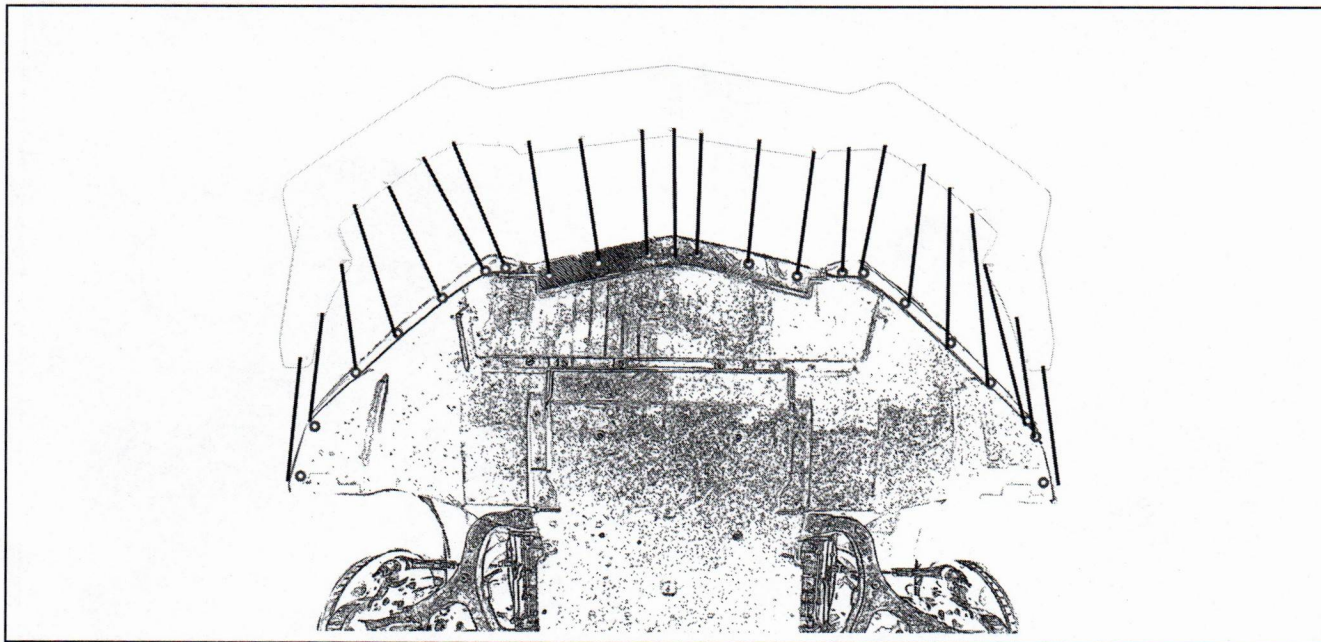

Reinstall OEM bolts from step 2 (we recommend to start from left to right). Install the screws but do not completely tighten them yet. Leave room for adjustments if needed

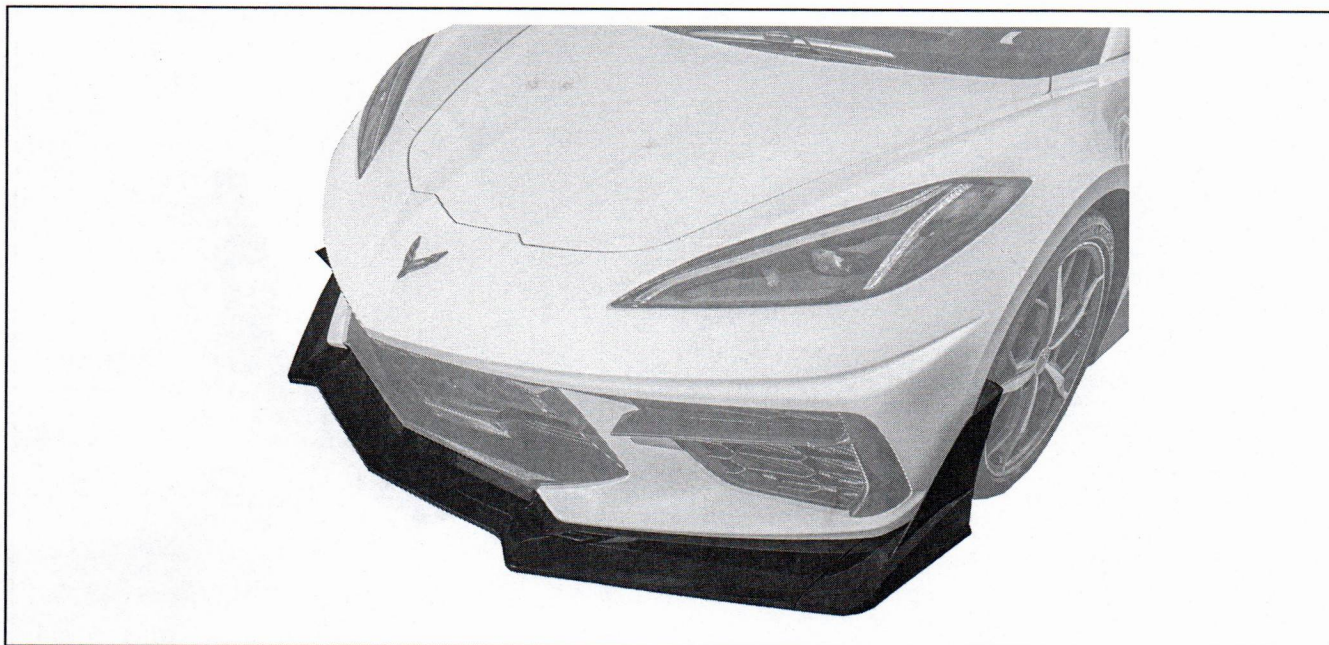


Do a visual inspection and make any final adjustment if necessary.

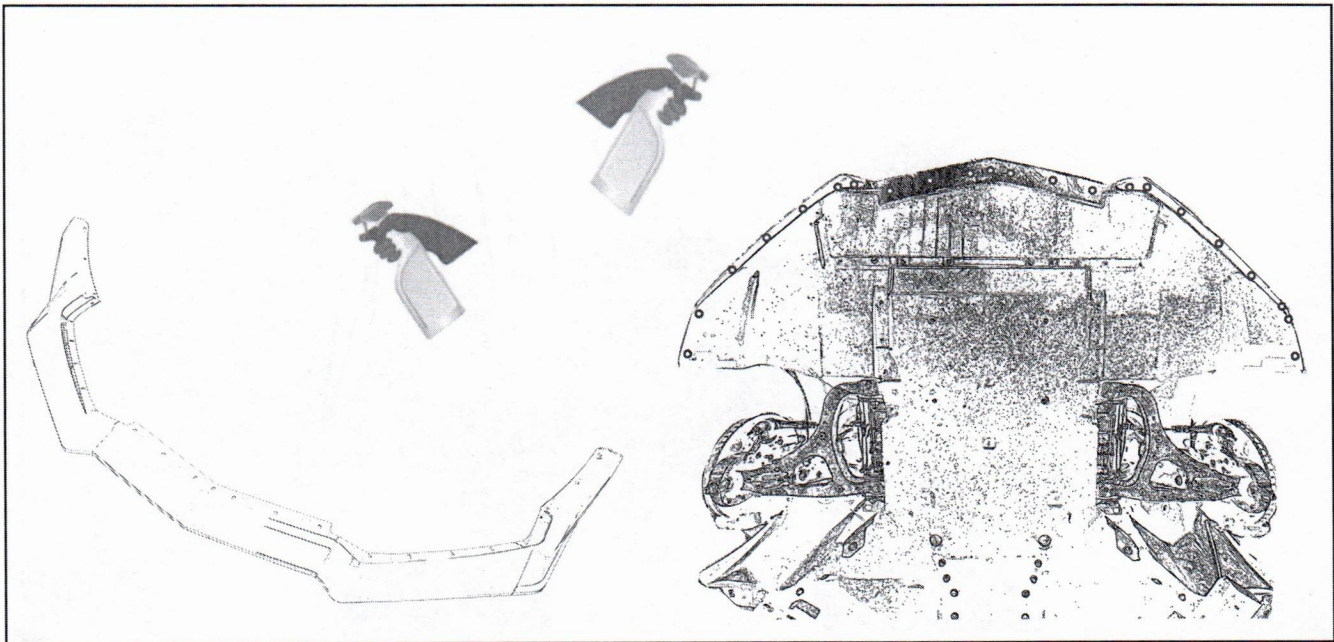

Clean the attaching surface on the car. Ensure the underside portion is free of debris and residue.




Attach the 3M Double Sided Tape onto the front lip, avoid covering the Pre-drilled holes with the Tape.

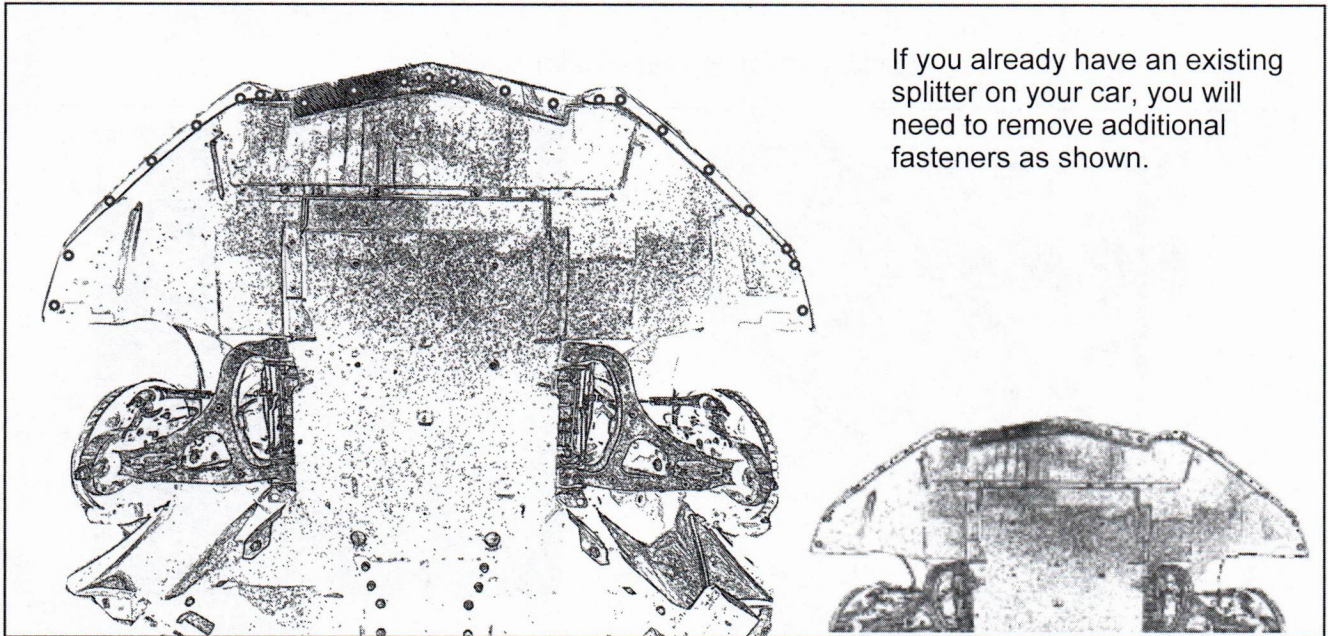

If you already have an existing splitter on your car, you will need to remove additional fasteners as shown.


Use a 7MM socket to remove all the bolts circled in picture

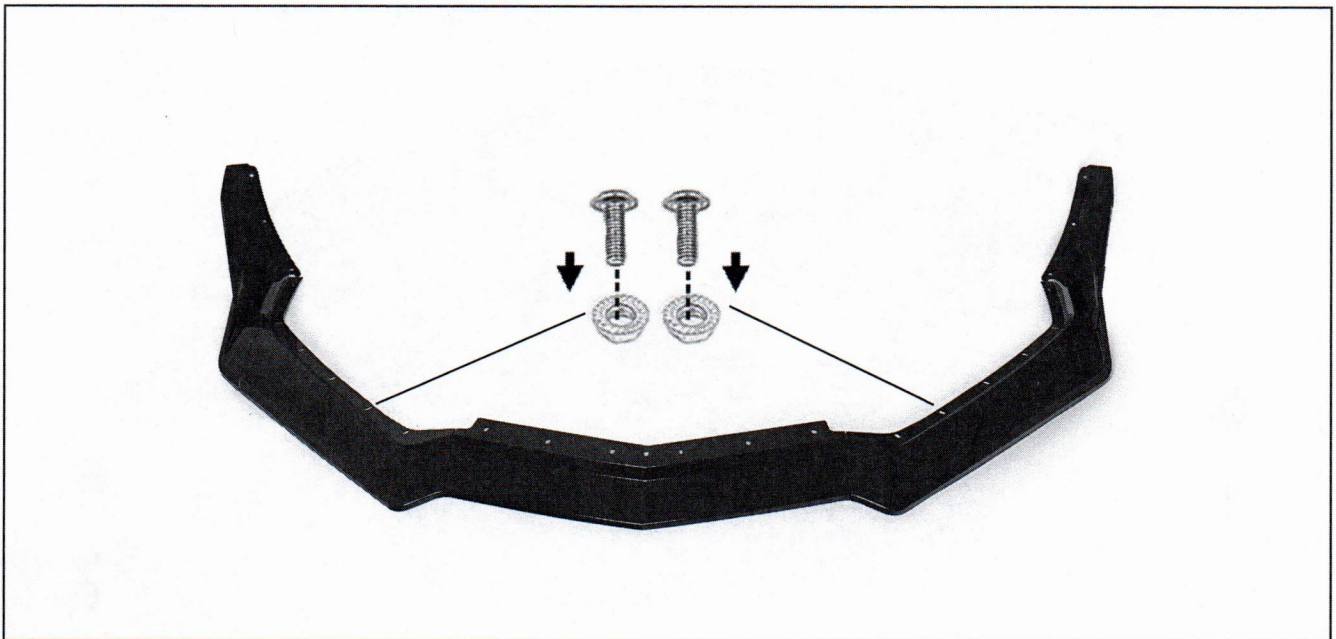


Use the nuts and bolts to connect the Lip




### Tips for protecting your lip after installation

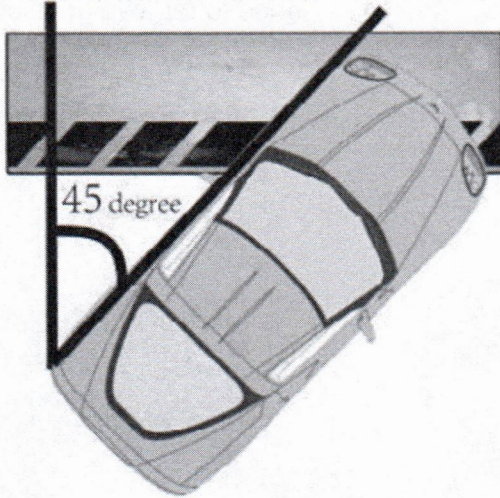

Take the approach at a 45 degree angle slowly when entering or leaving inclines/declines

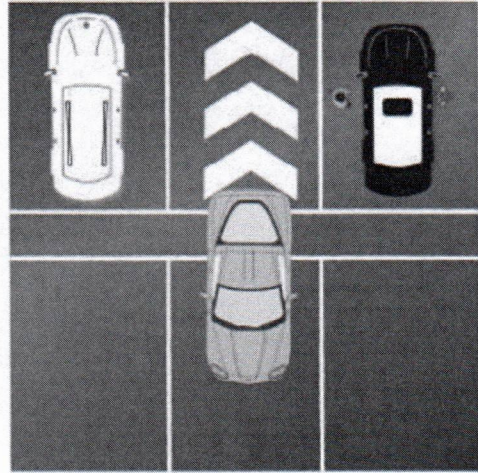

Always back up parking

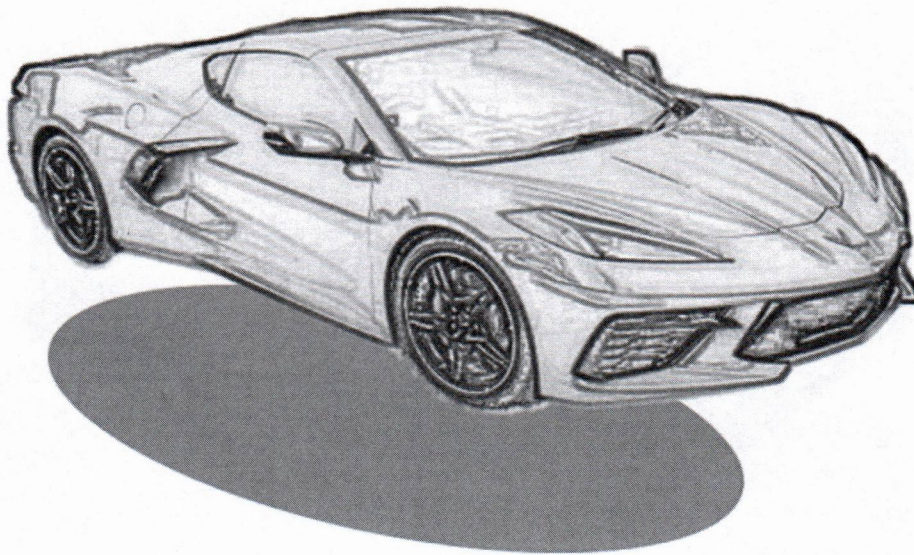

Lift up the vehicle to a comfortable working height



30973 Santana St. Hayward CA 94544  
www.extremeonlinestore.com  
Tel: 1(669)-263-1011


TOOLS

INSTALLATION MANUAL


**Nuts & Bolts  
(provided)**




**Auto Double-Sided Mounting Tape  
(provided)**

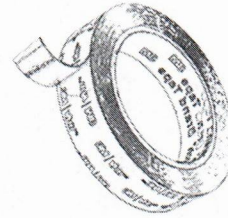


**Car Jack**

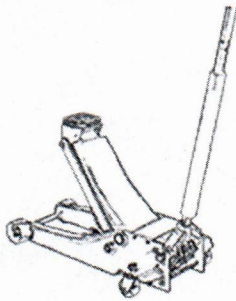

**Socket Wrench**

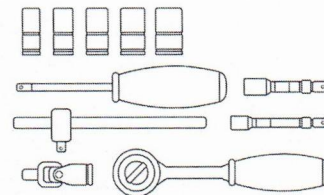


**Screw Driver**

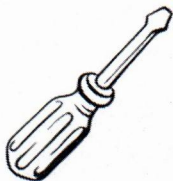

**Auto Cleaner**



**Impact Drive**

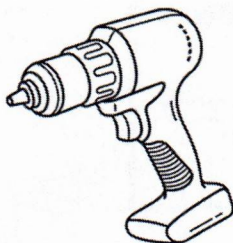




30973 Santana St. Hayward CA 94544  
www.extremeonlinestore.com  
Tel: 1(669)-263-1011

CORVETTE C8

511

INSTALLATION MANUAL

For 20-Up Corvette C8 | ZR1 Stage 3 Style GLOSSY BLACK Front Bumper Lip Splitter

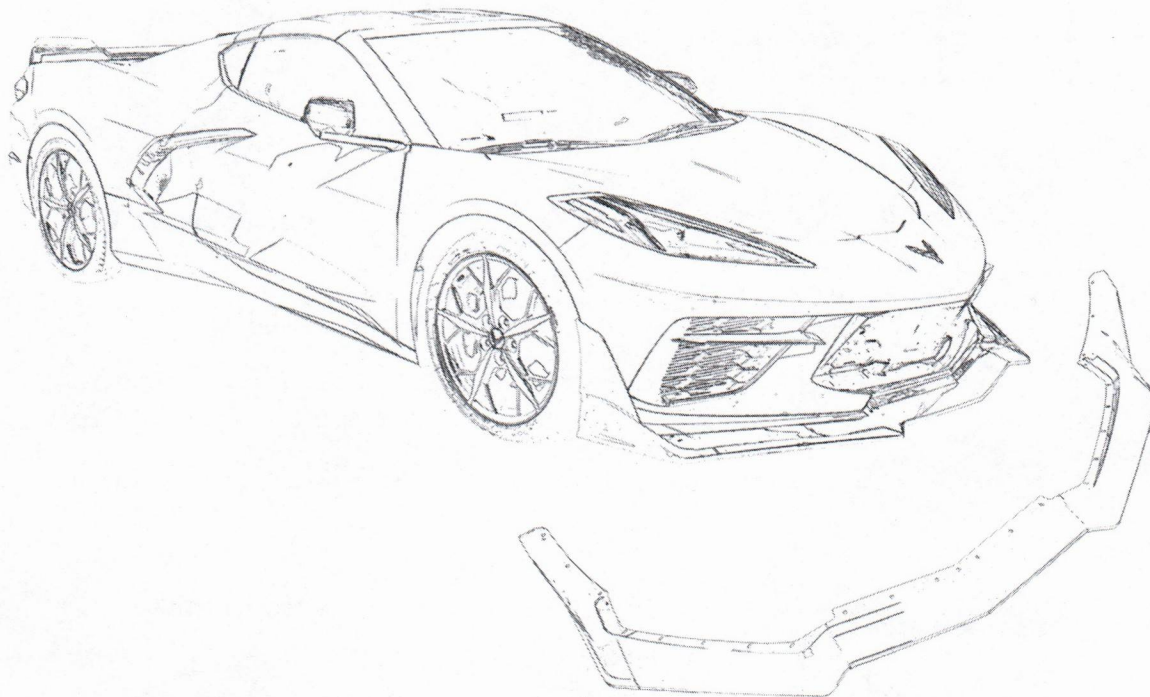

**WARNING!!! Please test fit the items before applying paint job.**

**We recommend 2 people for installation**