



REAR SPOILER

(2021+ MUSTANG MACH-E)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Rear Spoiler
- (2) Adhesion Promoter Pads


TOOLS REQUIRED

- Isopropyl Alcohol
- Microfiber Cloth



STEP 1

Clean the vehicle hatch using the included adhesion promoter prep pads, and allow to fully dry.

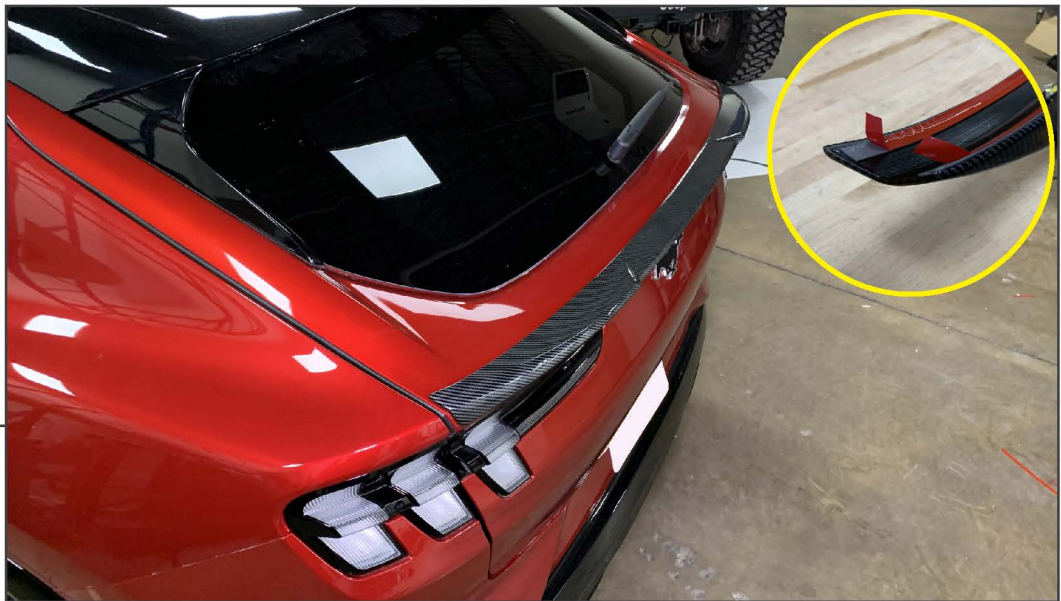

STEP 2

Test fit the spoiler to the vehicle hatch to familiarize fitment before removing the red tape backing. Once familiar, remove the red tape backing from the double sided tape, and adhere the spoiler to the vehicle. Firmly apply pressure to ensure proper adhesion.

Installation is now complete.