



---

# **BILLET ALUMINUM PEDAL COVERS**

(2021+ MUSTANG MACH-E)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

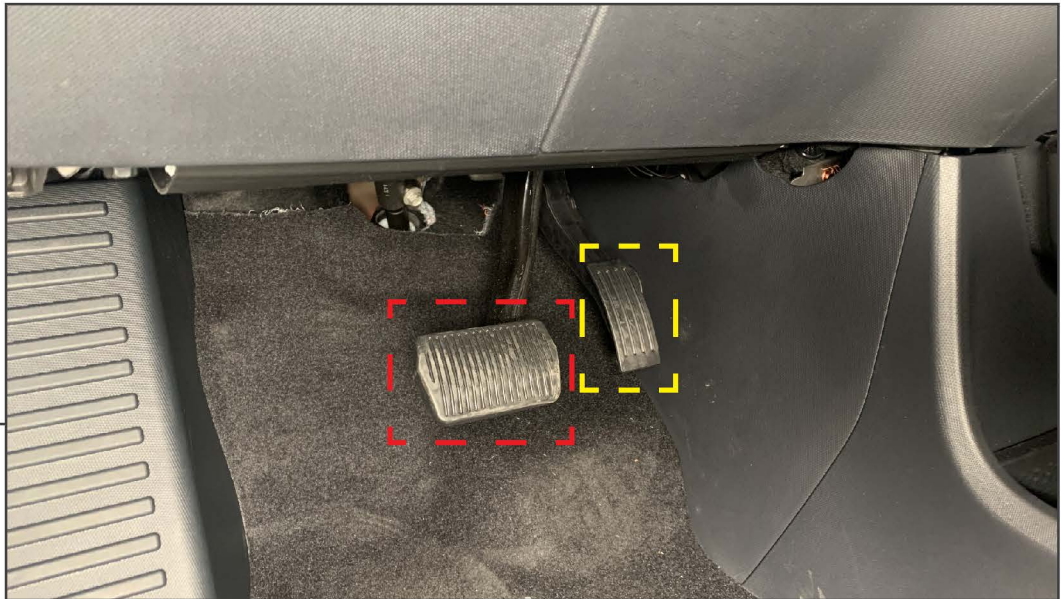
---

- (1) Brake Pedal Cover
- (1) Accelerator Pedal Cover

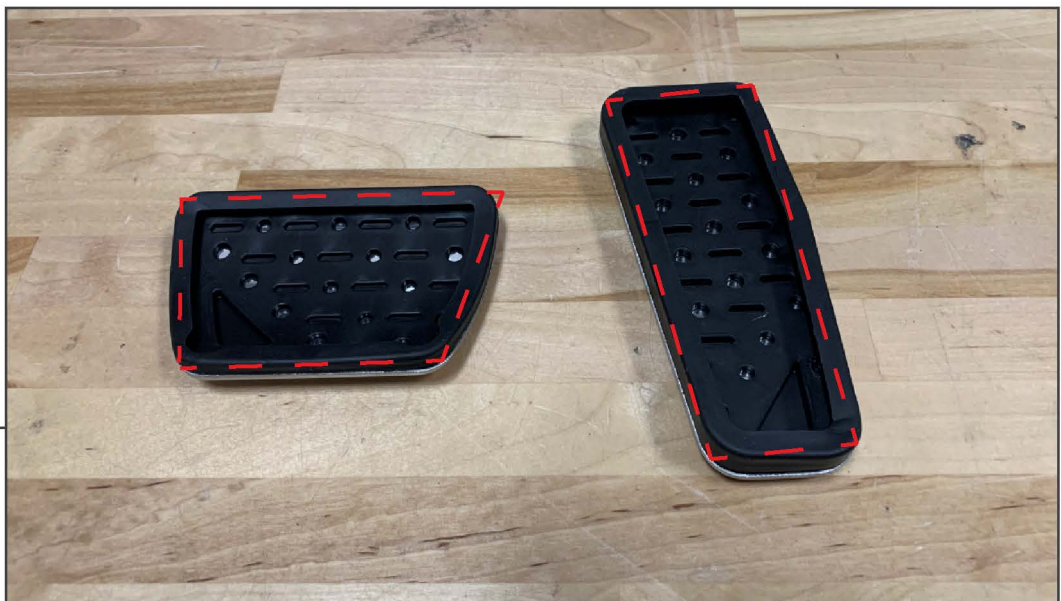
### TOOLS REQUIRED

---

- Heat Gun/Hot Water
- Multi-Purpose Cleaner
- Microfiber Cloth

**STEP 1**

Clean the accelerator pedal using multi-purpose cleaner. Remove the original brake pedal cover by peeling up the edge on all sides.

**STEP 2**

Using a heat gun, heat the rubber surrounding the billet pedal cover. While the cover is warm, apply the cover to the vehicle pedal. Be sure the rubber is fully surrounding the pedal.

Note: Hot water can be used in place of a heat gun. Allow the pedal cover to soak, then apply the cover to the pedal while the cover is warm. Be sure the rubber is fully surrounding the pedal.



---

**STEP 3**

Allow the pedal covers to cool to ensure the rubber grips the pedals.

Installation is now complete.