



REAR SPOILER

(2021+ MUSTANG MACH-E)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Spoiler Wing
- (1) RH Spoiler Wing
- (1) Rear Spoiler Base
- (2) Adhesion Promoter Pads

TOOLS REQUIRED

- Isopropyl Alcohol
- Microfiber Cloth




STEP 1

Clean the vehicle hatch using the included adhesion promoter prep pads, and allow to fully dry.



STEP 2

Place the spoiler panels on a soft surface. Clean the pedestals on each side of the spoiler base using adhesion promoter, and allow to fully dry. Adhere the spoiler wings to the base by peeling the tape backing and firmly pressing the wing into the base.

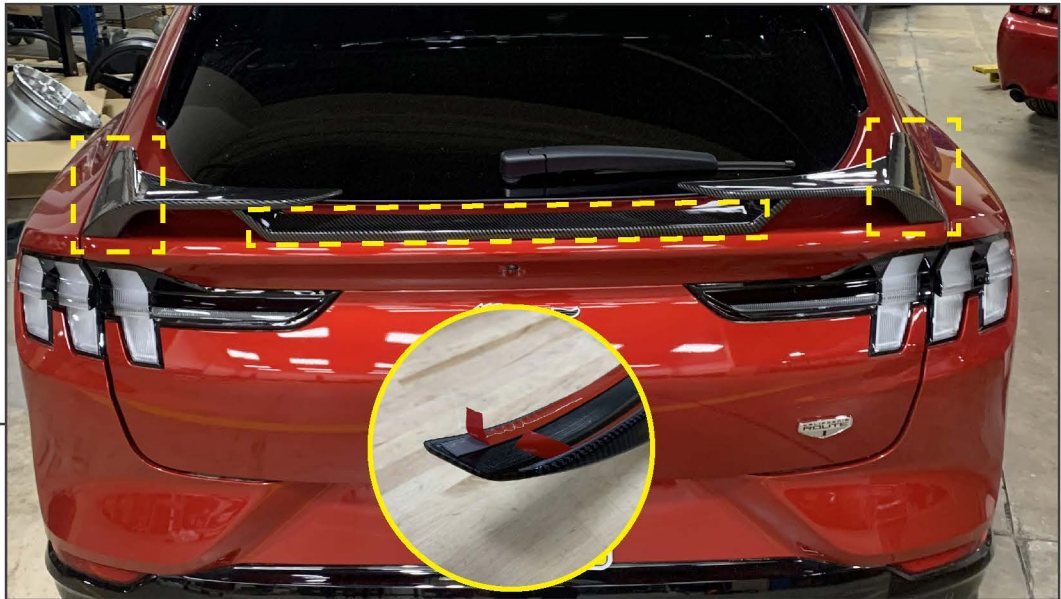

STEP 3

Align the spoiler assembly to the vehicle before removing the double sided tape, and familiarize the fitment to the vehicle. Once familiar, peel the tape backing and adhere the spoiler to the vehicle. Firmly press into the vehicle to ensure proper adhesion.



STEP 4

Installation is now complete.