



STEERING WHEEL TRIM

(2021+ MUSTANG MACH-E)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Upper Trim Panel
- (1) Lower Trim Panel
- (2) Adhesion Promoter Pads

TOOLS REQUIRED


N/A

STEP 1



Using the included adhesion promoter pads, clean the steering wheel along the designated areas.

STEP 2

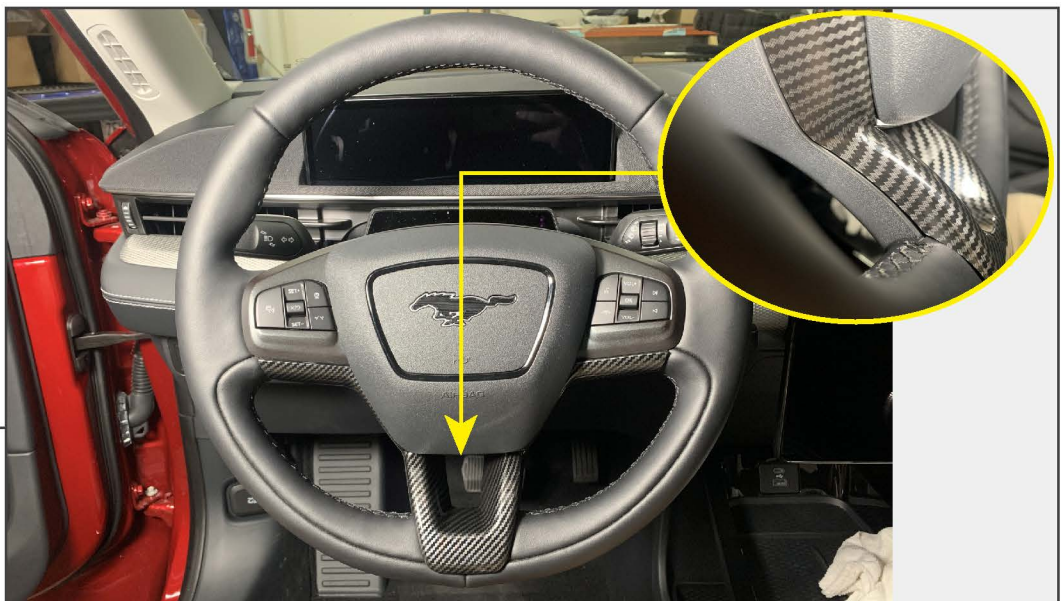

Lower Panel: Peel the red tape backing from the double sided tape. Gently spread the sides of the trim panel apart, and guide the middle of the trim panel under the airbag/horn button. Once under the airbag/horn button properly, firmly press the double sided tape to adhere the panel.



STEP 3

Upper Panel: Peel the red tape backing from the double sided tape. Align the trim panel to the top of the steering wheel, then firmly press the double sided tape to adhere the panel.

Installation is now complete.