



---

# 3-PIECE CHIN SPOILER

(2020-2022 MUSTANG MACH-E)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) LH Chin Spoiler Panel
- (1) Center Chin Spoiler Panel
- (1) RH Chin Spoiler Panel
- (15) Long Phillips Head Screws
- (6) Short Phillips Head Screws

### TOOLS REQUIRED

---

- 7mm Socket
- Ratchet
- Screw Gun / Drill

SKU # ME5679-ME5682



**STEP 1**

Place all contents on a soft workable surface. Assemble the (3) chin spoiler panels using (6) short Phillips head screws.




**STEP 2**

From under the vehicle, loosen the (1) 7mm screw in front of each front wheel. Do not remove the screws.



**STEP 3**

Align the notches in the chin spoiler to the previously loosened screws, and tighten the 7mm screws ensuring the screw washer is touching the chin spoiler.

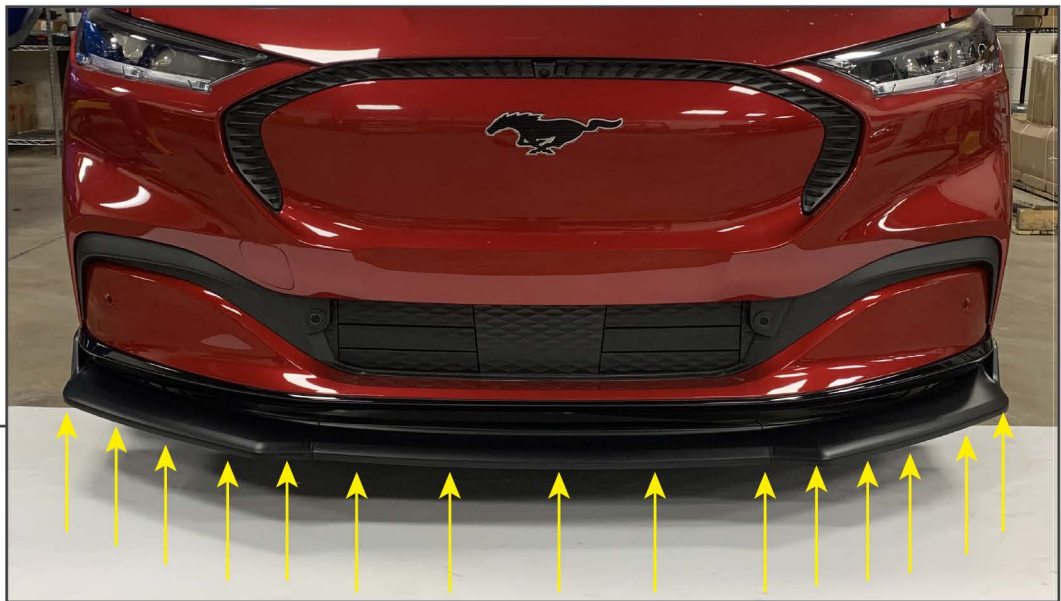

**STEP 4**

Along the bottom of the chin spoiler, locate the (15) punched spots, and secure the chin spoiler to the vehicle bumper using the (15) provided long Phillips head screws.



---

**STEP 5**

Installation is now complete.