



3-PIECE CHIN SPOILER

(2020-2022 MUSTANG MACH-E)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Chin Spoiler Panel
- (1) Center Chin Spoiler Panel
- (1) RH Chin Spoiler Panel
- (15) Long Phillips Head Screws
- (6) Short Phillips Head Screws

TOOLS REQUIRED

- 7mm Socket
- Ratchet
- Screw Gun / Drill

SKU # ME5679-ME5682



STEP 1

Place all contents on a soft workable surface. Assemble the (3) chin spoiler panels using (6) short Phillips head screws.




STEP 2

From under the vehicle, loosen the (1) 7mm screw in front of each front wheel. Do not remove the screws.



STEP 3

Align the notches in the chin spoiler to the previously loosened screws, and tighten the 7mm screws ensuring the screw washer is touching the chin spoiler.

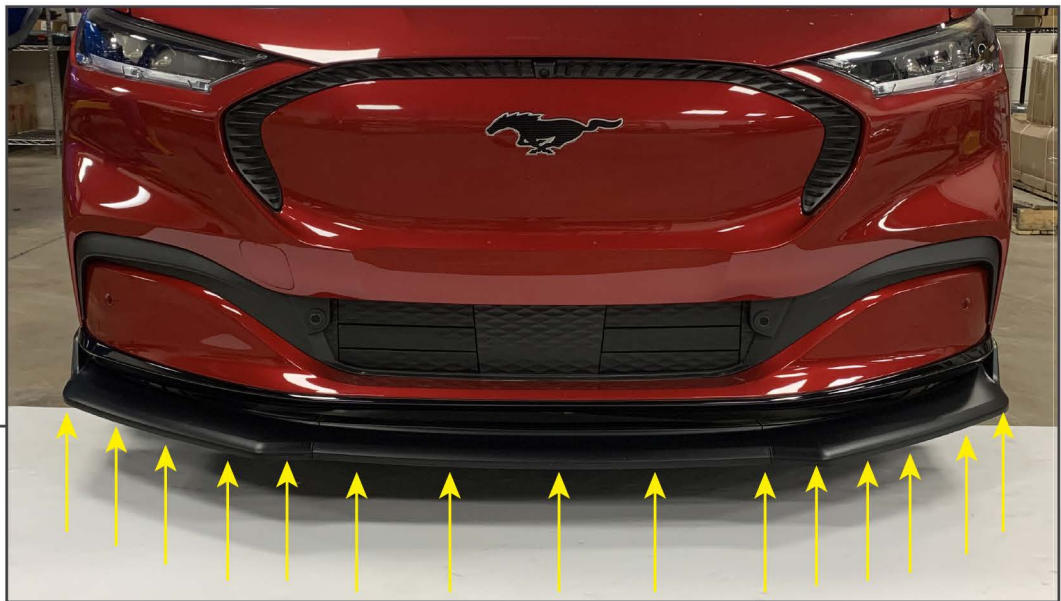

STEP 4

Along the bottom of the chin spoiler, locate the (15) punched spots, and secure the chin spoiler to the vehicle bumper using the (15) provided long Phillips head screws.



STEP 5

Installation is now complete.